

WAGO I/O System Field

8-Port IO-Link Master Class A; EtherNet/IP; 24 V DC; 2.0 A;
8 × M12 Connection

765-4501/100-000



© 2022 WAGO GmbH & Co. KG
All rights reserved.

WAGO GmbH & Co. KG

Hansastraße 27

D - 32423 Minden

Phone: +49 571/887 – 0

Fax: +49 571/887 – 844169

E-Mail:  info@wago.comInternet:  www.wago.com**Technical Support**

Phone: +49 571/887 – 44555

Fax: +49 571/887 – 844555

E-Mail:  support@wago.com

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail:  documentation@wago.com

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally protected by trademark or patent.

WAGO is a registered trademark of WAGO Verwaltungsgesellschaft mbH.

Table of Contents

Provisions	7
1.1 Intended Use	7
1.2 Typographical Conventions	8
1.3 Legal Information	10
Safety	11
2.1 General Safety Rules	11
2.2 Electrical Safety	11
2.3 Mechanical Safety	11
2.4 Thermal Safety	11
2.5 Indirect Safety	12
Overview	13
Properties	14
4.1 View	14
4.2 Connections	15
4.2.1 Power supply	15
4.2.2 Communication Interfaces	16
4.2.2.1 IO-Link (Master)	16
4.2.3 Network Connections	16
4.2.3.1 ETHERNET Interfaces	16
4.3 Circuit Diagram	17
4.4 Technical data	17
4.4.1 Product	17
4.4.2 Mechanical Data	17
4.4.3 Connection Technology	18
4.4.4 Power Supply	19
4.4.5 Electrical Safety	20
4.4.6 Environmental Conditions	20
4.4.7 Communication	21
4.5 Derating	22
4.6 Regulations and Standards	24
4.7 Approvals	24
Functions	25
5.1 Process Image	25
5.1.1 List of Connections	25
5.1.2 Input Process Data of Connections 1 to 4	25
5.1.3 Input Process Data of Connections 5 to 8	28
5.1.4 Input Process Data of Connections 9 to 12	31
5.1.5 Output Process Data of Connections 1 and 2	34
5.1.6 Output Process Data of Connections 3 and 4	38
5.1.7 Output Process Data of Connections 5 and 6	38

5.1.8	Output Process Data of Connections 7 and 8	42
5.1.9	Output Process Data of Connections 9 and 10	42
5.1.10	Output Process Data of Connections 11 and 12	45
5.1.11	Port Qualifier Information	46
5.2	Forcing	46
5.3	Monitoring Functions	47
5.4	Overload protection	47
5.5	Parameterization Tools	48
5.5.1	Overview	48
5.5.2	WAGO IO-Link Configurator	50
5.5.3	WAGO Webserver I/O Field	50
5.5.4	WAGO I/O Field app	52
5.6	Communication Interfaces	53
5.6.1	EtherNet/IP	53
5.6.2	OPC UA Server	53
Planning		54
6.1	Structure Guidelines	54
6.1.1	Data Security	54
6.1.2	EMC Installations	54
6.2	Power Supply Concept	55
6.2.1	Design Power Supply	55
6.2.2	Requirements on the Power Supply	59
6.2.3	Additional Measures	60
6.2.4	Power Supply Examples	60
6.3	Settings Options	64
6.3.1	Module Parameters	64
6.3.1.1	“Port Cycle Time” Parameter	67
Transport and Storage		68
Installation and Removal		69
8.1	Installation	69
8.1.1	Tools Required for Installation	69
8.1.2	Before Installation	69
8.1.3	Installation Instructions	69
8.1.4	Note on Protecting against Heat Generation by the Product	70
8.1.5	Installation Distances	70
8.1.6	Installation	70
8.1.7	After Installation	70
8.1.8	Grounding	71
8.2	Removal	71
8.2.1	Tools Required for Removal	71
8.2.2	Before Removal	71
8.2.3	Removal	71
8.2.4	After Removal	71
Connection		72

9.1	General Information on Installation	72
9.2	Connect Power Supply	73
9.3	Connecting Cables	75
9.4	Connecting the Fieldbus	76
9.5	Connect Sensors/Actuators	77
	Commissioning	81
10.1	Getting the IP Address from a DHCP Server	81
10.2	Configuration	82
10.2.1	Configuring the Module via EtherNet/IP	82
10.2.1.1	Selecting the Module	82
10.2.1.2	Selecting a Connection	82
10.2.1.3	Setting Parameters	84
10.3	Parameterization	84
10.3.1	WAGO Webserver I/O Field	85
10.3.1.1	Call WAGO Webserver I/O Field	85
10.3.1.2	User Interface of the WAGO Webserver I/O Field	85
10.3.1.2.1	Maintenance Information	86
10.3.1.2.2	Advanced Module and Port Information	86
10.3.1.2.3	Displaying Licenses	86
10.3.1.3	Opening the Product Information via WAGO Webserver I/O Field	86
10.3.1.3.1	Displaying Port Information	86
10.3.1.3.2	Displaying Measured Values and Information on Connected IO-Link Devices	87
10.3.1.3.3	Displaying Port Status Information	89
10.3.1.3.4	State	90
10.3.1.3.5	Quality	90
10.3.1.3.6	Revision ID	90
10.3.1.3.7	Baud Rate	90
10.3.1.3.8	Cycle Time	91
10.3.1.3.9	Input Data Length	91
10.3.1.3.10	Output Data Length	91
10.3.1.3.11	Vendor ID	91
10.3.1.3.12	Device ID	91
10.3.1.3.13	Displaying Process Data	91
10.3.1.4	Parameterizing the Module via the WAGO I/O Field Webserver	92
10.3.1.4.1	Accessing a Connected IO-Link Device	92
10.3.1.4.2	Configure Ports	95
10.3.1.4.3	Configuring IP Parameters	99
10.3.1.4.4	Storing Maintenance Information	100
10.3.1.4.5	Updating Firmware	101
10.3.1.4.6	Resetting the Module to the Factory Settings	103
10.3.1.4.7	Configure Bluetooth	104
10.3.1.4.8	Logging Users on and off and Managing Them	106
10.3.1.4.9	Forcing Digital Inputs and Outputs	109
10.3.1.4.10	Forcing for IO-Link Ports	111
10.3.2	WAGO IO-Link Configurator	112
10.3.3	WAGO I/O Field app	112
10.3.3.1	Parameterizing a Module with the WAGO I/O Field App	112
10.3.4	OPC UA Server	112
10.3.4.1	Parameterizing the Product via OPC UA	113
10.3.4.1.1	Identifying Devices	113
10.3.4.1.2	Setting Device Parameters	114
10.3.4.1.3	Setting Port Parameters	114
10.3.4.1.4	Reading Port Process Values	115

10.3.4.1.5	Reading Measured Power Values	116
10.3.4.1.6	Reading out Diagnostic Information.....	117
10.3.4.1.7	Reading Statistics	117
10.3.4.1.8	NTP Client Configuration	119
10.3.4.1.9	I/O Forcing via OPC UA.....	119
10.3.4.1.10	Using OPC UA Client.....	120
10.3.4.2	Reading and Writing Parameters of an IO-Link Device	136
10.3.4.3	Setting the Module Time.....	137
Diagnostics		138
11.1	Diagnostics via Indicators.....	138
11.2	Diagnostics via EtherNet/IP.....	141
11.2.1	Error Codes (CIP Status)	141
11.3	Diagnostics via IO-Link.....	144
Service		147
12.1	Resetting to Factory Settings	147
12.2	Updating Firmware	147
Decommissioning		148
13.1	Disposal and Recycling	148
Appendix		149
14.1	Objects	149
14.1.1	Event Log Object 65 (0x41).....	149
14.1.2	IO-Link Port Configuration – Object 128 (0x80)	151
14.1.3	IO-Link Port Configuration – Object 129 (0x81)	153
14.1.4	IO-Link Port Identification – Object 130 (0x82)	155
14.1.5	IO-Link Device Parameters – Object 131 (0x83).....	156
14.2	Installation Regulations Specified by Approvals	159
14.3	Operational Description.....	160
14.4	Protected Rights.....	163

Provisions

This document applies to the following product:

 **765-4501/100-000** (8 PORT IOL-A FLD EI 24 VDC 2.0 A) 8-Port IO-Link Master Class A; EtherNet/IP; 24 V DC; 2.0 A; 8 × M12 Connection

Product detail page

 www.wago.com/765-4501/100-000

The product must only be installed and operated in accordance with the operating instructions. Knowledge of the operating instructions is required for proper use. You can find all documents and information on the detailed product page.

Additional document

-  **WAGO IO-Link Configurator**

1.1 Intended Use

The product 765-4501/100-000 is used to capture field signals on sensors, actuators and hubs which have been sent or received by a higher-level controller and output them via IO-Link.

The product works as a decentralized input/output unit in EtherNet/IP und ETHERNET TCP/IP networks.

- This product is intended for installation in automation technology systems.
- The product is intended for indoor and outdoor use.
- Operation of the products in industrial area is permitted.
- Operation of the product in other application areas is only permitted when corresponding approvals and labeling are present.

Improper Use

Improper use of the product is not permitted. The following cases in particular constitute improper use:

- Non-observance of the intended use
- Use without protective measures in an environment in which salt water, salt spray mist, icing, corrosive fumes, explosive gases, direct sunlight and ionizing radiation can occur
- Use of the product in areas with special risk that require continuous fault-free operation and in which failure of or operation of the product can result in an imminent risk to life, limb or health or cause serious damage to property or the environment (such as the operation of nuclear power plants, weapons systems, aircraft and motor vehicles)

Warranty and Liability

The terms set forth in the General Business and Contract Conditions for Delivery and Service of WAGO GmbH & Co. KG and the terms for software products and products with integrated software stated in the WAGO Software License Contract – both available at

 www.wago.com – shall apply. In particular, the warranty is void if:

- The product is improperly used.
- The deficiency (hardware and software configurations) is due to special instructions.

- Modifications to the hardware or software have been made by the user or third parties that are not described in this documentation and that has contributed to the fault.

Individual agreements always have priority.

Obligations of Installers/Operators

The installers and operators bear responsibility for the safety of an installation or a system assembled with the products. The installer/operator is responsible for proper installation and safety of the system. All laws, standards, guidelines, local regulations and accepted technology standards and practices applicable at the time of installation, and the instructions in the the products' Instructions for Use, must be complied with. In addition, the Installation regulations specified by Approvals must be observed. In the event of non-compliance, the products may not be operated within the scope of the approval.

1.2 Typographical Conventions

Number Notation

100	Decimals: Normal notation
0x64	Hexadecimals: C-notation
'100'	Binary: In single quotation marks
'0110.0100'	Nibbles separated by a period

Text Formatting

<i>italic</i>	Names of paths or files
bold	Menu items, entry or selection fields, emphasis
Code	Sections of program code
>	Selection of a menu point from a menu
"Value"	Value entries
[F5]	Identification of buttons or keys

Cross References / Links

	Cross references/links to a topic in a document
	Cross references / links to a separate document
	Cross references / links to a website
	Cross references / links to an email address

Action Instructions

- ✓ This symbol identifies a precondition.
- 1. Action step
- 2. Action step
 - ⇒ This symbol identifies an intermediate result.
 - ⇒ This symbol identifies the result of an action.

Lists

- Lists, first level
 - Lists, second level

Figures

Figures in this documentation are for better understanding and may differ from the actual product design.

Notes

DANGER

Type and source of hazard

Possible consequences of hazard that also include death or irreversible injury

- Action step to reduce risk

WARNING

Type and source of hazard

Possible consequences of hazard that also include severe injury

- Action step to reduce risk

CAUTION

Type and source of hazard

Possible consequences of hazard that include at least slight injury

- Action step to reduce risk

NOTICE

Type and source of malfunction (property damage only)

Possible malfunctions that may restrict the product's scope of functions or ergonomics, but do not lead to foreseeable risks to persons

- Action step to reduce risk

Note

Notes and information

Indicates information, clarifications, recommendations, referrals, etc.

1.3 Legal Information

Intellectual Property

Unless barred by applicable legal provisions, unauthorized copying and distribution of this document, as well as the use and communication of its content are strictly prohibited unless expressly authorized by prior agreement. Third-party products are always mentioned without any reference to patent rights. WAGO GmbH & Co. KG, or for third-party products, their manufacturer, retain all rights regarding patent, utility model or design registration.

Third-party trademarks are referred to in the product documentation. The “®” and “TM” symbols are omitted hereinafter. The trademarks are listed in the Appendix:  **Protected Rights [► 163]**.

Subject to Change

The instructions, guidelines, standards, etc., in this manual correspond to state of the art at the time the documentation was created and are not subject to updating service. The installer and operator bear sole responsibility to ensure they are complied with in their currently applicable form. WAGO GmbH & Co. KG retains the right to carry out technical changes and improvements of the products and the data, specifications and illustrations of this manual. All claims for change or improvement of products that have already been delivered – excepting change or improvement performed under guarantee agreement – are excluded.

Licenses

The products may contain open-source software. The requisite license information is saved in the products. This information is also available under:  **www.wago.com**.

Safety

2.1 General Safety Rules

- This documentation is part of the product. Therefore, retain the documentation during the entire service life of the product. Pass on the documentation to any subsequent user of the product. In addition, ensure that any supplement to this documentation is included, if necessary.
- The product must only be installed and put into operation by qualified electrical specialists per EN 50110-1/-2 and IEC 60364.
- Comply with the laws, standards, guidelines, local regulations and accepted technology standards and practices applicable at the time of installation.

2.2 Electrical Safety

Power Supply

- Only operate the product with safe extra low voltage power sources (PELV or SELV).
- Connecting impermissible current or frequency values may destroy the product.

Grounding/Protection/Fuses

- Connect the product and system to functional ground (FE).
- When handling the product, please ensure that environmental factors (personnel, work space and packaging) are properly equalized. Do not touch any conducting parts.

Cables

- Maintain spacing between control, signal and data lines and the power supply lines.
- Only use conductor cross-sections sufficient for the current load.

Protection

- When working on the system (e.g., during maintenance), protect the facility part in question from accidental or unauthorized restart.

2.3 Mechanical Safety

- Cooling of the product must not be impaired. Ensure air can flow freely and that the minimum clearances from adjacent products/areas are maintained.
- Before startup, please check the product for any damage that may have occurred during shipping. Do not put the product into operation in the event of mechanical damage.

2.4 Thermal Safety

- The surface of the housing heats up during operation. Under special conditions (e.g., in the event of a fault or increased surrounding air temperature), touching the product may cause burns. Allow the product to cool down before touching it.
- If the surface temperature of the product can exceed 55 °C, wear protective gloves and attach protective covers and/or touch-proof protection.

2.5 Indirect Safety

- Only use a dry or cloth or a clothed dampened with water to clean the product. Do not use cleaning agents, e.g., abrasive cleaners, alcohols or acetone.
- Do not allow the product to come into contact with ketones (e.g., acetone) or chlorinated hydrocarbons (e.g., dichloromethane) under any circumstances.
- Do not use hard objects that could cause scratches for cleaning.
- Clean tools and materials are imperative for handling the product.
- If automation solutions are implemented that can cause personal injury or major property damage in the event of failure, you must take appropriate measures to ensure that the system remains in a safe operating state even in the event of failure.
- Before installation and operation, please read the product documentation thoroughly and carefully. In addition, note the information on the product housing and further information, e.g. at www.wago.com/<item number>.
- Only permit skilled personnel approved by WAGO to perform repair work.

Overview

The product is part of the WAGO I/O System Field 765. It is intended for industrial use within an ETHERNET network and communicates with a central controller and/or directly with the control level, if necessary. Several sensors/actuators can be connected to the product for connection in the field level. The product electronics are protected from environmental influences by the completely encapsulated product housing.

The product has a metal housing and is suitable for screw mounting on a carrier.

Function Overview

- ETHERNET TCP/IP communication to the higher-level controller
 - Cyclic I/O data
 - Configuration and parameterization via EtherNet/IP
- Bluetooth® interface for diagnostics and configuration using the WAGO I/O Field app and a mobile device
- WAGO I/O Field Webserver: Integrated Webserver with the configuration, parameterization, diagnostic, testing and firmware update functions
- Forcing function: Forcing output signals, simulating input signals
- Measured values by channel:
 - Output and supply current
 - Supply voltage
 - Temperature measurement
- Monitoring functions by channel:
 - Maximum current
 - Over and undervoltage
 - Over and undertemperature
 - Line break detection
- Total current monitoring
- Protective functions: Shutdown of the switching or supply outputs if the maximum current at a pin is exceeded
- Integrated OPC UA server in compliance with “IO-Link Companion Specification” expanded to include diagnostic functions
- 8 ports
 - IO-Link Master Class A
 - Pin 4 can be configured as an IO-Link Master, digital input or digital output
 - Pin 2 can be configured as a digital input or digital output

Properties

4.1 View

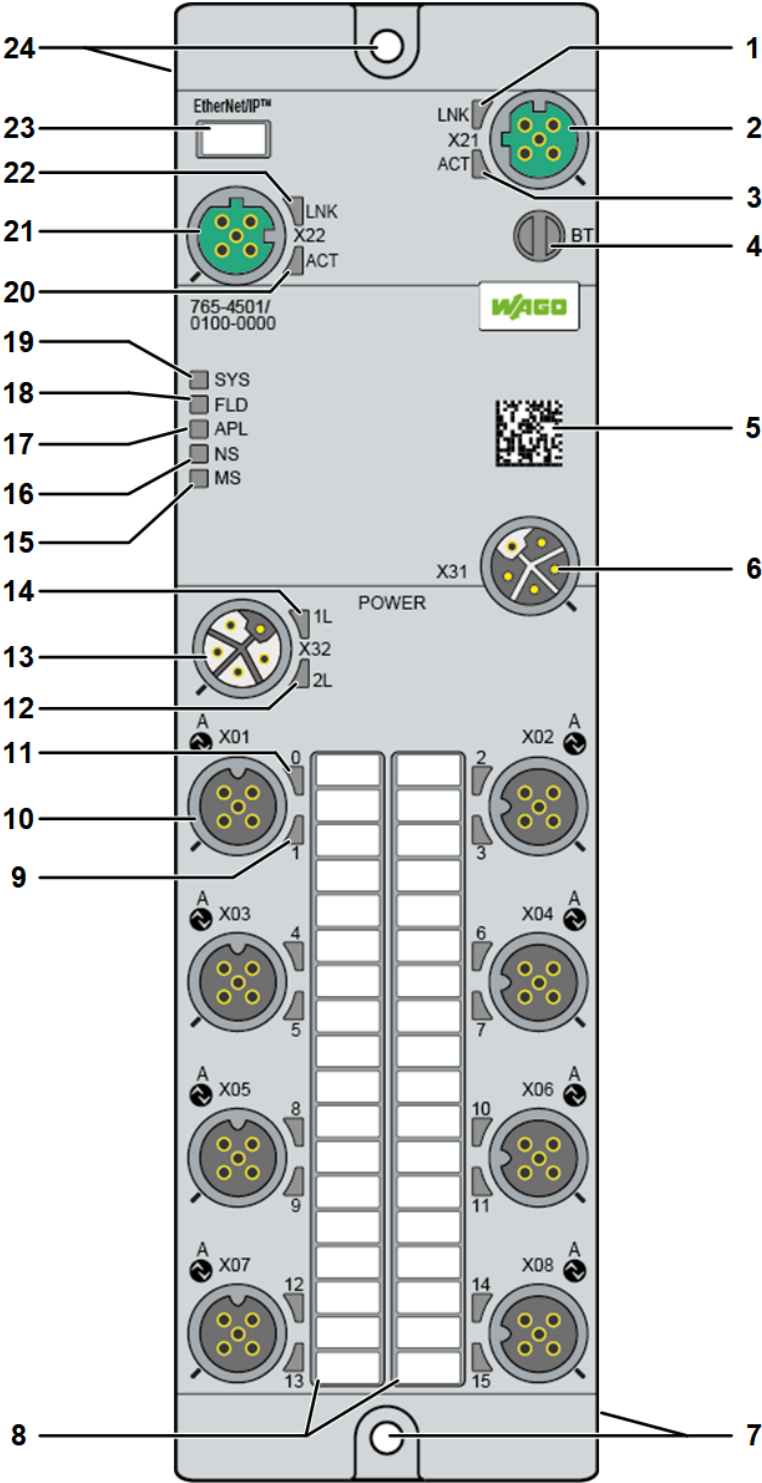


Figure 1: View

Table 1: Legend for “View” Figure

Function	Position	Custom Name	Description
ETHERNET	2	X21	ETHERNET interface, M12, D-coded, EtherNet/IP port 1

Function	Position	Custom Name	Description
	1	LNK (X21)	Link LED for port X21
	3	ACT (X21)	Activity LED for port X21
	21	X22	ETHERNET interface, M12, D-coded, EtherNet/IP port 2
	22	LNK (X22)	Link LED for port X22
	20	ACT (X22)	Activity LED for port X22
Bluetooth®	4	BT	Bluetooth® antenna, including Bluetooth® LED
Indicators	19	SYS	System LED
	18	FLD	Field LED
	17	APL	Application LED
	16	NS	EtherNet/IP network status LED
	15	MS	EtherNet/IP module status LED
Identification	5	-	Data Matrix Code (DM Code) Contains the serial number of the module (UII)
Supply voltage	6	X31	Power supply input (Power In)
	13	X32	Power supply output (Power Out)
	14	1L (X32)	1L power supply LED (24 VDC)
	12	2L (X32)	2L power supply LED (24 VDC)
IO-Link Class A	10	X01 ... X08	IO-Link port, ports X01 X08, M12, A-coded
	9	1, 3, 5, 7, 9, 11, 13, 15	IO-Link port LEDs for ports X01 ... X08, channel (pin 2)
	11	0, 2, 4, 6, 8, 10, 12, 14	IO-Link port LEDs for ports X01 ... X08, IO-Link or channel A (pin 4)
Marking	8	-	Port marking (WMB Inline and marking strips)
	23	-	Module marking (WMB Inline)
Assembly	7	-	Mounting hole for front or side mounting
	24	-	Mounting hole for front or side mounting

4.2 Connections

4.2.1 Power supply


The product is powered through the X31 connection (Power in). Two supply cables can be connected to the plug:

- Supply cable 1: 1L+ (U_{1L}) and reference potential 1L–
- Supply cable 2: 2L+ (U_{2L}) and reference potential 2L–

Both supply cables are electrically isolated from each other and functional ground.

Each pin of plug X31 (Power in) is connected to the same pin of socket X32 (Power out) and makes it possible to pass the power on to the next device.

Table 2: Supply Voltage

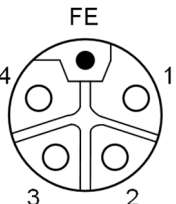Supply Voltage Input	Supply Voltage Output	Pin	Signal	Description
 M12, L-coded, plug, 5-pin (4 + FE)	 M12, L-coded, socket, 5-pin (4 + FE)	1	1L+	24 VDC supply voltage U_{1L} for system and sensor/actuator
		2	2L–	Reference potential for 2L
		3	1L–	Reference potential for 1L
		4	2L+	24 VDC auxiliary/control voltage U_{2L}
		FE	FE	Functional ground

Note


Upper limit on current consumption from X32 (Power out)

Before connecting one or more products to the power supply on socket X32 (Power out), read section [Power Supply Examples \[p. 60\]](#). There you will find information on the maximum permitted current consumption.

4.2.2 Communication Interfaces

4.2.2.1 IO-Link (Master)


Table 3: IO-Link (class A)

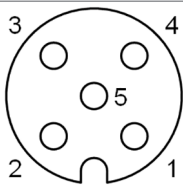IO-Link (Class A)	Pin	Signal	Description	Wire Color
 M12, A-coded, socket, 5-pin	1	1L+	24 VDC supply voltage U_{1L} for sensor/actuator	Brown
	2	DIO B (DI B/ DQ B)	Digital input/output channel B	White
	3	1L–	Reference potential for 1L+	Blue
	4	C/Q DIO A (DI A/ DQ A)	IO-Link data or digital input/output channel A	Black
	5	n. c.	Not connected	-

4.2.3 Network Connections

4.2.3.1 ETHERNET Interfaces

Table 4: ETHERNET Interfaces

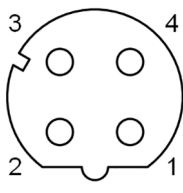ETHERNET	Pin	Signal	Description
 M12, D-coded, socket, 4-pin	1	TX+	Positive send data
	2	RX+	Positive receive data
	3	TX–	Negative send data
	4	RX–	Negative receive data
	Housing	Shield	Shield connection; housing is connected to functional ground

4.3 Circuit Diagram

The following figure shows the schematic circuit diagram of the product.

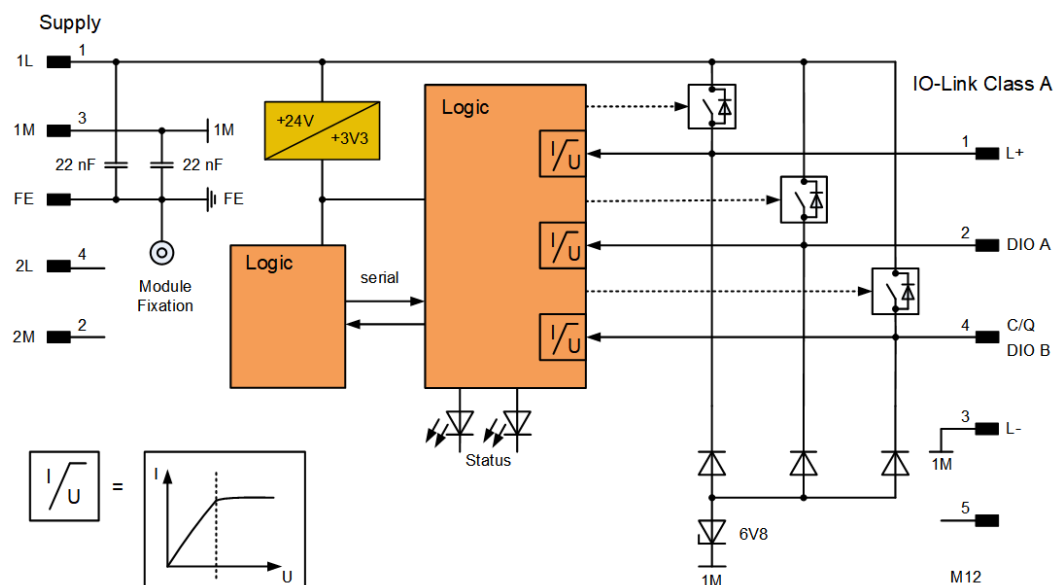


Figure 2: Circuit Diagram for Each Port

4.4 Technical data

4.4.1 Product

Table 5: Product

Property	Value
Item Number	765-4501/100-000
Product function	8-Port-IO-Link Master Class A
Product name (short)	8 PORT IOL-A FLD EI 24 VDC 2.0 A
Product name (long)	8-Port IO-Link Master Class A; EtherNet/IP; 24 V DC; 2.0 A; 8 × M12 connection

4.4.2 Mechanical Data

Table 6: Mechanical Data

Property	Value
Width	60 mm
Height	30 mm
Length	210 mm
Weight	574.3 g
Housing	Zinc Die Casting
Mounting type	Screw mount, 2 × M4
Tightening torque	M4: 1.2 Nm
Mounting holes	Diameter: 4.5 mm
	Distance from each: 198.0 mm ± 0.2 mm

4.4.3 Connection Technology

Table 7: Connection technology

Property	Value
Power connection	PWR IN: M12 L-coded, 5-pin, plug
	PWR OUT: M12 L-coded, 5-pin, socket
EtherNet/IP connection	2 × M12, D-coded, socket, 4-pin
IO-Link ports	8 × M12, A-kodiert, Buchse, 5-polig
Tightening torque	M12: 1.0 Nm

IO-Link Port (Class A)

Table 8: IO-Link Port (Class A)

Property	Value	Value (per UL)
IO-Link Master (Class A)		
Specification	V1.1	
Port mode	Pin 4: IO-Link: autoconfig, manual, tool-based; DI, DO	
	Pin 2: DI, DO, disabled	
Transmission mode	COM 1, COM 2, COM 3	
Min. cycle time	400 μs (IO-Link frame type_2_1 with transmission mode COM 3)	
Digital Input		
Characteristic	Type 3 (IEC 61131-2)	
Parameter	Digital software input filter: without, 3 ms, 15 ms, 20 ms	
	The input signal change must be at most 2.5 kHz for correct device-internal detection of changes. However, it should be noted that the transfer and processing of the process data (in the device and in the controller) also take time and reduce the maximum input signal change.	
Recording cycle	200 μs	
Circuit	The digital input is not resistant to feedback. The input voltage must not exceed the supply voltage.	
Indicators	On/off status LED	
Digital Output		
Output voltage	24 VDC, 1L powered	
Current	Normal operation: max. 2.0 A per channel	
	Overload operation: max. 2.4 A per channel, per IEC 61131-2	
Residual current	Less than 1 mA	
Circuit	High-side driver The digital output is not resistant to feedback. The input voltage must not exceed the supply voltage.	
Voltage drop through high-side path	Less than 250 mV	
Self-protection	Overcurrent, overload, overtemperature and overvoltage	
Maximum capacitive load	100 μF parallel to 12 Ω; 10 Hz	
Maximum inductive load	1.15 H / 2 A; 0.2 Hz; DC13	1.15 H / 2 A; 1 Hz; DC13; Pilot Duty
Indicators	On/off status LED	
Diagnostics	Events: overcurrent, overload and overtemperature	
Actuator/Sensor Supply		

Property	Value	Value (per UL)
Output voltage	24 VDC, 1L powered	
Output current, L1	Maximum: 4.0 A per channel per IEC 61131-2	
Output current, L1 with IO-Link operating mode	Maximum 1.0 A with conductor size AWG 22/0.34 mm ² and cable length of up to 20 m (per IO-Link specification)	
	Maximum 4.0 A with increased conductor cross-section or reduced cable length (max. voltage drop of 1.2 V for both feed and return line individually)	
Output current, L2	Maximum: 4.0 A per channel per IEC 61131-2	
Output current, L2 with IO-Link operating mode	Maximum 1.0 A with conductor size AWG 22/0.34 mm ² and cable length of up to 20 m (per IO-Link specification)	
	Maximum 4.0 A with increased conductor cross-section or reduced cable length (max. voltage drop of 1.2 V for both feed and return line individually)	
Circuit	High-side driver The 1L+/2L+ output is not resistant to feedback. The input voltage must not exceed the supply voltage.	
Self-protection	Overcurrent, overload, overtemperature and overvoltage	
Voltage drop through high-side path	Less than 200 mV	
Maximum capacitive load	1000 µF parallel to 24 Ω; 0.1 Hz	
	470 µF parallel to 12 Ω; 0.1 Hz	
	220 µF parallel to 6 Ω; 0.1 Hz	
Maximum inductive load	1.15 H / 2 A; 0.2 Hz; DC13	1.15 H / 2 A; 1 Hz; DC13; Pilot Duty
Diagnostics (1L+)	Events: overcurrent, overload, overtemperature and overvoltage	

Table 9: Total Load

Parameters	Value	Value (per UL)
Maximum total load current (sum of all currents of connections X01–X08)	15.7 A	11.7 A

4.4.4 Power Supply

Table 10: Power Supply

Parameters	Value	Value (per UL)
Supply voltage, 1L, 2L	24 VDC, –25 %/+30 % (18 VDC ... 31.2 VDC)	
	24 VDC, –25 %/+20 % (18 VDC ... 28.8 VDC)	
	Voltages above 34 V can permanently damage the device. Voltages below approx. 11 V lead to device reset.	
Undervoltage warning, 1L	18.0 V (± 5 % at 25 °C) message on	
	18.3 V (± 5 % at 25 °C) message off	
Overvoltage warning, 1L	30.0 V (± 5 % at 25 °C) message on	
	29.7 V (± 5 % at 25 °C) message off	
Module current consumption	1L: 100 mA (at 24 VDC)	
	2L: 10 mA (at 24 VDC)	
Current consumption of supply connections	Max. 16 A; ensure external limitation or use fuses in the cables	External fuses in lines 1L and 2L: max. 16 A, time-delay, min. 30 VDC

Parameters	Value	Value (per UL)
	The maximum total current of the device, including transmission between the power supply connections, must not exceed 16 A for both 1L and 2L individually. If additional modules are connected to X32 (PWR OUT), it may be necessary for the maximum total current to be monitored with external power supply management. Maximum current: Observe derating as a function of ambient temperature.	The maximum total current of the device, including transmission between the power supply connections, must not exceed 12 A (the sum of 1L and 2L). If additional modules are connected to X32 (PWR OUT), it may be necessary for the maximum total current to be monitored with external power supply management.
Conductor cross-section	0.5 ... 2.5 mm ² Note: Observe the current carrying capacity and cable length!	2.5 mm ²
Reverse voltage protection	Yes	
Power source	24 VDC PELV (Protective Extra Low Voltage) or SELV (Safety Extra Low Voltage) power source	

4.4.5 Electrical Safety

Table 11: Electrical Safety

Property	Value
Insulation resistance	60 VDC
Test voltage	550 VAC RMS
Min. creepage distance	0.7 mm

Requirements

- Use of PELV/SELV power supplies
- When SELV power supplies are used: SELV power supplies with supply via the same network phase
- If PELV (Protective Extra Low Voltage) power supplies are used: PELV (Protective Extra Low Voltage) power supplies with a secondary power supply connection to the common reference point

4.4.6 Environmental Conditions

Table 12: Environmental Requirements

Property	Value	Value (per UL)
Ambient temperature (operation)	–25 °C ... +70 °C	
Ambient temperature (storage)	–40 °C ... +80 °C	
Maximum temperature change	3 K/min	
Relative humidity (operation)	5 % ... 95 %	
Pollution degree	3 (EN 60664-1)	
Operating altitude	0 ... 2000 m	

Property	Value	Value (per UL)
Overvoltage category	II (EN 60664-1)	
Protection type	IP67 (EN 60529)	Indoor use (enclosure type 12, 13; IP67)
Protection class	III (EN 61140)	
Vibration resistance	5g (IEC 60068-2-6)	
Shock resistance	50g (IEC 60068-2-27)	

4.4.7 Communication

Table 13: Communication

Property	Value
Communication Interfaces	ETHERNET, IO-Link, Bluetooth®
Protocols	EtherNet/IP, HTTP, OPC UA, IO-Link

Table 14: Communication – EtherNet/IP device

Property	Value
Connection 1 (Exclusive Owner – 32 bytes per IO-Link port)	Input data: 276 bytes; output data: 276 bytes
Connection 2 (Exclusive Owner – 32 bytes per IO-Link port without config)	
Connection 3 (Listen only – 32 bytes per IO-Link port)	Input data: 276 bytes; output data: 0 bytes
Connection 4 (Input Only – 32 bytes per IO-Link port)	
Connection 5 (Exclusive Owner – 16 bytes per IO-Link port)	Input data: 148 bytes; output data: 148 bytes
Connection 6 (Exclusive Owner – 16 bytes per IO-Link port without config)	
Connection 7 (Listen Only – 16 bytes per IO-Link port)	Input data: 148 bytes; output data: 0 bytes
Connection 8 (Input Only – 16 bytes per IO-Link port)	
Connection 9 (Exclusive Owner – 4 bytes per IO-Link port)	Input data: 52 bytes; output data: 52 bytes
Connection 10 (Exclusive Owner – 4 bytes per IO-Link port without config)	
Connection 11 (Listen Only – 4 bytes per IO-Link port)	Input data: 52 bytes; output data: 0 bytes
Connection 12 (Input Only – 4 bytes per IO-Link port)	
I/O connection types (implicit)	Exclusive Owner
	Input Only
	Listen Only
I/O connection trigger type	Cyclic
DHCP	Supported (default setting)
BOOTP	Supported
Fixed IP address	Supported
Duplex mode	Half-duplex, full-duplex, autonegotiation
MDI mode	MDI, MDI-X, Auto MDI-X
ACD (Address Conflict Detection)	Supported
Integrated switch	Supported
Reset services	CIP reset services: identity object, type 0 and 1 reset services
Data transport layer	Ethernet II, IEEE 802.3
Interface type	10BASE-T/100BASE-TX, potential-free

Table 15: OPC UA Server

Parameters	Value
OPC UA Server	Per "IO-Link Companion Specification": http://opcfoundation.org/UA/IOLink/ Manufacturer-specific information model with diagnostic functions: http://www.wago.com/UA/Diagnostics/
Server profile	Micro Embedded Device
Protocol	OPC UA TCP
User access	Anonymous (read access only) Username/password (read and write access)
Number of sessions	2
Number of subscriptions per session	2
Number of "monitored items" per session	20
Data coding	UA binary

Table 16: Communication – Bluetooth® transmitter

Property	Value
Modulation	GFSK
Data rate	1 Mbit/s
Operating frequency	2402 ... 2480 MHz
Maximum power, including tune-up tolerance	Output power: +8 dBm Tolerance: +2 dBm / -3 dBm
Antenna type	PCB monopole
Maximum antenna gain	1.25 dBi

We declare that we meet the EN 62479 standard with respect to the limiting value for low powers less than 20 mW. Therefore, the product fundamentally corresponds to the European limiting values for high-frequency radiation.

4.5 Derating

Please note the derating for use of the product. The surrounding air temperature and the current affect the product's heat generation.

The derating curve was created with the following conditions of use: "without air movement and with 0.5 m/s air movement" and "mounting on wall with poor heat conductivity." The real conditions of use may lead to better heat dissipation from the product, e.g. due to greater air movement or better dissipation of heat to the mounting wall. The product provides measured values for temperature and current, which you can display with WAGO Webserver I/O Field or read out via OPC UA.

The following figure shows the maximum permissible current (I) that can flow into the product as a function of the surrounding air temperature (T).

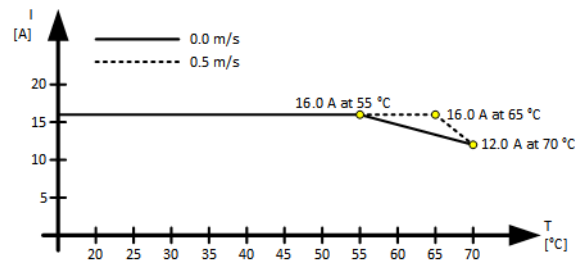
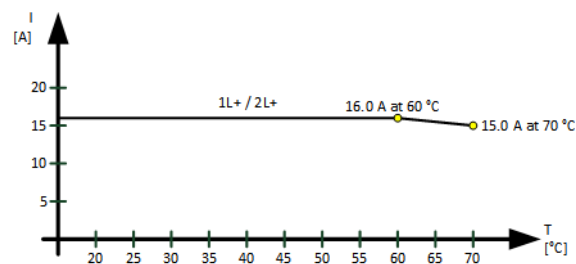
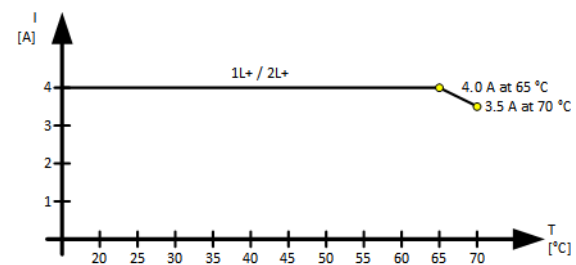


Figure 3: Derating, 765-4501/100-000

Also note the derating curve for the individual contacts (pins) of the L-coded connections X31 and X32. The following figure shows the maximum permissible current (I) that can flow through the contact (pin) as a function of the ambient temperature (T).

Figure 4: Derating of a Contact (Pin) of L-Coded Connections X31 and X32 (For Core Cross-Section = 0.25 mm²/AWG 14)

Also note the derating curve for the individual contacts (pins) of the A-coded connections port X01, X02 etc. The following figure shows the maximum permissible current (I) that can flow through the contact (pin) as a function of the ambient temperature (T).

Figure 5: Derating of a Contact (Pin) of the A-Coded Connections Port X01, X02, ... (for Core Cross-Section = 0.34 mm²/AWG 22)

High currents may occur on connections port X01, X02, ... on pin 1 and pin 3.

4.6 Regulations and Standards

The following regulations and standards were used in the development of the module:

Table 17: Standards and Regulations

Standard	Title
EN 61000-6-2	Electromagnetic compatibility (EMC) – Immunity for industrial environments
EN 61000-6-4	Electromagnetic compatibility (EMC) – Emission standard for industrial environments
IEC 61158	EtherNet/IP

4.7 Approvals

The following approvals have been granted for the product:

	Conformity marking
---	--------------------

	UL	UL 61010-1 and UL 61010-2-201, "Ordinary Location"	Pending
---	----	--	---------

	Bluetooth®	This module has an RF transmitter with the following specifications: - Operating frequency: 2402–2480 MHz - Maximum RF output power: < 20 mW
--	------------	--

RED	Certificate number: R20-0935-01-TEC (Wideline)
-----	--

FCC	FCC ID: 2AKUE-WIDELINE
-----	------------------------

ISED	Certificate number: 22322-WIDELINE
------	------------------------------------

Note

More information on approvals

You can find detailed information on the approvals online at:

 www.wago.com/<item number>

Functions

5.1 Process Image

This section describes the process data. The structure of the process data depends on which connection (connection 1, connection 2 etc.) is used between the EtherNet/IP scanner and the module. The module offers multiple connections; a connection was selected during configuration of the EtherNet/IP scanner.

5.1.1 List of Connections

List of Connections

- Connection 1: Exclusive Owner – 32 bytes per IO-Link port
- Connection 2: Exclusive Owner – 32 bytes per IO-Link port without config
- Connection 3: Listen Only – 32 bytes per IO-Link port
- Connection 4: Input Only – 32 bytes per IO-Link port
- Connection 5: Exclusive Owner – 16 bytes per IO-Link port
- Connection 6: Exclusive Owner – 16 bytes per IO-Link port without config
- Connection 7: Listen Only – 16 bytes per IO-Link port
- Connection 8: Input Only – 16 bytes per IO-Link port
- Connection 9: Exclusive Owner – 4 bytes per IO-Link port
- Connection 10: Exclusive Owner – 4 bytes per IO-Link port without config
- Connection 11: Listen Only – 4 bytes per IO-Link port
- Connection 12: Input Only – 4 bytes per IO-Link port

The following sections describe the process image for each connection.

5.1.2 Input Process Data of Connections 1 to 4

The following table describes the structure of the input process data of connections 1 through 4.

Table 18: Input Process Data – Connections 1 to 4

Byte Off-set	Byte Count	Input Process Data	Description
0	1	DI status	0: DI data invalid. 1–255: DI data valid.
1	1	Dummy byte	Reserved, 0
2 ... 3	2	DI data	The port and pin assignment of process data depends on the process data layout setting: pin-based or port-based. See the following tables.
4	1	Port X01: IO-Link PQI	See Port Qualifier Information [p 46] .
5	1	Dummy byte	Reserved, 0
6 ... 37	32	Port X01 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X01. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X01 (pin 4) functions as a digital input: input data	Byte 6: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 7 ... 37: reserved.

Byte Off-set	Byte Count	Input Process Data	Description
		Port X01 (pin 4) functions as digital output: output data	Byte 6: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 7 ... 37: reserved.
38	1	Port X02: IO-Link PQI	See Port Qualifier Information [p 46] .
39	1	Dummy byte	Reserved, 0
40 ... 71	32	Port X02 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X02. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X02 (pin 4) functions as a digital input: input data	Byte 40: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 41 ... 71: reserved.
		Port X02 (pin 4) functions as digital output: output data	Byte 40: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 41 ... 71: reserved.
72	1	Port X03: IO-Link PQI	See Port Qualifier Information [p 46] .
73	1	Dummy byte	Reserved, 0
74 ... 105	32	Port X03 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X03. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X03 (pin 4) functions as a digital input: input data	Byte 74: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 75 ... 105: reserved.
		Port X03 (pin 4) functions as digital output: output data	Byte 74: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 75 ... 105: reserved.
106	1	Port X04: IO-Link PQI	See Port Qualifier Information [p 46] .
107	1	Dummy byte	Reserved, 0
108 ... 139	32	Port X04 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X04. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X04 (pin 4) functions as a digital input: input data	Byte 108: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 109 ... 139: reserved.
		Port X04 (pin 4) functions as digital output: output data	Byte 108: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 109 ... 139: reserved.
140	1	Port X05: IO-Link PQI	See Port Qualifier Information [p 46] .
141	1	Dummy byte	Reserved, 0
142 ... 173	32	Port X05 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X05. For a description of the data, see the manual from the manufacture of the IO-Link device used.

Byte Off-set	Byte Count	Input Process Data	Description
		Port X05 (pin 4) functions as a digital input: input data	Byte 142: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 143 ... 173: reserved.
		Port X05 (pin 4) functions as digital output: output data	Byte 142: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 143 ... 173: reserved.
174	1	Port X06: IO-Link PQI	See  Port Qualifier Information [p. 46] .
175	1	Dummy byte	Reserved, 0
176 ... 207	32	Port X06 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X06. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X06 (pin 4) functions as a digital input: input data	Byte 176: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 177 ... 207: reserved.
		Port X06 (pin 4) functions as digital output: output data	Byte 176: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 177 ... 207: reserved.
208	1	Port X07: IO-Link PQI	See  Port Qualifier Information [p. 46] .
209	1	Dummy byte	Reserved, 0
210 ... 241	32	Port X07 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X07. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X07 (pin 4) functions as a digital input: input data	Byte 210: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 211 ... 241: reserved.
		Port X07 (pin 4) functions as digital output: output data	Byte 210: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 211 ... 241: reserved.
242	1	Port X08: IO-Link PQI	See  Port Qualifier Information [p. 46] .
243	1	Dummy byte	Reserved, 0
244 ... 275	32	Port X08 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X08. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X08 (pin 4) functions as a digital input: input data	Byte 244: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 245 ... 275: reserved.
		Port X08 (pin 4) functions as digital output: output data	Byte 244: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 245 ... 275: reserved.

The process data of the digital inputs can be transferred on a port basis (default) or pin basis. The following tables show the port and pin assignment.

Table 19: Process Data of the Digital Inputs (Port-Based Assignment)

Byte Off-set	Bit	Input Process Data
2	0	Port X01, pin 4: DI A or mirrored DO A (depending on configuration)
	1	Port X01, pin 2: DI B or mirrored DO B (depending on configuration)
	...	...
	6	Port X04, pin 4: DI A or mirrored DO A (depending on configuration)
	7	Port X04, pin 2: DI B or mirrored DO B (depending on configuration)
3	0	Port X05, pin 4: DI A or mirrored DO A (depending on configuration)
	1	Port X05, pin 2: DI B or mirrored DO B (depending on configuration)
	...	...
	6	Port X08, pin 4: DI A or mirrored DO A (depending on configuration)
	7	Port X08, pin 2: DI B or mirrored DO B (depending on configuration)

Table 20: Process Data of the Digital Inputs (Pin-Based Assignment)

Byte Off-set	Bit	Input Process Data
2	0	Port X01, pin 4: DI A or mirrored DO A (depending on configuration)
	1	Port X02, pin 4: DI A or mirrored DO A (depending on configuration)
	...	...
	6	Port X07, pin 4: DI A or mirrored DO A (depending on configuration)
	7	Port X08, pin 4: DI A or mirrored DO A (depending on configuration)
3	0	Port X01, pin 2: DI B or mirrored DO B (depending on configuration)
	1	Port X02, pin 2: DI B or mirrored DO B (depending on configuration)
	...	...
	6	Port X07, pin 2: DI B or mirrored DO B (depending on configuration)
	7	Port X08, pin 2: DI B or mirrored DO B (depending on configuration)

5.1.3 Input Process Data of Connections 5 to 8

The following table describes the structure of the input process data of connections 5 through 8.

Table 21: Input Process Data – Connections 5 to 8

Byte Off-set	Byte Count	Input Process Data	Description
0	1	DI status	0: DI data invalid. 1–255: DI data valid.
1	1	Dummy byte	Reserved, 0
2 ... 3	2	DI data	The port and pin assignment of process data depends on the process data layout setting: pin-based or port-based. See the following tables.
4	1	Port X01: IO-Link PQI	See Port Qualifier Information [p. 46] .
5	1	Dummy byte	Reserved, 0
6 ... 21	16	Port X01 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X01. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X01 (pin 4) functions as a digital input: input data	Byte 6: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 7... 21: reserved.

Byte Off-set	Byte Count	Input Process Data	Description
		Port X01 (pin 4) functions as digital output: output data	Byte 6: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 7 ... 21: reserved.
22	1	Port X02: IO-Link PQI	See Port Qualifier Information [p 46] .
23	1	Dummy byte	Reserved, 0
24 ... 39	16	Port X02 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X02. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X02 (pin 4) functions as a digital input: input data	Byte 24: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 25 ... 39: reserved.
		Port X02 (pin 4) functions as digital output: output data	Byte 24: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 25 ... 39: reserved.
40	1	Port X03: IO-Link PQI	See Port Qualifier Information [p 46] .
41	1	Dummy byte	Reserved, 0
42 ... 57	16	Port X03 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X03. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X03 (pin 4) functions as a digital input: input data	Byte 42: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 43 ... 57: reserved.
		Port X03 (pin 4) functions as digital output: output data	Byte 42: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 43 ... 57: reserved.
58	1	Port X04: IO-Link PQI	See Port Qualifier Information [p 46] .
59	1	Dummy byte	Reserved, 0
60 ... 75	16	Port X04 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X04. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X04 (pin 4) functions as a digital input: input data	Byte 60: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 61 ... 75: reserved.
		Port X04 (pin 4) functions as digital output: output data	Byte 60: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 61 ... 75: reserved.
76	1	Port X05: IO-Link PQI	See Port Qualifier Information [p 46] .
77	1	Dummy byte	Reserved, 0
78 ... 93	16	Port X05 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X05. For a description of the data, see the manual from the manufacture of the IO-Link device used.

Byte Off-set	Byte Count	Input Process Data	Description
		Port X05 (pin 4) functions as a digital input: input data	Byte 78: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 79 ... 93: reserved.
		Port X05 (pin 4) functions as digital output: output data	Byte 78: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 79 ... 93: reserved.
94	1	Port X06: IO-Link PQI	See Port Qualifier Information [p 46] .
95	1	Dummy byte	Reserved, 0
96 ... 111	16	Port X06 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X06. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X06 (pin 4) functions as a digital input: input data	Byte 96: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 177 ... 207: reserved.
		Port X06 (pin 4) functions as digital output: output data	Byte 96: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 177 ... 207: reserved.
112	1	Port X07: IO-Link PQI	See Port Qualifier Information [p 46] .
113	1	Dummy byte	Reserved, 0
114 ... 129	16	Port X07 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X07. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X07 (pin 4) functions as a digital input: input data	Byte 114: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 115 ... 129: reserved.
		Port X07 (pin 4) functions as digital output: output data	Byte 114: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 115 ... 129: reserved.
130	1	Port X08: IO-Link PQI	See Port Qualifier Information [p 46] .
131	1	Dummy byte	Reserved, 0
132 ... 147	16	Port X08 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X08. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X08 (pin 4) functions as a digital input: input data	Byte 134: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 133 ... 147: reserved.
		Port X08 (pin 4) functions as digital output: output data	Byte 134: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 133 ... 147: reserved.

The process data of the digital inputs can be transferred on a port basis (default) or pin basis. The following tables show the port and pin assignment.

Table 22: Process Data of the Digital Inputs (Port-Based Assignment)

Byte Off-set	Bit	Input Process Data
2	0	Port X01, pin 4: DI A or mirrored DO A (depending on configuration)
	1	Port X01, pin 2: DI B or mirrored DO B (depending on configuration)
	...	...
	6	Port X04, pin 4: DI A or mirrored DO A (depending on configuration)
	7	Port X04, pin 2: DI B or mirrored DO B (depending on configuration)
3	0	Port X05, pin 4: DI A or mirrored DO A (depending on configuration)
	1	Port X05, pin 2: DI B or mirrored DO B (depending on configuration)
	...	...
	6	Port X08, pin 4: DI A or mirrored DO A (depending on configuration)
	7	Port X08, pin 2: DI B or mirrored DO B (depending on configuration)

Table 23: Process Data of the Digital Inputs (Pin-Based Assignment)

Byte Off-set	Bit	Input Process Data
2	0	Port X01, pin 4: DI A or mirrored DO A (depending on configuration)
	1	Port X02, pin 4: DI A or mirrored DO A (depending on configuration)
	...	...
	6	Port X07, pin 4: DI A or mirrored DO A (depending on configuration)
	7	Port X08, pin 4: DI A or mirrored DO A (depending on configuration)
3	0	Port X01, pin 2: DI B or mirrored DO B (depending on configuration)
	1	Port X02, pin 2: DI B or mirrored DO B (depending on configuration)
	...	...
	6	Port X07, pin 2: DI B or mirrored DO B (depending on configuration)
	7	Port X08, pin 2: DI B or mirrored DO B (depending on configuration)

5.1.4 Input Process Data of Connections 9 to 12

The following table describes the structure of the input process data of connections 9 through 12.

Table 24: Input Process Data – Connections 9 to 12

Byte Off-set	Byte Count	Input Process Data	Description
0	1	DI status	0: DI data invalid. 1–255: DI data valid.
1	1	Dummy byte	Reserved, 0
2 ... 3	2	DI data	The port and pin assignment of process data depends on the process data layout setting: pin-based or port-based. See the following tables.
4	1	Port X01: IO-Link PQI	See Port Qualifier Information [p. 46] .
5	1	Dummy byte	Reserved, 0
6 ... 9	4	Port X01 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X01. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X01 (pin 4) functions as a digital input: input data	Byte 6: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 7... 9: reserved.

Byte Off-set	Byte Count	Input Process Data	Description
		Port X01 (pin 4) functions as digital output: output data	Byte 6: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 7... 9: reserved.
10	1	Port X02: IO-Link PQI	See Port Qualifier Information [p 46] .
11	1	Dummy byte	Reserved, 0
13 ... 15	4	Port X02 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X02. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X02 (pin 4) functions as a digital input: input data	Byte 12: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 13 ... 15: reserved.
		Port X02 (pin 4) functions as digital output: output data	Byte 12: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 13 ... 15: reserved.
16	1	Port X03: IO-Link PQI	See Port Qualifier Information [p 46] .
17	1	Dummy byte	Reserved, 0
18 ... 21	4	Port X03 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X03. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X03 (pin 4) functions as a digital input: input data	Byte 18: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 19 ... 21: reserved.
		Port X03 (pin 4) functions as digital output: output data	Byte 18: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 19 ... 21: reserved.
22	1	Port X04: IO-Link PQI	See Port Qualifier Information [p 46] .
23	1	Dummy byte	Reserved, 0
24 ... 27	4	Port X04 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X04. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X04 (pin 4) functions as a digital input: input data	Byte 24: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 25 ... 27: reserved.
		Port X04 (pin 4) functions as digital output: output data	Byte 24: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 25 ... 27: reserved.
27	1	Port X05: IO-Link PQI	See Port Qualifier Information [p 46] .
29	1	Dummy byte	Reserved, 0
30 ... 33	4	Port X05 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X05. For a description of the data, see the manual from the manufacture of the IO-Link device used.

Byte Off-set	Byte Count	Input Process Data	Description
		Port X05 (pin 4) functions as a digital input: input data	Byte 30: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 31 ... 33: reserved.
		Port X05 (pin 4) functions as digital output: output data	Byte 30: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 31 ... 33: reserved.
34	1	Port X06: IO-Link PQI	See  Port Qualifier Information [► 46] .
35	1	Dummy byte	Reserved, 0
36 ... 39	4	Port X06 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X06. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X06 (pin 4) functions as a digital input: input data	Byte 36: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 37 ... 39: reserved.
		Port X06 (pin 4) functions as digital output: output data	Byte 36: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 37 ... 39: reserved.
40	1	Port X07: IO-Link PQI	See  Port Qualifier Information [► 46] .
41	1	Dummy byte	Reserved, 0
42 ... 45	4	Port X07 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X07. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X07 (pin 4) functions as a digital input: input data	Byte 42: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 43 ... 45: reserved.
		Port X07 (pin 4) functions as digital output: output data	Byte 42: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 43 ... 45: reserved.
46	1	Port X08: IO-Link PQI	See  Port Qualifier Information [► 46] .
47	1	Dummy byte	Reserved, 0
48 ... 51	4	Port X08 (pin 4) functions as IO-Link master: IO-Link input data	IO-Link input data of the IO-Link device on port X08. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X08 (pin 4) functions as a digital input: input data	Byte 48: Bit 0 = 0: input off. Bit 0 = 1: Input on. Bits 1 ... 7: always 0. Bytes 49 ... 51: reserved.
		Port X08 (pin 4) functions as digital output: output data	Byte 48: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 49 ... 51: reserved.

The process data of the digital inputs can be transferred on a port basis (default) or pin basis. The following tables show the port and pin assignment.

Table 25: Process Data of the Digital Inputs (Port-Based Assignment)

Byte Off-set	Bit	Input Process Data
2	0	Port X01, pin 4: DI A or mirrored DO A (depending on configuration)
	1	Port X01, pin 2: DI B or mirrored DO B (depending on configuration)
	...	...
	6	Port X04, pin 4: DI A or mirrored DO A (depending on configuration)
	7	Port X04, pin 2: DI B or mirrored DO B (depending on configuration)
3	0	Port X05, pin 4: DI A or mirrored DO A (depending on configuration)
	1	Port X05, pin 2: DI B or mirrored DO B (depending on configuration)
	...	...
	6	Port X08, pin 4: DI A or mirrored DO A (depending on configuration)
	7	Port X08, pin 2: DI B or mirrored DO B (depending on configuration)

Table 26: Process Data of the Digital Inputs (Pin-Based Assignment)

Byte Off-set	Bit	Input Process Data
2	0	Port X01, pin 4: DI A or mirrored DO A (depending on configuration)
	1	Port X02, pin 4: DI A or mirrored DO A (depending on configuration)
	...	...
	6	Port X07, pin 4: DI A or mirrored DO A (depending on configuration)
	7	Port X08, pin 4: DI A or mirrored DO A (depending on configuration)
3	0	Port X01, pin 2: DI B or mirrored DO B (depending on configuration)
	1	Port X02, pin 2: DI B or mirrored DO B (depending on configuration)
	...	...
	6	Port X07, pin 2: DI B or mirrored DO B (depending on configuration)
	7	Port X08, pin 2: DI B or mirrored DO B (depending on configuration)

5.1.5 Output Process Data of Connections 1 and 2

The following table describes the structure of the output process data of connections 1 and 2.

Table 27: Output Process Data (Connections 1 and 2)

Byte Off-set	Byte Count	Output Process Data	Description
0	1 byte	DO status	0: DO data invalid. Substitute values are used. 1–255: DO data valid (pin 2).
1	1 bytes	Dummy byte	Reserved, 0
2 ... 3	2 bytes	DO data	The port and pin assignment of process data depends on the process data layout setting: pin-based or port-based. See the following tables.
4	1 bytes	Port X01 functions as IO-Link master: IO-Link output data release	0: IO-Link port X01 output data invalid. 1–255: IO-Link port X01 output data valid.
		Port X01 (pin 4) functions as digital output: output release	0: Port X01 pin 4 output data invalid. Substitute value is used. 1–255: Port X01 pin 4 output data valid.
		Port X01 (pin 4) functions as a digital input	Reserved, 0
5	1 bytes	Dummy byte	Reserved, 0

Byte Off-set	Byte Count	Output Process Data	Description
6 ... 37	32 bytes	Port X01 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X01. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X01 (pin 4) functions as digital output: output data	Byte 6: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 7 ... 37: reserved.
		Port X01 (pin 4) functions as a digital input	Reserved, 0
38	1 bytes	Port X02 functions as IO-Link master: IO-Link output data release	0: IO-Link port X02 output data invalid. 1–255: IO-Link port X02 output data valid.
		Port X02 (pin 4) functions as digital output: output release	0: Port X02 pin 4 output data invalid. Substitute value is used. 1–255: Port X02 pin 4 output data valid.
		Port X02 (pin 4) functions as a digital input	Reserved, 0
39	1 bytes	Dummy byte	Reserved, 0
40 ... 71	32 bytes	Port X02 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X02. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X02 (pin 4) functions as digital output: output data	Byte 40: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 41 ... 71: reserved.
		Port X02 (pin 4) functions as a digital input	Reserved, 0
72	1 bytes	Port X03 functions as IO-Link master: IO-Link output data release	0: IO-Link port X03 output data invalid. 1–255: IO-Link port X03 output data valid.
		Port X03 (pin 4) functions as digital output: output release	0: Port X03 pin 4 output data invalid. Substitute value is used. 1–255: Port X03 pin 4 output data valid.
		Port X03 (pin 4) functions as a digital input	Reserved, 0
73	1 bytes	Dummy byte	Reserved, 0
74 ... 105	32 bytes	Port X03 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X03. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X03 (pin 4) functions as digital output: output data	Byte 74: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 75 ... 105: reserved.
		Port X03 (pin 4) functions as a digital input	Reserved, 0
106	1 bytes	Port X04 functions as IO-Link master: IO-Link output data release	0: IO-Link port X04 output data invalid. 1–255: IO-Link port X04 output data valid.
		Port X04 (pin 4) functions as digital output: output release	0: Port X04 pin 4 output data invalid. Substitute value is used. 1–255: Port X04 pin 4 output data valid.
		Port X04 (pin 4) functions as a digital input	Reserved, 0

Byte Off-set	Byte Count	Output Process Data	Description
107	1 bytes	Dummy byte	Reserved, 0
108 ... 139	32 bytes	Port X04 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X04. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X04 (pin 4) functions as digital output: output data	Byte 108: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 111 ... 139: reserved.
		Port X04 (pin 4) functions as a digital input	Reserved, 0
140	1 bytes	Port X05 functions as IO-Link master: IO-Link output data release	0: IO-Link port X05 output data invalid. 1–255: IO-Link port X05 output data valid.
		Port X05 (pin 4) functions as digital output: output release	0: Port X05 pin 4 output data invalid. Substitute value is used. 1–255: Port X05 pin 4 output data valid.
		Port X05 (pin 4) functions as a digital input	Reserved, 0
141	1 bytes	Dummy byte	Reserved, 0
142 ... 173	32 bytes	Port X05 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X05. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X05 (pin 4) functions as digital output: output data	Byte 142: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 143 ... 173: reserved.
		Port X05 (pin 4) functions as a digital input	Reserved, 0
174	1 bytes	Port X06 functions as IO-Link master: IO-Link output data release	0: IO-Link port X06 output data invalid. 1–255: IO-Link port X06 output data valid.
		Port X06 (pin 4) functions as digital output: output release	0: Port X06 pin 4 output data invalid. Substitute value is used. 1–255: Port X06 pin 4 output data valid.
		Port X06 (pin 4) functions as a digital input	Reserved, 0
175	1 bytes	Dummy byte	Reserved, 0
176 ... 207	32 bytes	Port X06 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X06. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X06 (pin 4) functions as digital output: output data	Byte 176: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 177 ... 207: reserved.
		Port X06 (pin 4) functions as a digital input	Reserved, 0
208	1 bytes	Port X07 functions as IO-Link master: IO-Link output data release	0: IO-Link port X07 output data invalid. 1–255: IO-Link port X07 output data valid.
		Port X07 (pin 4) functions as digital output: output release	0: Port X07 pin 4 output data invalid. Substitute value is used. 1–255: Port X07 pin 4 output data valid.

Byte Off-set	Byte Count	Output Process Data	Description
		Port X07 (pin 4) functions as a digital input	Reserved, 0
209	1 bytes	Dummy byte	Reserved, 0
210 ... 241	32 bytes	Port X07 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X07. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X07 (pin 4) functions as digital output: output data	Byte 210: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 211 ... 241: reserved.
		Port X07 (pin 4) functions as a digital input	Reserved, 0
242	1 bytes	Port X08 functions as IO-Link master: IO-Link output data release	0: IO-Link port X08 output data invalid. 1–255: IO-Link port X08 output data valid.
		Port X08 (pin 4) functions as digital output: output release	0: Port X08 pin 4 output data invalid. Substitute value is used. 1–255: Port X08 pin 4 output data valid.
		Port X08 (pin 4) functions as a digital input	Reserved, 0
243	1 bytes	Dummy byte	Reserved, 0
244 ... 275	32 bytes	Port X08 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X08. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X08 (pin 4) functions as digital output: output data	Byte 244: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 245 ... 275: reserved.
		Port X08 (pin 4) functions as a digital input	Reserved, 0

The process data of the digital outputs can be transferred on a port basis (the default) or pin basis. The following tables show the port and pin assignment.

Table 28: Process Data of the Digital Outputs (Port-Based Assignment)

Byte Off-set	Bit	Output Process Data
2	0	0
	1	Port X01, pin 2: DO B
	...	...
	6	0
	7	Port X04, pin 2: DO B
3	0	0
	1	Port X05, pin 2: DO B
	...	...
	6	0
	7	Port X08, pin 2: DO B

Table 29: Process Data of the Digital Outputs (Pin-Based Assignment)

Byte Off-set	Bit	Output Process Data
2	0	0
	1	0
	...	...
	6	0
	7	0
3	0	Port X01, pin 2: DO B
	1	Port X02, pin 2: DO B
	...	...
	6	Port X07, pin 2: DO B
	7	Port X08, pin 2: DO B

5.1.6 Output Process Data of Connections 3 and 4

Connections 3 and 4 have no output process data.

5.1.7 Output Process Data of Connections 5 and 6

The following table describes the structure of the output process data of connections 5 and 6.

Table 30: Output Process Data (Connections 5 and 6)

Byte Off-set	Byte Count	Output Process Data	Description
0	1 byte	DO status	0: DO data invalid. Substitute values are used. 1–255: DO data valid (pin 2).
1	1 bytes	Dummy byte	Reserved, 0
2 ... 3	2 bytes	DO data	The port and pin assignment of process data depends on the process data layout setting: pin-based or port-based. See the following tables.
4	1 bytes	Port X01 functions as IO-Link master: IO-Link output data release	0: IO-Link port X01 output data invalid. 1–255: IO-Link port X01 output data valid.
		Port X01 (pin 4) functions as digital output: output release	0: Port X01 pin 4 output data invalid. Substitute value is used. 1–255: Port X01 pin 4 output data valid.
		Port X01 (pin 4) functions as a digital input	Reserved, 0
5	1 bytes	Dummy byte	Reserved, 0
6 ... 21	16 bytes	Port X01 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X01. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X01 (pin 4) functions as digital output: output data	Byte 6: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 7... 21: reserved.
		Port X01 (pin 4) functions as a digital input	Reserved, 0
22	1 bytes	Port X02 functions as IO-Link master: IO-Link output data release	0: IO-Link port X02 output data invalid. 1–255: IO-Link port X02 output data valid.

Byte Off-set	Byte Count	Output Process Data	Description
		Port X02 (pin 4) functions as digital output: output release	0: Port X02 pin 4 output data invalid. Substitute value is used. 1–255: Port X02 pin 4 output data valid.
		Port X02 (pin 4) functions as a digital input	Reserved, 0
23	1 bytes	Dummy byte	Reserved, 0
24 ... 39	16 bytes	Port X02 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X02. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X02 (pin 4) functions as digital output: output data	Byte 24: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 25 ... 39: reserved.
		Port X02 (pin 4) functions as a digital input	Reserved, 0
40	1 bytes	Port X03 functions as IO-Link master: IO-Link output data release	0: IO-Link port X03 output data invalid. 1–255: IO-Link port X03 output data valid.
		Port X03 (pin 4) functions as digital output: output release	0: Port X03 pin 4 output data invalid. Substitute value is used. 1–255: Port X03 pin 4 output data valid.
		Port X03 (pin 4) functions as a digital input	Reserved, 0
41	1 bytes	Dummy byte	Reserved, 0
42 ... 57	16 bytes	Port X03 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X03. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X03 (pin 4) functions as digital output: output data	Byte 42: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 43 ... 57: reserved.
		Port X03 (pin 4) functions as a digital input	Reserved, 0
58	1 bytes	Port X04 functions as IO-Link master: IO-Link output data release	0: IO-Link port X04 output data invalid. 1–255: IO-Link port X04 output data valid.
		Port X04 (pin 4) functions as digital output: output release	0: Port X04 pin 4 output data invalid. Substitute value is used. 1–255: Port X04 pin 4 output data valid.
		Port X04 (pin 4) functions as a digital input	Reserved, 0
59	1 bytes	Dummy byte	Reserved, 0
60 ... 75	16 bytes	Port X04 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X04. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X04 (pin 4) functions as digital output: output data	Byte 60: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 61 ... 75: reserved.
		Port X04 (pin 4) functions as a digital input	Reserved, 0

Byte Off-set	Byte Count	Output Process Data	Description
76	1 bytes	Port X05 functions as IO-Link master: IO-Link output data release	0: IO-Link port X05 output data invalid. 1–255: IO-Link port X05 output data valid.
		Port X05 (pin 4) functions as digital output: output release	0: Port X05 pin 4 output data invalid. Substitute value is used. 1–255: Port X05 pin 4 output data valid.
		Port X05 (pin 4) functions as a digital input	Reserved, 0
77	1 bytes	Dummy byte	Reserved, 0
78 ... 93	16 bytes	Port X05 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X05. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X05 (pin 4) functions as digital output: output data	Byte 78: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 79 ... 93: reserved.
		Port X05 (pin 4) functions as a digital input	Reserved, 0
94	1 bytes	Port X06 functions as IO-Link master: IO-Link output data release	0: IO-Link port X06 output data invalid. 1–255: IO-Link port X06 output data valid.
		Port X06 (pin 4) functions as digital output: output release	0: Port X06 pin 4 output data invalid. Substitute value is used. 1–255: Port X06 pin 4 output data valid.
		Port X06 (pin 4) functions as a digital input	Reserved, 0
95	1 bytes	Dummy byte	Reserved, 0
96 ... 111	16 bytes	Port X06 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X06. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X06 (pin 4) functions as digital output: output data	Byte 96: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 97 ... 111: reserved.
		Port X06 (pin 4) functions as a digital input	Reserved, 0
112	1 bytes	Port X07 functions as IO-Link master: IO-Link output data release	0: IO-Link port X07 output data invalid. 1–255: IO-Link port X07 output data valid.
		Port X07 (pin 4) functions as digital output: output release	0: Port X07 pin 4 output data invalid. Substitute value is used. 1–255: Port X07 pin 4 output data valid.
		Port X07 (pin 4) functions as a digital input	Reserved, 0
113	1 bytes	Dummy byte	Reserved, 0
114 ... 129	16 bytes	Port X07 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X07. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X07 (pin 4) functions as digital output: output data	Byte 114: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 115 ... 129: reserved.

Byte Off-set	Byte Count	Output Process Data	Description
		Port X07 (pin 4) functions as a digital input	Reserved, 0
130	1 bytes	Port X08 functions as IO-Link master: IO-Link output data release	0: IO-Link port X08 output data invalid. 1–255: IO-Link port X08 output data valid.
		Port X08 (pin 4) functions as digital output: output release	0: Port X08 pin 4 output data invalid. Substitute value is used. 1–255: Port X08 pin 4 output data valid.
		Port X08 (pin 4) functions as a digital input	Reserved, 0
131	1 bytes	Dummy byte	Reserved, 0
132 ... 147	16 bytes	Port X08 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X08. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X08 (pin 4) functions as digital output: output data	Byte 132: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 133 ... 147: reserved.
		Port X08 (pin 4) functions as a digital input	Reserved, 0

The process data of the digital outputs can be transferred on a port basis (the default) or pin basis. The following tables show the port and pin assignment.

Table 31: Process Data of the Digital Outputs (Port-Based Assignment)

Byte Off-set	Bit	Output Process Data
2	0	0
	1	Port X01, pin 2: DO B
	...	...
	6	0
	7	Port X04, pin 2: DO B
3	0	0
	1	Port X05, pin 2: DO B
	...	...
	6	0
	7	Port X08, pin 2: DO B

Table 32: Process Data of the Digital Outputs (Pin-Based Assignment)

Byte Off-set	Bit	Output Process Data
2	0	0
	1	0
	...	...
	6	0
	7	0
3	0	Port X01, pin 2: DO B
	1	Port X02, pin 2: DO B
	...	...
	6	Port X07, pin 2: DO B

Byte Off-set	Bit	Output Process Data
	7	Port X08, pin 2: DO B

5.1.8 Output Process Data of Connections 7 and 8

Connections 7 and 8 have no output process data.

5.1.9 Output Process Data of Connections 9 and 10

The following table describes the structure of the output process data of connections 9 and 10.

Table 33: Output Process Data – Connections 9 and 10

Byte Off-set	Byte Count	Output Process Data	Description
0	1	DO status	0: DO data invalid. Substitute values are used. 1–255: DO data valid (pin 2).
1	1	Dummy byte	Reserved, 0
2 ... 3	2	DO data	The port and pin assignment of process data depends on the process data layout setting: pin-based or port-based. See the following tables.
4	1	Port X01 functions as IO-Link master: IO-Link output data release	0: IO-Link port X01 output data invalid. 1–255: IO-Link port X01 output data valid.
		Port X01 (pin 4) functions as digital output: output release	0: Port X01 pin 4 output data invalid. Substitute value is used. 1–255: Port X01 pin 4 output data valid.
		Port X01 (pin 4) functions as a digital input	Reserved, 0
5	1	Dummy byte	Reserved, 0
6 ... 9	4	Port X01 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X01. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X01 (pin 4) functions as digital output: output data	Byte 6: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 7... 11: reserved.
		Port X01 (pin 4) functions as a digital input	Reserved, 0
10	1	Port X02 functions as IO-Link master: IO-Link output data release	0: IO-Link port X02 output data invalid. 1–255: IO-Link port X02 output data valid.
		Port X02 (pin 4) functions as digital output: output release	0: Port X02 pin 4 output data invalid. Substitute value is used. 1–255: Port X02 pin 4 output data valid.
		Port X02 (pin 4) functions as a digital input	Reserved, 0
11	1	Dummy byte	Reserved, 0
12 ... 15	4	Port X02 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X02. For a description of the data, see the manual from the manufacture of the IO-Link device used.

Byte Off-set	Byte Count	Output Process Data	Description
		Port X02 (pin 4) functions as digital output: output data	Byte 12: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 13 ... 15: reserved.
		Port X02 (pin 4) functions as a digital input	Reserved, 0
16	1	Port X03 functions as IO-Link master: IO-Link output data release	0: IO-Link port X03 output data invalid. 1–255: IO-Link port X03 output data valid.
		Port X03 (pin 4) functions as digital output: output release	0: Port X03 pin 4 output data invalid. Substitute value is used. 1–255: Port X03 pin 4 output data valid.
		Port X03 (pin 4) functions as a digital input	Reserved, 0
17	1	Dummy byte	Reserved, 0
18 ... 21	4	Port X03 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X03. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X03 (pin 4) functions as digital output: output data	Byte 18: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 19 ... 21: reserved.
		Port X03 (pin 4) functions as a digital input	Reserved, 0
22	1	Port X04 functions as IO-Link master: IO-Link output data release	0: IO-Link port X04 output data invalid. 1–255: IO-Link port X04 output data valid.
		Port X04 (pin 4) functions as digital output: output release	0: Port X04 pin 4 output data invalid. Substitute value is used. 1–255: Port X04 pin 4 output data valid.
		Port X04 (pin 4) functions as a digital input	Reserved, 0
23	1	Dummy byte	Reserved, 0
24 ... 27	4	Port X04 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X04. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X04 (pin 4) functions as digital output: output data	Byte 24: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 25 ... 27: reserved.
		Port X04 (pin 4) functions as a digital input	Reserved, 0
28	1	Port X05 functions as IO-Link master: IO-Link output data release	0: IO-Link port X05 output data invalid. 1–255: IO-Link port X05 output data valid.
		Port X05 (pin 4) functions as digital output: output release	0: Port X05 pin 4 output data invalid. Substitute value is used. 1–255: Port X05 pin 4 output data valid.
		Port X05 (pin 4) functions as a digital input	Reserved, 0
29	1	Dummy byte	Reserved, 0

Byte Off-set	Byte Count	Output Process Data	Description
30 ... 33	4	Port X05 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X05. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X05 (pin 4) functions as digital output: output data	Byte 30: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 31 ... 33: reserved.
		Port X05 (pin 4) functions as a digital input	Reserved, 0
34	1	Port X06 functions as IO-Link master: IO-Link output data release	0: IO-Link port X06 output data invalid. 1–255: IO-Link port X06 output data valid.
		Port X06 (pin 4) functions as digital output: output release	0: Port X06 pin 4 output data invalid. Substitute value is used. 1–255: Port X06 pin 4 output data valid.
		Port X06 (pin 4) functions as a digital input	Reserved, 0
35	1	Dummy byte	Reserved, 0
36 ... 39	4	Port X06 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X06. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X06 (pin 4) functions as digital output: output data	Byte 36: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 37 ... 39: reserved.
		Port X06 (pin 4) functions as a digital input	Reserved, 0
40	1	Port X07 functions as IO-Link master: IO-Link output data release	0: IO-Link port X07 output data invalid. 1–255: IO-Link port X07 output data valid.
		Port X07 (pin 4) functions as digital output: output release	0: Port X07 pin 4 output data invalid. Substitute value is used. 1–255: Port X07 pin 4 output data valid.
		Port X07 (pin 4) functions as a digital input	Reserved, 0
41	1	Dummy byte	Reserved, 0
42 ... 45	4	Port X07 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X07. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X07 (pin 4) functions as digital output: output data	Byte 42: Bit 0 = 0: output off. Bit 0 = 1: input on. Bits 1 ... 7: always 0. Bytes 43 ... 45: reserved.
		Port X07 (pin 4) functions as a digital input	Reserved, 0
46	1	Port X08 functions as IO-Link master: IO-Link output data release	0: IO-Link port X08 output data invalid. 1–255: IO-Link port X08 output data valid.
		Port X08 (pin 4) functions as digital output: output release	0: Port X08 pin 4 output data invalid. Substitute value is used. 1–255: Port X08 pin 4 output data valid.
		Port X08 (pin 4) functions as a digital input	Reserved, 0

Byte Off-set	Byte Count	Output Process Data	Description
47	1	Dummy byte	Reserved, 0
48 ... 51	4	Port X08 functions as IO-Link master: IO-Link output data	IO-Link output data of the IO-Link device on port X08. For a description of the data, see the manual from the manufacture of the IO-Link device used.
		Port X08 (pin 4) functions as digital output: output data	Byte 48: Bit 0 = 0: output off. Bit 0 = 1: output on. Bits 1 ... 7: always 0. Bytes 49 ... 51: reserved.
		Port X08 (pin 4) functions as a digital input	Reserved, 0

The process data of the digital outputs can be transferred on a port basis (the default) or pin basis. The following tables show the port and pin assignment.

Table 34: Process Data of the Digital Outputs (Port-Based Assignment)

Byte Off-set	Bit	Output Process Data
2	0	0
	1	Port X01, pin 2: DO B
	...	...
	6	0
	7	Port X04, pin 2: DO B
3	0	0
	1	Port X05, pin 2: DO B
	...	...
	6	0
	7	Port X08, pin 2: DO B

Table 35: Process Data of the Digital Outputs (Pin-Based Assignment)

Byte Off-set	Bit	Output Process Data
2	0	0
	1	0
	...	...
	6	0
	7	0
3	0	Port X01, pin 2: DO B
	1	Port X02, pin 2: DO B
	...	...
	6	Port X07, pin 2: DO B
	7	Port X08, pin 2: DO B

5.1.10 Output Process Data of Connections 11 and 12

Connections 11 and 12 have no output process data.

5.1.11 Port Qualifier Information

The PQI (Port Qualifier Information) provides status information for the IO-Link port and the IO-Link device.

Table 36: Port Qualifier Information

Bit	Flag	Description
0	–	Reserved, 0
1	–	Reserved, 0
2	–	Reserved, 0
3	Event	IO-Link event The value corresponds to attribute 20 of event log object 65 (0x41). 0: The port has no IO-Link event. 1: The port has an IO-Link event. The event can be read out via event log object 65 (0x41).
4	–	Reserved, 0
5	DevCom	IO-Link device communication 0: No IO-Link device present 1: IO-Link device detected in state PREOPERATE or OPERATE
6	DevErr	Port/device error 0: No error/warning occurred 1: Error/warning occurred on port or IO-Link device
7	PQ	Validity of the device process data 0: Invalid I/O process data from IO-Link device 1: Valid I/O process data from IO-Link device

5.2 Forcing

This section describes the “Force” function for the module’s input and output data.

In forcing, the physical states of the inputs or the output values of the higher-level controller are “forcibly” overwritten with other values. The user provides these values and identifies them as forcing values. This method is helpful for commissioning systems and troubleshooting.

The “Forcing” function can be accessed through the following tools:

- WAGO I/O Field Webserver
- WAGO I/O Field app on mobile devices

Systems like SPS, TIA Portal and the like also have forcing functions. Such forcing functions should not be confused with the ones described in this section and will not be considered within the context of this section.

A distinction is made between two types of forcing:

1. Input simulation means overwriting input data with replacement values.
2. Overwriting output data with replacement values means setting or resetting the module outputs independent of the module’s process image.

Forcing Outputs

To force output data for test purposes, you can control all the outputs independent of the actual process data value and set them to a specified alternative value.

For digital outputs, you can force pin 2 and pin 4.

For IO-Link, you can force port 16 data bytes.

Simulating Inputs

To simulate input data, you can set alternative values that are used for the input instead of the actual process data values. This allows you to test how the system (i.e., the module and a connected controller) responds to specific inputs.

With digital inputs, you can simulate pin 2 and pin 4.

For IO-Link, you can simulate port 16 data bytes.

Simultaneous Access

A device-internal mechanism prevents simultaneous access by multiple instances. This ensures that only one single instance at a time ever has write access.

“Forcing” Operating Mode Must Be Enabled in the Parameterization

“Forcing” operating mode can be switched off by the higher-level controller. This is done with the “Force Mode Setting” parameter – see [🔗 Module Parameters \[► 64\]](#). To enable forcing, the “Force Mode Setting” parameter value must be set to 0 (“Enable Force Mode”). This is the default setting in the device description file provided with the device.

5.3 Monitoring Functions

The 765 Series modules have extensive internal sensors for measuring:

- Temperatures
- Currents
- Voltages

The measurements are performed for the module and for pin 1, pin 2 and pin 4 of each port. The measured values can be displayed in the WAGO I/O Field Webserver or the WAGO I/O Field app. Alternatively, an OPC UA client can read out the measured values and display them.

In the module, the measured values are compared to limiting values. An alarm or event is generated if a value falls above or below a limiting value (e.g., a temperature limiting value). The module can send this alarm/event

- EtherNet/IP: The controller can read out the event log object (object 65, 0x41)
- to the OPC UA client upon: OPC UA: event.

The OPC UA client application can use the measured values, for example to implement load management. You can find information on load management in [🔗 Design Power Supply \[► 55\]](#).

5.4 Overload protection

The module has built-in overload protection and periodically measures the current, voltage and temperature.

If the output current, supply voltage or temperature exceeds the maximum value, the module switches off a pin/port

5.5 Parameterization Tools

5.5.1 Overview

There are several ways to set the product's parameters. The following table provides an overview of the tools.

Table 37: Overview of Parameterization Tools

Tool	Description
Controller with EtherNet/IP scanner	The EtherNet/IP scanner must be configured to exchange process data with the modules. The EDS file <i>wago_0765450x.eds</i> ($x = 1 \dots 4$) describes a WAGO I/O System Field module. The configuration software of the EtherNet/IP scanner can import this EDS file. The user can configure and parameterize a module. The user loads the configuration onto the EtherNet/IP scanner. The EtherNet/IP scanner configures the module via EtherNet/IP. Whether or not the scanner sends parameters (the port configuration) depends on the connection selected. For example, if connection 1 is used, the EtherNet/IP scanner transfers parameters to the module. For example, if connection 2 is used, the EtherNet/IP scanner transfers no parameters to the module, and the port must be configured with a different tool.  Overview [p 48] describes which connection causes EtherNet/IP scanner parameters to be transferred and which does not.
WAGO I/O Field Webserver	The WAGO I/O Field Webserver is a Webserver that is integrated into the 765 Series module. With a Web browser, users can view the Web pages and display and modify parameters.
WAGO I/O Field App	The WAGO I/O Field app is an app for mobile devices that can communicate with a 765 Series module via Bluetooth®. With the app, the user can parameterize the IO-Link master and the connected IO-Link devices, read and write process data and display diagnostics.
WAGO IO-Link Configurator	WAGO IO-Link Configurator is software for configuring the WAGO IO-Link masters and the IO-Link devices.

Three domains are distinguished for configuration and parameterization:

1. The **EtherNet/IP configuration**: select EtherNet/IP connection.
2. The **port configuration**: digital input or output
3. The **IO-Link device configuration**.

The following table shows which tool can influence which section.

Table 38: Parameterization Overview

Tool	EtherNet/IP Connection	Port Configuration	IO-Link Device Configuration
EtherNet/IP Scanner	The EtherNet/IP scanner configures the EtherNet/IP connection of the 765 Series module.	The EtherNet/IP scanner must be configured to exchange process data with the modules. The EDS file wago_0765450x.eds (x = 1 ... 4) describes a WAGO I/O System Field module. The configuration software of the EtherNet/IP scanner can import this EDS file. The configuration software of the EtherNet/IP scanner can import this EDS file. The user can configure and parameterize a module. The user loads the configuration onto the EtherNet/IP scanner. The EtherNet/IP scanner configures the module via EtherNet/IP. Whether or not the scanner sends parameters (the port configuration) depends on the connection selected. For example, if connection 1 is used, the EtherNet/IP scanner transfers parameters to the module. For example, if connection 2 is used, the EtherNet/IP scanner transfers no parameters to the module, and the port must be configured with a different tool.  Overview [► 48] describes which connection causes EtherNet/IP scanner parameters to be transferred and which does not.	-
WAGO I/O Field Web-server	–	Yes	Objects of the IO-Link device can be written and read. For this purpose, the WAGO I/O Field Webserver uses ISDU services (ISDU = Indexed Service Data Unit). This requires expert knowledge and the object description for the IO-Link device used. The I/O Field Webserver does not evaluate an IODD.
WAGO I/O Field App	–	Yes	Yes IODD can be used by the app to parameterize an IO-Link device.
WAGO IO-Link Configurator	-	Yes	Yes IODD can be used by the WAGO IO-Link Configurator to parameterize an IO-Link device.

Note

Parameters via EtherNet/IP are always rewritten upon restart

If a connection is used for which the EtherNet/IP scanner transfers parameters to the module, the scanner transfers the configuration and parameters to the module every time the EtherNet/IP communication starts up.

Port configuration parameters that were set by the WAGO I/O Field Webserver, the WAGO I/O Field app, the WAGO IO-Link Configurator or the OPC UA client are overwritten.

If you have changed parameters of the port configuration via the WAGO I/O Field Webserver, the WAGO I/O Field app, the WAGO IO-Link Configurator or the OPC UA Client, please note that these changes are initially applied by the module, but the Ethernet/IP scanner overwrites the port configuration again at the next start-up. If you want to change parameters of the port configuration, set them in the configuration software of the Ethernet/IP scanner.

5.5.2 WAGO IO-Link Configurator

The WAGO IO-Link Configurator product is an independent commissioning, configuration and management software program. The software replaces the earlier IO-Link plug-in for WAGO-I/O-CHECK.

The WAGO IO-Link Configurator software is used for configuring and parameterizing IO-Link devices. It supports a large number of IO-Link masters and IO-Link sensors/actuators. Within the software, you can switch between the IO-Link masters of a node that are used without having to switch back to WAGO-I/O-CHECK. In addition, the handling of IODD (device description files for IO-Link modules) is more flexible. For example, you can access the IODD server directly to import IODDs.

The WAGO IO-Link Configurator software can be launched from the Start menu or desktop icon, either as an independent program or in connection with WAGO-I/O-CHECK. It then provides the necessary functions for connecting to or searching for WAGO IO-Link masters.

You can find further information in the product manual WAGO IO-Link Configurator.

The manual is available in the download area for the WAGO IO-Link Configurator software at www.wago.com, item number 765-4501/100-000.

5.5.3 WAGO Webserver I/O Field

The WAGO I/O System Field module has an integrated Webserver. It can be accessed with a standard Web browser in order to use the following functions:

- Display port information for ports X01, X02 etc.
- Display and modify module settings.
- User setup and management, as well as user login and logout
- Reset module to factory settings and restart firmware.
- Simulating inputs; forcing outputs

Examples of port information include:

- Display current measured values for the ports: temperature, voltage, current and state on pins 1, 2 and 4
- Display information about the connected IO-Link module
- Display the status information for the entire port
- Configure ports, e.g. set operating mode
- Read and write access to the connected IO-Link devices
- Show process data

The module settings include:

- Select method for obtaining IP address
- Select the origin of the configuration data used
- Display and enter maintenance information
- Reset module to factory settings.
- Load firmware onto the module
- Display and set parameters for Bluetooth® connection to the module
- Update Bluetooth® firmware

Function overview

The following overview shows the functions offered by WAGO Webserver I/O Field that is integrated into the product and the menu items/tabs in the user interface that can be used to address these functions:

Table 39: Function Overview for WAGO I/O Field Webserver and WAGO IO-Link Modules

Menu	Tab	Description	Section
Dashboard	-	Display product information	
Port X01, X02, ...	(All)	Port information and settings for IO-Link ports X01, X02, ...	 Configure Ports [> 95]
	Information	Display measured values of a port and information on the connected IO-Link device (temperature, voltage, current and state on pins 1, 2 and 4)	
	Status	Display status information for the entire port	
	Configuration	Make port settings (such as operating mode or product check for validation and backup)	
	IOL	Access to connected IO-Link devices	 Accessing a Connected IO-Link Device [> 92]
	Process Data	Display the process data (input/output)	 Configure Ports [> 95]
Settings	(All)	Product Settings	
	Device Configuration	Configure parameters for IP connection	 Configuring IP Parameters [> 99]
	Maintenance Information	Save maintenance information	 Storing Maintenance Information [> 100]
	Firmware Upgrade	Update firmware	 Updating Firmware [> 101]
	Factory Reset	Resetting the product to factory settings	 Resetting the Module to the Factory Settings [> 103]
	Bluetooth®	Access via Bluetooth®	 Configure Bluetooth [> 104]
DIO Forcing	-	Forcing for digital inputs and outputs	 Forcing Digital Inputs and Outputs [> 109]
IOL Forcing	-	Forcing for IO-Link ports	 Forcing for IO-Link Ports [> 111]

Menu	Tab	Description	Section
User Administration	-	Set up and manage users	🔑 Logging Users on and off and Managing Them ▶ 106]
Sign in, Sign out	-	Log users on and off	

5.5.4 WAGO I/O Field app

The WAGO I/O Field app is an app for maintenance, diagnostics, operation and monitoring of installed WAGO I/O System Field modules and IO-Link devices.

This app allows you to display product information, read and write process data and adjust settings and parameters for both fieldbus modules and IO-Link devices. The communication this requires takes place through the Bluetooth® interface of the mobile device once a Data Matrix code has been scanned to select the product.

Users and the associated access rights can be set up and managed. Outputs can be forced and inputs set in order to support commissioning of systems. The current measured values of a port can be displayed (temperature, voltage, current and states) and configured (including operating mode and filters). Products can be reset to the factory settings and firmware restarted.

Short Overview

- Scanning a data matrix code of a module for product selection
- Establishing a Bluetooth® BLE (Bluetooth Low Energy) connection for wireless communication
- Querying product information including serial number (UII – Unique Item Identifier)
- Managing known devices for direct selection without scanning the DM code
- Querying sensor/actuator data (diagnostics, manufacturer, configuration, status, cycle time etc.)
- Parameterizing ports (input, input filters, output and substitute value strategy)
- Forcing outputs (DO)
- Simulating inputs (DI)
- Parameterizing WAGO □ IO-Link Masters*
- Guided download of IODDs from the Internet for IO-Link devices (IODDfinder)*
- Importing the device description file (IODD) of the IO-Link device*
- Parameterizing IO-Link devices*
- Managing customer-specific product names
- Displaying diagnostic and status information
- Managing product-specific documents (datasheets, manuals etc.)
- User and rights management

* Only applies to modules with integrated IO-Link master ports

The functional scope described can vary depending on the module type.

Note

Read the online help!

You can find Product-specific information on the WAGO App I/O Field in the online help for the app.

An iOS version of the WAGO I/O Field app is available for free in the Apple App Store, and an Android version in the Google Play Store.

5.6 Communication Interfaces

The module has the following interfaces and supports the following protocols:

- ETHERNET Interfaces
 - EtherNet/IP
 - HTTP for WAGO I/O Field Webserver
 - TCP for the OPC UA server
 - UDP for WAGO IO-Link Configurator
- Bluetooth® for the WAGO I/O Field app

5.6.1 EtherNet/IP

The module exchanges the process data with the controller via EtherNet/IP. The process data communication requires the controller and module to be configured and parameterized.

Event Log Object 65

IO-Link events are logged in event log object 65 (0x41). The controller or a diagnostic tool can read event log object 65 (0x41).

5.6.2 OPC UA Server

The module has an integrated OPC UA server.

Function Overview

- Read module identification
- Read configuration
- Read measured values: current, voltage, temperature
- Events: overcurrent, overload and overtemperature
- Read status information
- Read process data
- Read statistics: minimum/maximum current per pin, minimum/maximum voltage per pin, minimum/maximum temperature
- User access: anonymous (only read access) or username/password (read and write access)

Planning

6.1 Structure Guidelines

6.1.1 Data Security

Professional planning and design is an important requirement for securing data confidentiality, availability and integrity.

Random Influences

Data transmission and processing can be disrupted by random influences, such as temporary electromagnetic disturbances. Proper setup can significantly reduce the likelihood of corruption or destruction of data.

For additional information see:  **EMC Installations** [[▶ 54](#)].

Deliberate Influences

Use in ETHERNET Areas

ETHERNET products are designed for use in local networks. Please note the following when using ETHERNET products in your system:

- Do not connect control components and control networks to an open network such as the Internet or an office network.
WAGO recommends putting control components and control networks behind a fire-wall.
- In the control components, close all ports and services not required by your application to minimize the risk of cyber attacks and to enhance cybersecurity.
Only open the ports and services for the duration of the commissioning/configuration.
- Limit physical and electronic access to all automation components to authorized personnel only.
- To reduce the risk of unauthorized access to your system, change the default passwords during initial commissioning.
- To reduce the risk of unauthorized access to your system, regularly change the passwords used.
- To verify that the measures taken meet your security requirements, regularly perform threat analyses.
- To restrict access to and control of individual products and networks, employ a “defense-in-depth” mechanism in your system’s security configuration.

Additional document

-  **White Paper Cybersecurity in Production Facilities**

All the documentation and information is available at:  www.wago.com.

6.1.2 EMC Installations

- **Use shielded cables for data and signal lines.**

Electromagnetic interference is reduced and signal quality increased. Measurement errors, data transmission faults and interference due to excessive voltage can be prevented!

- **Keep data and signal lines separate from interference sources.**
Route data and signal lines separately from all power supply cables and other sources of high electromagnetic emissions (e.g., frequency converters or drives).
- **Connect the cable shielding with the ground potential.**
Integrated shielding is mandatory to meet technical specifications regarding measurement accuracy. Establish the connection between the cable shielding and ground potential at the inlet of the cabinet or housing. This grounding allows induced interferences to dissipate and be kept away from devices in the cabinet or housing.
- **Improve shielding performance with a large contact area.**
Greater shielding performance is achieved via low-impedance connection between shielding and ground. For this purpose, connect the shielding over a large surface area, e.g., using the WAGO 790 Shield Connection System. This is especially recommended for large-scale systems where equalizing or high impulse currents may occur.

6.2 Power Supply Concept

6.2.1 Design Power Supply

NOTICE

Device damage if permissible current feedthrough exceeded

There is a risk of damage to the device and/or other devices connected to it if the maximum permissible current feedthrough is exceeded.

Power Supply of the Module and the Connected Sensors/Actuators

The 24 V power supply is fed in via the X31 (PWR IN) supply input. The module has two electrically isolated supply cables.

- Supply cable 1 connects 1L+ (pin 1) to 1L- (pin 3).
- Supply cable 2 connects 2L+ (pin 4) to 2L- (pin 2).

The sensors or actuators are powered through ports X01, X02 etc. The design of the power supply must take the demand of the connected sensors and actuators into account.

Successive devices can be powered through the X32 (PWR OUT) supply output. This current feedthrough must also be taken into account in the design of the power supply.

Protective Functions

The module has integrated protective functions (see  **Overload protection** [► 47]) to prevent damage in overload situations such as overcurrent or short circuit. However, it is important not to rely on these protective functions alone, but also to limit the currents externally, because these protective functions do not cover the current feedthrough for powering successive devices through the supply output (X32). The maximum supply current including the current feedthrough through X31 and X32 must be limited through fuse protection (see datasheet).

Consumption

For each supply cable, it is necessary to take into account the consumption that depends on the connected devices.

Supply Cable 1:

- Logic supply (about 200 mA)
- Power supply of all connected sensors/actuators via 1L
- Power supply of successive devices via 1L

Supply Cable 2:

- Power supply of all connected sensors/actuators via 2L
- Power supply of successive devices via 2L

Maximum Currents

Note

Note maximum currents

The following rules and calculations use the maximum currents. The ambient temperature and the requirements for UL-compliant use in particular use the maximum currents.

For planning and use of the product, always observe the information in section  **Tech-nical data**  17].

Rules

In addition to the consumption of the connected devices, rules for the maximum load capacity must be followed. Comply with the following rules to prevent damage to the product:

- Supply voltage input X31 (PWR IN) and supply voltage input X32 (PWR OUT)
 - Rule 1: Take maximum load capacity of each connection contact (pin) into account
 - Rule 2: Take 1L and 2L current feedthrough into account
- Ports X01, X02 etc.
 - Rule 3: The current load of pin 3 must not exceed 4 A, since the sum of the pin 1, 2 and 4 currents flows back through pin 3.

Rules 1 and 2: Supply Input X31 and Output X32

The currents for the electrically isolated supply cables 1 and 2 should be considered separately. The two supply cables 1 are defined as follows:

- Supply cable 1 corresponds to the current flow path that starts from pin 1 (signal 1L+) of supply voltage connection PWR IN (X31) and passes through the device to pin 3 (signal 1L-) of PWR IN. This is shown in blue in the current flow figure under  **Connect Sensors/Actuators**  77].
- Supply cable 2 corresponds to the current flow path that starts from pin 4 (signal 2L+) of supply voltage connection PWR IN (X31) and passes through the device to pin 2 (signal 2L-) of PWR IN. This is shown in red in the current flow figure under  **Connect Sensors/Actuators**  77].

The following rule applies to both supply cables:

Rule 1 – upper limit of 16 A for current in the entire supply cable (1L or 2L)

An upper limit of 16 A applies to the total current in a supply cable. If this upper limit is exceeded, there is a risk of destruction of or damage to the module. To avoid this, protect each supply line with a fuse or circuit breaker. In connection with this, also read section [🔗 Requirements on the Power Supply \[► 59\]](#).

Also observe the derating, i.e. the maximum current as a function of the ambient temperature.

The following partial currents contribute to the total current in supply cable 1:

1. The I_{logic} current for powering the device's internal electronics (the device is powered via supply cable 1)
2. The I_{X0i_1L} currents for powering the connected devices, sensors and actuators (for each port i)
3. The I_{X32_1L} current that flows through the PWR OUT (X32) supply voltage output to other connected devices (current feedthrough)

The following partial currents contribute to the total current in supply cable 2:

1. The I_{X0i_2L} currents for powering the connected devices, sensors and actuators (for each port i)
2. The I_{X32_2L} current that flows through PWR OUT (X32) the supply voltage output to other connected devices

The following rule applies to both supply cables:

Rule 2 – current feedthrough limiting

The supply voltage for the devices of a supply cable that are connected to the PWR OUT output supply connection is passed on through the device via the input supply connection. The maximum permissible current feedthrough for the respective supply cable is determined by the current load capacity of the pluggable connector on the input supply connection and the PCB. This is max. 16 A. The total current must not exceed this current load capacity.

Note the following:

1. When using digital outputs, the current feedthrough must be reduced by the current that flows through these outputs, for example.
2. In the worst case, the permissible current feedthrough may reach a value of **0 A**!
3. The passthrough connection between the supply voltage input and output has **no internal protective device** against overcurrent!

Therefore, the safety measures given in [🔗 Requirements on the Power Supply \[► 59\]](#) (fuse protection, regulated power supply with current limitation and additional monitoring of the measured values of the sensors) are necessary.

Rule 3: Ports X01, X02 etc.

The following rules apply to each port of the product individually:

Rule 3 – Upper limits for current on the individual pins of the ports

The following upper limits apply to the currents on the pins of the individual ports:

Table 40: Upper Limits for Current on the Individual Pins of the Connections

Pin	Normal Operation	Overload Operation
1	4 A	4 A
2	2 A	2.4 A
3	4 A	4 A

Pin	Normal Operation	Overload Operation
4	2 A	2.4 A

The device is designed in such a way that it can be used in overload operation according to the following table “Module 765-4501/100-000 – Currents in Supply Cable 1” without time limit. The following applies to all pins:

If the maximum load capacity (upper limit of overload operation) of the pin is exceeded, there is a risk of destruction of or damage to the pluggable connector or PCB of the device.

CAUTION

Note significance of pin 3

Note that the sum of the currents of pins 1, 2 and 4 flows to pin 3.

Product-Specific Information

For supply cable 1 of the 765-4501/100-000 IO-Link Module, the currents declared in the following table must be taken into account:

Table 41: Module 765-4501/100-000 – Currents in Supply Cable 1

Current	Description
I_{X31_1L}	Current to connection PWR IN (X31): current 1L+ / reverse current 1L–
I_{X32_1L}	Current to connection PWR OUT (X32): current 1L+ / reverse current 1L–
I_{logic}	Logic supply
I_{X01_1L} , I_{X02_1L} , ..., I_{X08_1L}	Total current for supply cable 1 at digital input/output port X0i (i.e., port X01, X02, ..., X08) corresponds to the current $I_{X0i_pin3_1L}$ at pin 3 (ground). This current is the sum of the currents on pins 1, 2 and 4 of port X0i: $I_{X0i_1L} = I_{X0i_pin3_1L} = I_{X0i_pin1_1L} + I_{X0i_pin2_1L} + I_{X0i_pin4_1L}$
I_{module_1L}	Module current $I_{module_1L} = I_{X01_pin3_1L} + I_{X02_pin3_1L} + \dots + I_{X08_pin3_1L}$

For supply cable 2 of the 765-4501/100-000 IO-Link Module, the currents declared in the following table must be taken into account:

Table 42: Module 765-4501/100-000 – Currents in Supply Cable 2

Current	Description
I_{X31_2L}	Current to connection PWR IN (X31): current 2L+ / reverse current 2L–
I_{X32_2L}	Current to connection PWR OUT (X32): current 2L+ / reverse current 2L–
I_{module_2L}	Module current $I_{module_2L} = 0$

For this module, supply cable 2 is only used for transmission between the PWR IN (X31) and PWR OUT (X32) connections.

During operation of the 765-4501/100-000 IO-Link Module, the rules below for the currents in supply cables 1 and 2 must be followed at all times:

Table 43: Rules for Supply Cables 1 and 2

Current	Supply Cable 1	Supply Line 2
Total current for the supply cable (rule 1)	$I_{X31_1L} \leq 16 \text{ A}$ $I_{X31_1L} = I_{logic} + I_{X32_1L} + I_{module_1L}$	$I_{X31_2L} \leq 16 \text{ A}$ $I_{X31_2L} = I_{X32_2L} + I_{module_2L}$

Current	Supply Cable 1	Supply Line 2
Permissible current feedthrough (rule 2)	$I_{X32_1L} \leq 16\text{ A} - I_{\text{logic}} - I_{\text{module_1L}}$	$I_{X32_2L} \leq 16\text{ A} - I_{\text{module_2L}}$
Ports	Ports X01, ... , X08 (henceforth summarized as port X0i for $1 \leq i \leq 8$)	-
Supply current on pin 1 (rule 3)	$I_{X0i_pin1_1L} \leq 4\text{ A}$	-
Signal current on pin 2/4 in normal operation (rule 3)	$I_{X0i_pin2_1L} \leq 2\text{ A}$ $I_{X0i_pin4_1L} \leq 2\text{ A}$	-
Signal current on pin 2/4 in overload operation (rule 3)	$I_{X0i_pin2_1L} \leq 2.4\text{ A}$ $I_{X0i_pin4_1L} \leq 2.4\text{ A}$	-
Reverse current to pin 3 (ground) (rule 3)	$I_{X0i_pin3_1L} \leq 4\text{ A}$	-

6.2.2 Requirements on the Power Supply

Power Source

Note

PELV or SELV power source required

Only device the product with 24 VDC PELV (Protective Extra Low Voltage) or SELV (Safety Extra Low Voltage) voltage sources. Failure to do so may result in electric shock.

If 1L and 2L are to be supplied separately (e.g., for safe switch-off of 2L), then either central grounding must be implemented using two power supply units, or the power supply connection must be made on the same phase. However, the use of two separate power supply units is not mandatory.

Note

Note the following when 1L and 2L are supplied separately:

If 1L and 2L are to be supplied separately (e.g., for safe switch-off of 2L), then either central grounding must be implemented using two power supply units, or the power supply connection must be made on the same phase. Use of two separate power supply units is not mandatory.

Fuse Protection

Always protect the power supply lines from the power supply unit to the first module with a device circuit breaker or fuse. For this purpose, use a 24 VDC / max. 16 A fuse or circuit breaker with type B trip characteristics.

Note

Device damage if maximum supply current exceeded

The maximum supply current must not be exceeded. Otherwise, there is a risk of damage to the PCB of the device and the pluggable connector.

6.2.3 Additional Measures

The setup must ensure that the total current that flows back through pin 3 does not exceed the load limit.

The values of all currents on all pins of all connections (except for pin 3 = ground pin) and the calculated total currents of the two supply cables are measured by the chip used in the 765 Series products and thus can be recorded by a monitoring application. These values can be accessed via the OPC UA server, for example.

On the basis of these measured values, a monitoring application with integrated current management can be implemented. This can regularly verify that all monitoring functions are satisfied on the basis of the measured current values and also monitor the temperatures and voltages on the connections.

6.2.4 Power Supply Examples

The product can be powered alone with its operating voltage or form part of a power supply group along with multiple products.

Power supply groups of multiple products can be formed in two ways:

1. Via the PWR OUT connection:
One or more additional products can be powered via the PWR OUT (X32) power supply output and then form a power supply group together with the product.
2. Through an IO-Link hub*:
One product forms a common power supply group with IO-Link hubs (765-170x/200-000) connected via IO-Link.

* Only applies to modules with integrated IO-Link master ports

In what follows, we present one example for the 765-4204/0100-000 product with four IO-Link inputs/outputs for each of the following:

- Individual power supply
- Power supply group via PWR OUT connection (with calculation of the permissible current feedthrough)
- Power supply group with IO-Link hubs

These examples assume that the IO-Link inputs/outputs are configured as digital outputs.

Example of Individual Power Supply

This example considers a single 765-4501/100-0000 module where no additional devices are powered through its PWR OUT connection (X32).

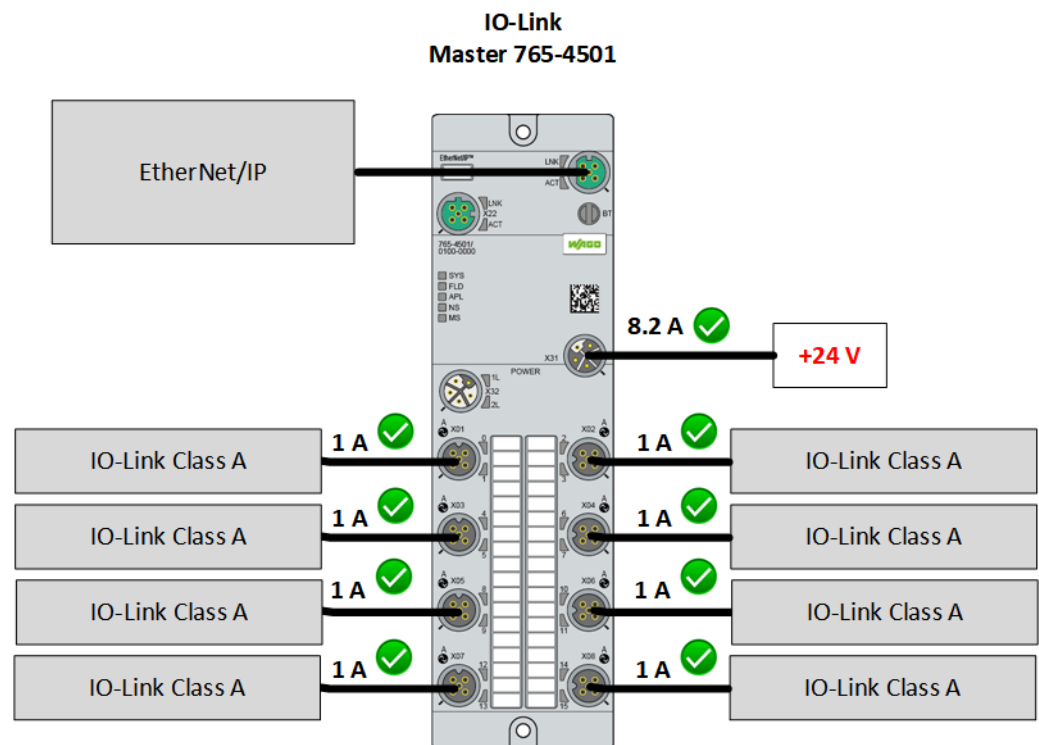


Figure 6: Connection Example for 765-4501/100-000 Module with Individual Power Supply

One IO-Link class A device with max. current consumption of 1 A is connected to each of ports X01 through X08 of the module. The module's current consumption is 0.2 A.

Supply cable 1 then has a total current consumption of $2 \times 2 \text{ A} + 0.2 \text{ A} = 4.2 \text{ A}$, and supply cable 2 has a total current consumption of $2 \times 2 \text{ A} = 4.0 \text{ A}$.

These do not exceed the maximum permissible value of 16 A per supply cable and are thus permissible.

Example of a Power Supply Group via PWR OUT

If you connect another device to the PWR OUT (X32) power supply output, this forms a supply group. The maximum permissible current feedthrough that this module can require is $16 \text{ A} - 4.2 \text{ A} = 11.8 \text{ A}$ for supply cable 1 (1L) and $16 \text{ A} - 4.0 \text{ A} = 12 \text{ A}$ for supply cable 2 (2L).

Example of a Power Supply Group with an IO-Link Hub

In what follows, we consider a power supply group consisting of a 765-4501/100-000 IO-Link Master and a 765-1701/200-000 IO-Link Hub. The two products are connected via IO-Link.

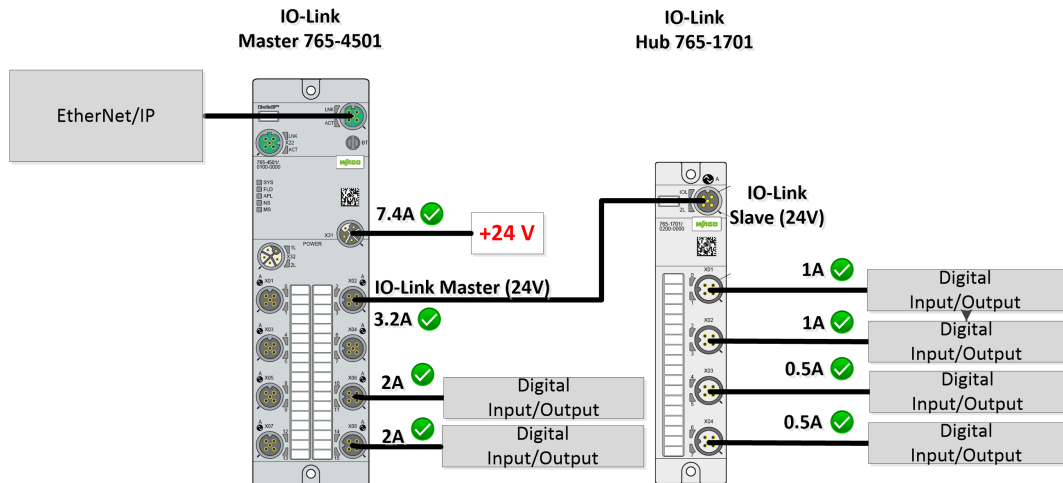


Figure 7: Power Supply Group with 765-4501/100-000 – Connection Example 1

Three devices are connected to the 765-4501/100-000 module:

- On port X01: the 765-1701/200-000 IO-Link Hub
- On port X03: one digital input/output with max. current consumption of 2 A (on pin 1)
- On port X04: one digital input/output with max. current consumption of 2 A (on pin 1)

Four devices are connected to the 765-1701/200-000 IO-Link Hub:

- On port X01: one digital input/output with max. current demand of 1 A (on pin 1)
- On port X02: one digital input/output with max. current demand of 1 A (on pin 1)
- On port X03: one digital input/output with max. current demand of 0.5 A (on pin 1)
- On port X04: one digital input/output with max. current demand of 0.5 A (on pin 1)

The current consumption of each of the two WAGO 765 Series products is 0.2 A.

Since the 765-1701/200-000 IO-Link Hub gets its operating voltage from the 765-4501/100-000 IO-Link master, port X01 (pin 1) of the module has a load of 3.2 A = 1 A + 1 A + 0.5 A + 0.5 A + 0.2 A, which is below the maximum load capacity of 4 A and thus permissible.

Port X02 is unused.

Ports X03 and X04 each have a load of 2 A, which is also below the maximum load capacity of 4 A and thus permissible.

Connection Example 2

Now we increase the current consumption on the two ports X01 and X02 of the 765-1701/200-000 IO-Link Hub to 2 A and check whether this is permissible:

The ports of the 765-1701/200-000 IO-Link Hub can withstand a constant load of 2 A. However, the effects on the 765-4501/100-000 product must be considered.

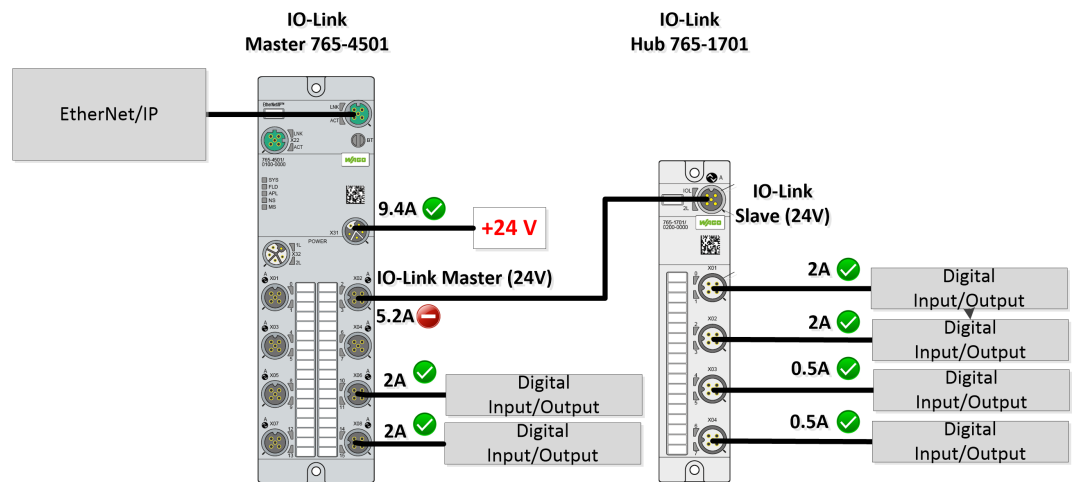


Figure 8: Power Supply Group with 765-4501/100-000 – Connection Example 2

To do so, we consider port X01 of the 765-4501/100-000 module:

This has a load of $5.2\text{ A} = 2\text{ A} + 2\text{ A} + 0.5\text{ A} + 0.5\text{ A} + 0.2\text{ A}$ on pin 1. This exceeds the maximum load capacity of 4 A and it thus not permitted.

If the currents on X01 and X02 of the 765-1701/200-000 IO-Link Hub were increased, the overload protection would constantly activate and could threaten destruction of the 765-4102/0100-000 IO-Link Master on its port X01.

6.3 Settings Options

6.3.1 Module Parameters

The “Exclusive Owner” connections 1, 5 and 9 and the “Input Only” connections 4, 8 and 12 require the following parameters and settings. The scanner transfers these parameters to the product when the connection is established.

Parameters 10 to 85

Parameters 10 to 15 configure IO-Link port X01.

Parameters 20 to 25 configure IO-Link port X02.

...

Parameters 80 to 85 configure IO-Link port X08.

Table 44: IO-Link Master Parameters

No.	Parametername	Value Range	Default	Description
10, 20, ...	IO-Link port X01/ X02/... – port mode	0 ... 4	2	Port operating mode (configuration of pin 4)
		0: deactivated		Pin 4 is deactivated.
		1: IOL manual		Pin 4 is operated as an IO-Link port with manual configuration.
		2: IOL autostart		Pin 4 is operated as an IO-Link port with automatic configuration (plug and play).
		3: digital input		Pin 4 is a digital input.
		4: Digital output		Pin 4 is a digital output.
11, 21, ...	IO-Link port X01/ X02/... – validation and backup	0 ... 4	0	Validation and backup settings
		0: no device check		The IO-Link master does not verify the compatibility of the connected IO-Link device.
		1: type-compatible with device V1.0		The IO-Link master uses the manufacturer ID and device ID to check whether the connected IO-Link device is compatible and supports specification V1.0.
		2: type-compatible with device V1.1		The IO-Link master uses the manufacturer ID and device ID to check whether the connected IO-Link device is compatible and supports specification V1.1.
		3: type-compatible with device V1.1, backup and restore		The IO-Link master uses the manufacturer ID and device ID to check whether the connected IO-Link device is compatible and supports specification V1.1. The IO-Link master uses backup and restore functions to back up the IO-Link device parameters and load them onto the IO-Link device after the device is replaced.
12, 22, ...	IO-Link port X01/ X02/... – IQ behavior	0 ... 2	5	Configuration of pin 2
		0: not supported		Pin 2 is not used.
		1: digital input		Pin 2 is a digital input.

No.	Parametername	Value Range	Default	Description
		2: digital output		Pin 2 is a digital output.
13, 23, ...	IO-Link port X01/ X02/... – port cycle time	0, 4 ... 191	0	Port cycle time 0: calculated by IO-Link master 4 ... 191: see table "Port Cycle Time" under 🔗 "Port Cycle Time" Parameter [p. 67]
14, 24, ...	IO-Link port X01/ X02/... – vendor ID	0, 1 ... 65535	0	Manufacturer ID If validation is used: expected manufacturer ID of the connected IO-Link device. Manufacturer ID: see the documentation of the IO-Link device used. Value 0 if no validation is used.
15, 25, ...	IO-Link port X01/ X02/... – device ID	0, 1 ... 16777215	0	Device ID If validation is used: expected device ID of the connected IO-Link device. Device ID: see the documentation of the IO-Link device used. Value 0 if no validation is used.

Parameters 90 to 96

Parameters 90 to 96 configure the module.

Table 45: Module Parameters

No.	Parametername	Value Range	Default	Description
90	DIO process data layout	0: port-based	0	Order of the process data of the digital in- puts and digital outputs: Bit 0 = port X01 pin 4, Bit 1 = port X01 pin 2, bit 2 = port X02 pin 4, bit 3 = port X02 pin 2, ...
		1: pin-based		Order of the process data of the digital in- puts and digital outputs: Bit 0 = port X01 pin 4, Bit 1 = port X02 pin 4, Bit 2 = port X03 pin 4, Bit 3 = port X04 pin 4, ... Bit 8 = port X01 pin 2, Bit 9 = port X02 pin 2, ...
91	DO substitute mode	0: set to low	0	Set all digital outputs to low level in the event of error
		1: use substitute val- ues		Set digital outputs to a pre-defined substi- tute value in the event of error. If this setting is used, the value of the "DO substitute value" parameter determines the substitute value.
		2: hold last state		Hold digital outputs at their last value in the event of an error.

No.	Parametername	Value Range	Default	Description
92	DO substitute values	0 ... 65535	0	Substitute value for the digital outputs if the "Use substitute values" setting is used. The input depends on the "DIO process data layout" parameter. Use a binary-to-decimal converter to calculate this value.
93	Disable force mode	0: enable force mode	0	The "Forcing" operating mode may be used.
		1: disable force mode		The "Forcing" operating mode must not be used.
94	Disable bluetooth	0: enable bluetooth	0	The Bluetooth® interface can be enabled by an optical signal of a mobile device and in connection with the WAGO I/O Field app.
		1: disable bluetooth		The Bluetooth® interface cannot be enabled by an optical signal of a mobile device and in connection with the WAGO I/O Field app.
95	Bluetooth timeout	6 ... 59 [s]	30	Switch-off time of the Bluetooth interface if not used. A new Bluetooth connection can be established by an optical signal after the Bluetooth interface is enabled again. The unit for the switch-off time is seconds. Entering 0 is not allowed, since the Bluetooth interface must always switch off after the switch-off time elapses.
96	Reserved	0	0	–

Parameters 100 to 147

Parameters 100 to 103, 132 and 140 configure IO-Link port X01.

Parameters 104 to 107, 133 and 141 configure IO-Link port X02.

...

Parameters 128 to 131, 139 and 147 configure IO-Link port X08.

Table 46: Port Parameters

No.	Parametername	Value Range	Default	Description
100, 104, ...	DI port X01/X02/... – CQ pin polarity	0: normally open	0	Pin 4 is a digital input. The input signal is not inverted.
		1: normally closed		Pin 4 is a digital input. The input signal is inverted.
101, 105, ...	DI port X01/X02/... – CQ pin signal filter	0: deactivated	0	No filter active for detecting a signal change of the pin 4 digital input signal.
		3: 3 ms filter time		Filter time setting for detecting a signal change of the pin 4 digital input signal. The filter time is the amount of time the signal must be present in order for a signal change to be detected.
		15: 15 ms filter time		
		20: 20 ms filter time		
102, 106, ...	DI port X01/X02/... – IQ pin polarity	0: normally open	0	Pin 2 is a digital input. The input signal is not inverted.
		1: normally closed		Pin 2 is a digital input. The input signal is inverted.
103, 107, ...	DI port X01/X02/... – IQ pin signal filter	0: deactivated	0	No filter active for detecting a signal change of the pin 2 digital input signal.

No.	Parametername	Value Range	Default	Description
		3: 3 ms filter time		Filter time setting for detecting a signal change of the pin 2 digital input signal. The filter time is the amount of time the signal must be present in order for a signal change to be detected.
		15: 15 ms filter time		
		20: 20 ms filter time		
132, 133, ...	DO port X01/X02/... – IQ pin mode	0: normal	0	Pin 2 is a digital output.
		1: static on		Pin 2 is a digital output and switched on (+24 VDC).
140, 141, ...	DO port X01/X02/... – CQ pin mode	0: normal	0	Pin 4 is a digital output.
		1: static on		Pin 4 is a digital output and switched on (+24 VDC).

6.3.1.1 “Port Cycle Time” Parameter

The “Port Cycle Time” parameter contains a factor (bits 0 to 5) and a time basis (bits 6+7). The following table describes how the port cycle time is calculated from the factor and the time basis.

Table 47: “Port Cycle Time”

Value Range	Time Basis (Bits 6+7)	Factor (Bits 0 ... 5)	Port Cycle Time (Formula)	Example
0	–	0	As fast as possible	0
1 ... 3	–	–	This value range is reserved.	–
4 ... 63	0.1 ms (00)	4 ... 63	0.1 ms × factor	4: 400 µs
				16: 1.6 ms
				32: 3.2 ms
				48: 4.8 ms
64 ... 127	0.4 ms (01)	0 ... 63	6.4 ms + 0.4 ms × factor	68: 8.0 ms
				93: 18.0 ms
				100: 20.8 ms
128 ... 191	1.6 ms (10)	0 ... 63	32 ms + 1.6 ms × factor	133: 40.0 ms
				158: 80.0 ms
				183: 120.0 ms
192 ... 255	Reserved (11)	0 ... 63	This value range is reserved.	–

Transport and Storage

The original packaging offers optimal protection during transport and storage.

- Store the product in suitable packaging, preferably the original packaging.
- Only transport the product in suitable containers/packaging.
- Make sure the product contacts are not contaminated or damaged during packing or unpacking.
- Observe the specified ambient climatic conditions for transport and storage.

Installation and Removal

8.1 Installation

8.1.1 Tools Required for Installation

The following tools are required for installation:

- Allen wrench for the M4 hex head mounting screws

The following additional items are only required for installation where no threaded hole is present:

- M4 thread cutter (bottoming tap or hand tap set)
- Drill (for pre-drilling mounting holes for the module and installing the system)

You also need two M4 cylinder head hex screws per DIN 912 / ISO 4762 of adequate length.

8.1.2 Before Installation

Always note the following information:

- The product must only be installed and put into operation by qualified electrical specialists per EN 50110-1/-2 and IEC 60364.
- Observe the safety information in section  **Safety**  **11**.
- Before installation, check the product for damage, such as transport damage. Damaged products must not be put into operation.

8.1.3 Installation Instructions

Note the following for selection of the installation location:

- Install the product in such a way that it is protected against weather exposure (no direct sunlight; no salt water or spray).
- Note that the module should not be installed in the immediate vicinity of objects or devices that can get hot. For a high level of module utilization, the temperature-dependent operating range can be extended by installing metal surfaces or profiles or the like, or by installation in a ventilated outdoor environment. The modules' internal temperature measurement can be used for optimization.
- Screw the product down only on flat contact surfaces to protect it from mechanical warping.
- To protect the product from tensile forces that may arise, do not bridge spaces with it.
- To avoid damaging the product, do not mount it in shearing zones of moving devices. Furthermore, lay the cables in such a way that they cannot get into the shearing zone of movable equipment parts.
- Leave sufficient space for easy product replacement and for hooking up the pluggable connections.
- Ensure that the requirements on the product concerning exposure to vibration and shock are met at the installation location.
- Install the product in such a way that the product's diagnostic LEDs remain visible.

Note the following concerning the installation procedure:

- Disconnect the power supply from the system before beginning mounting
- Ensure sufficient potential equalization in your system

- When mounting, be sure not to contaminate the connections. The contamination damages the contacts, which can limit the reliability of the contacts.

8.1.4 Note on Protecting against Heat Generation by the Product

During operation, the product can get hot! Therefore, always note the following information:

- Cooling of the product must not be impaired
- Ensure that the air supply is unobstructed
- Do not install the product near sources of strong heat
- Do not install the product on or in the vicinity of easily flammable materials

8.1.5 Installation Distances

No particular distances need to be maintained between the modules, or between a module and a cabinet door or cover. The installation distances are determined exclusively by the plugs and cables used and their bending radii. Depending on the housing, a field-assembly pluggable connector may protrude past the edge of the housing.

Where high surrounding air temperatures occur at the same time as high current loads, modules should not be installed directly next to each other, to prevent them from each other and to give them a large surface to dissipate heat to the surrounding air.

8.1.6 Installation

You can install the product directly on your equipment with screws. Mount the product on a flat, fixed surface with two screws, each of which screws into a threaded hole. You can find the tightening torque specifications in [🔧 Mechanical Data \[► 17\]](#).

The procedure for this is as follows:

1. Hold the product up to the desired position and mark the two locations where the threads should be cut. Ensure that there is sufficient space around the product to enable you to connect all cables without difficulty.
2. With the M4 thread cutter, cut one M4 thread at each of the marked locations. If applicable, pre-drill with the drill.
3. Use the Allen key to screw the product into the threaded holes with two M4 cylinder head screws of adequate length on the top and bottom. Observe the tightening torque.

8.1.7 After Installation

Note the information on grounding.

8.1.8 Grounding

Functional Ground

The L-coded M12 pluggable connectors of the product's power supply have one FE (functional ground) pin, which is connected to the metal housing of the product. The metal housing in turn has a central grounding point for functional ground. You can ground the module as follows:

- Grounding via the metal housing, and/or
- Grounding via functional ground of the power supply connection, and/or
- Grounding can be done separately via a cable lug and the mounting hole if the module is installed on a non-conductive subsurface

Ensure proper contacts and a sufficient cable cross-section.

8.2 Removal

8.2.1 Tools Required for Removal

For removal, you need an Allen key to unscrew the M4 cylinder head hex screws per DIN 912/ISO 4762.

8.2.2 Before Removal

CAUTION

Device gets hot

During operation, high surface temperatures can arise on the metal housing and metal connection sockets. If the product has been in operation, allow it to cool before touching it, or use gloves.

Prepare for removal as follows:

1. If the product is contaminated, clean it before removal. It is especially important to clean contaminated screw-clamp connections.
2. Before removal, loosen all screw connections on the connectors and disconnect the cables.
3. Ensure that the equipment part on which you mounted the product is de-energized.
4. Unscrew the two M4 cylinder head screws and remove the product.

8.2.3 Removal

To remove the product, e.g., when replacing a device, proceed as follows:

1. Ensure that the equipment part on which you mounted the module is de-energized.
2. Unscrew the two M4 cylinder head screws with the Allen key.
3. Remove the product.

8.2.4 After Removal

If the product that has been removed is defective, mark it as defective to prevent reuse of the product.

Connection

9.1 General Information on Installation

When laying cables, the local conditions and the applicable regulations are crucial for implementation.

Be sure to maintain the minimum clearances between the cabling and possible sources of interference (including machines, welding equipment and power lines) to prevent loss and corruption of data. For planning and installation of a system, observe the regulations and standards.

Mechanical Stress

Protect the cables against mechanical stress. Observe the following information:

- Select the correct type of cable for the application Ensure a sufficient wire cross-section
- Take the minimum bending radius into account
- Ensure that cables cannot get in the shearing zone of movable machine parts
- Do not lay the cables across transport paths and the paths of machine movements
- Use cable ducts or cable bridges

Interference

Follow the following instructions to reduce interference:

- Lay network cables (e.g., fieldbus cables) in their own cable ducts
- Do not lay network cables parallel to power supply cables through which high power flows
- When installing shielded pluggable connectors (screws, cap nuts), ensure the best possible contact between the shielding and ground. Before initial commissioning, check the grounding or shielding connection of the cables for low-resistance conductivity.

Protective Caps

Cover all unused connections with protective caps to protect the connections and ensure compliance with the requirements of protection type IP67.

Grounding Concept

There are basically two grounding options, which can also be used simultaneously:

- Via cable
- Via the housing

The I/O System Field operates in the extra-low voltage range (SELV/PELV). In these devices, interference is discharged via functional ground (FE). Functional ground (FE) is merely for discharging interference. It does not provide touch-proof protection for persons. Functional grounding is essential for fault-free operation of the device.

If you wish to perform additional grounding via the metal housing:

- Use conductive mounting screws on the mounting holes and ensure there is a good contact there
- Ensure that the mounting surface is level

9.2 Connect Power Supply

Two voltages are distinguished for the I/O System Field:

- 1L to power the logic and sensors/actuators
- 2L to power actuators (separate actuator supply)

All supply voltages are connected via L-coded M12 pluggable connectors.

NOTICE

Damage to electronics

Connect each of the supply voltages (each to +24 V and 0 V) completely. Connecting multiple supply voltages through one 0 V connection is not permitted, since this would exceed the current load capacity of the contacts.

Power Supplies 1L and 2L

The voltages 1L and 2L are electrically isolated and are fed in on connection X31.

The 1L power supply is required to power the module electronics and the connected sensors/actuators. Connect it to connection X31. If you want to power additional products through this current path, connect the cable for the additional power supply to connection X32.

The following procedure is especially advantageous:

- Install the power supply for the module electronics independently of the power supply for the actuators
- Provide independent fuse protection for the power supplies

This allows the network to continue to run even when peripheral parts are switched off.

NOTICE

Damage to electronics

The current load capacity of the L-coded M12 pluggable connector is 16 A per current path (1L or 2L). This value must not be exceeded. To limit the sum of current paths 1L and 2L even in the event of short circuit, it may be necessary to provide fuse protection for them. For the calculation of the maximum permissible current feedthrough, see

 [Power Supply Examples \[p. 60\]](#).

Note that the connection for the additional supply voltage is not monitored for overload. If the maximum current carrying capacity is exceeded, this can damage the pluggable connectors.

WAGO recommends using pre-assembled cables.

The following figure gives an example of feeding in and passing on the supply voltages:

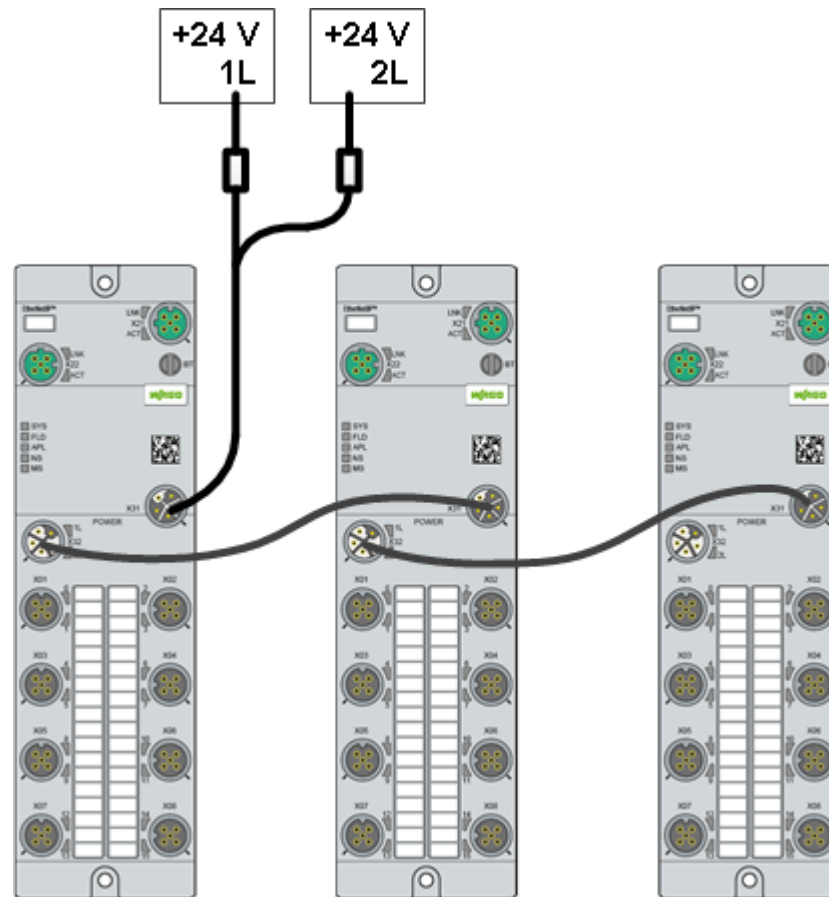


Figure 9: Example of Feeding in and Passing on the Supply Voltages

In connection with this figure, note that the cables illustrated for current paths 1L and 2L are realized not as separate cables, but rather as separate wires within one common cable.

Supply Cable and Power Supply (M12)

Take the current load capacities into account. In this regard, see [🔗 Design Power Supply \[► 55\]](#).

! NOTICE

Damage to electronics

For passthrough of the supply voltage, the following should be noted:

The maximum total current permitted on 1L is 16 A.

The maximum total current permitted on 2L is 16 A.

The temperature also affects the permissible total current. To take the effects of higher temperatures into account, note the information on temperature-dependent derating in [🔗 Derating \[► 22\]](#).

Example Calculations

You can find examples for calculating the maximum permissible current feedthrough under Power Supply Examples.

To determine whether long cable lengths still supply the product with sufficient voltage, the voltage losses on the cable can be calculated as follows:

$$U = 2 \times I \times R$$

where:

U	Voltage drop
2	Factor for feed and return lines
I	Current
R _L	Cable resistance

For WAGO 4 × 1.5 mm² supply cables, the cable resistance R_L per wire R_L ≤ 13.7 Ω/km.

Example of Voltage Drop for Feed and Return Lines with a Current of 8 A on the WAGO 4 × 1.5 mm² Supply Cable

$$U = 2 \times 8 \text{ A} \times 13.7 \text{ Ω/km} = 219.2 \text{ V/km}$$

This corresponds to a voltage drop of 2.19 V per 10 m of cable length for feed and return lines.

Example of Voltage Drop per Wire with a Current of 16 A on a 4 × 2.5 mm² Supply Cable

$$U = 2 \times 16 \text{ A} \times 8.22 \text{ Ω/km} = 263 \text{ V/km}$$

This corresponds to a voltage drop of 2.63 V per 10 m of cable length.

If the resistance of the cable used is not known, it can be calculated approximately with the following formula:

$$R_L = l / (K \times A)$$

where:

R _L	Cable resistance
l	Cable length
K	Specific cable resistance of the conductor material (usually copper) according to manufacturer's specifications
A	Cable cross-section

Example Calculations

You can find examples for calculating the maximum permissible current feedthrough under [🔗 Power Supply Examples \[► 60\]](#).

9.3 Connecting Cables

WAGO recommends using 765 Series connecting cables, pluggable connectors and accessories for 756 Series products, which have been tailored specifically to the WAGO I/O System Field.

The tightening torques given in section [🔗 Connection Technology \[► 18\]](#) apply to the pluggable connectors of the connecting cables.

9.4 Connecting the Fieldbus

To establish a connection to an EtherNet/IP scanner, it is necessary to connect the module to an ETHERNET network.

To establish a connection to an IO controller, connect the product to a network with a transmission rate of 100 Mbit/s in full duplex operation.

You can find the connection assignment for the ETHERNET ports under  **ETHERNET Interfaces** [► 16].

If you do not use a pre-assembled ETHERNET cable, a shielded M12 plug with protection type IP 67 should be connected to it.

For a cable that is pre-assembled on one end only (e.g., item no. 756-1201/060-xxx), proceed as follows to connect it to an RJ45 plug (e.g., item no. 750-975):

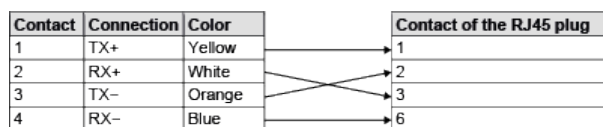


Figure 10: RJ45 Pin Assignment

Because the Auto MDI(X) functionality is enabled for the respective ETHERNET connection, a crossover cable is not necessary. This functionality automatically detects the direction for sending data and receiving data, so it is irrelevant which cable type is used (crossed or uncrossed).

Connecting an Individual Product to an ETHERNET Network

To connect the product to the ETHERNET network, proceed as follows:

1. Disconnect the power supply from the equipment parts on which you have mounted the module.
2. Connect the product to the ETHERNET network by plugging the socket of the ETHERNET cable onto the X21 connection.
3. Tighten the pluggable connector using the knurled-head screw.

Connecting Multiple Products to One ETHERNET Network

The fieldbus module of the WAGO I/O System Field has two connections with an integrated switch to allow wiring of a line topology.

The network topology in the following figure consists of a mixed star and line topology. An ETHERNET switch is required in order to set up a star topology or a mixed topology. The number of products in a star topology is limited only by the IEEE 802.3 Ethernet specification.

Multiple products can be connected to the ETHERNET network as shown in the following example:

1. De-energize the section of your system to which you wish to mount the product.
2. For the star topology, connect each ETHERNET cable (W1, W2) to port X21 of one 765 Series product and one ETHERNET switch as shown in the following figure. Then tighten the plugs of the ETHERNET cable.
3. For a line topology, connect the ETHERNET cables (W3, W4) to ports X21 and X22 on the product as shown in the following figure. Then tighten the plugs of the ETHERNET cable.

The following figure shows a mixed star and line topology:

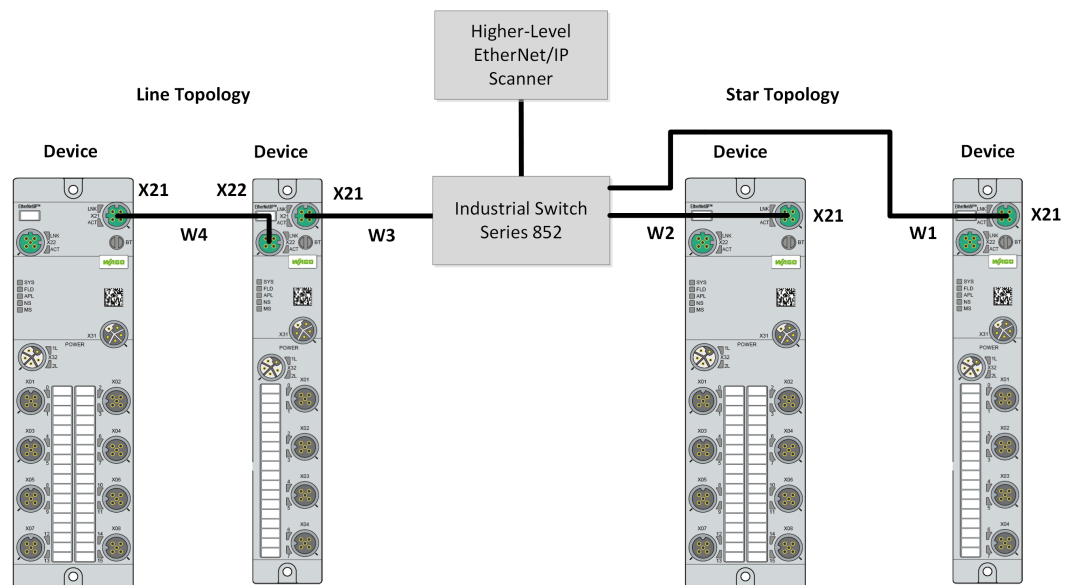


Figure 11: Network Topology (Module Appearance May Differ)

9.5 Connect Sensors/Actuators

The sensor/actuator cable powers the connected sensors/actuators and transfers the sensor and actuator signals.

Note the current load capacity of the supply contacts; see “Rule 3,” section *Rule 3: Ports X01, X02 etc.* in [🔧 Design Power Supply \[► 55\]](#).

The following figure shows the potential routing of the two load circuits within the module.

If a port is operated in IO-Link mode, then at most 1 A can flow through pin 1 and pin 3 without additional measures. The use of standard cables allows lengths up to 20 m as long as the current remains under 1 A.

Higher currents are possible and require a larger cable cross-section or shorter cable length to keep the voltage drop for the outgoing and return paths below 1.2 V.

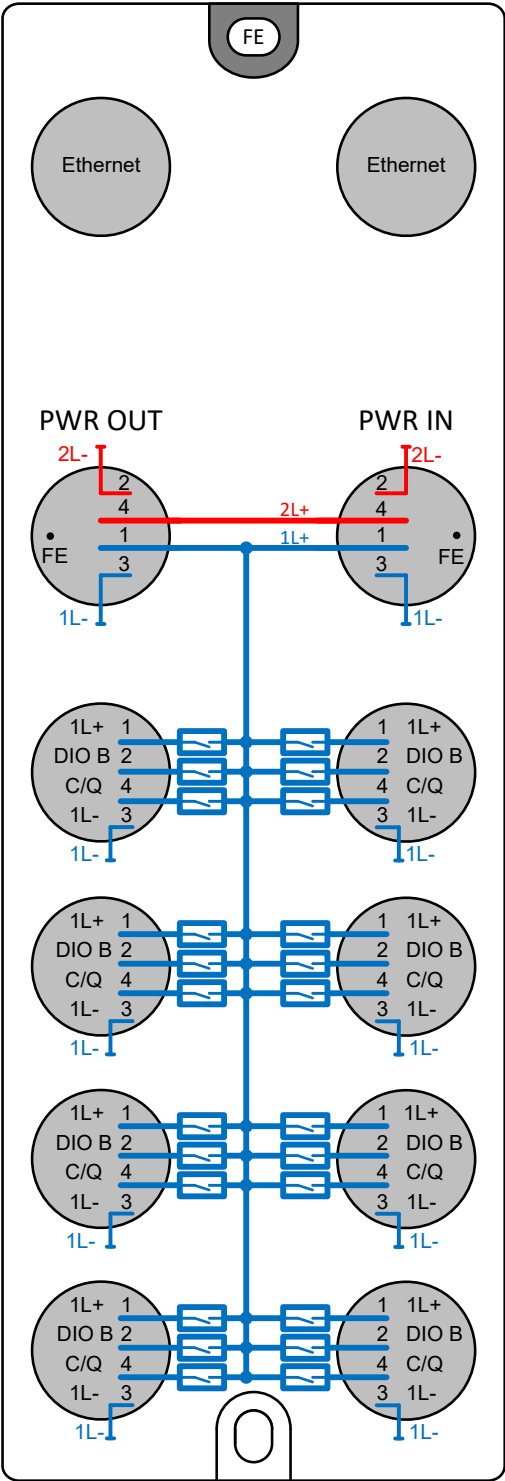
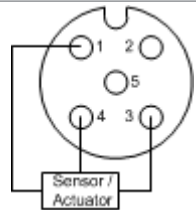
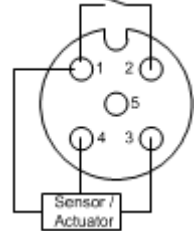
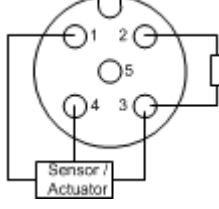
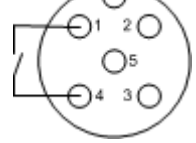
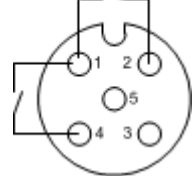
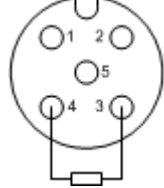
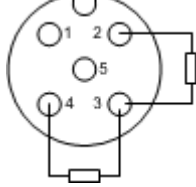
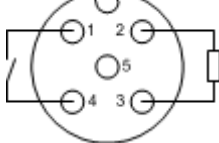
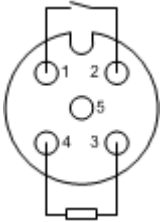


Figure 12: Schematic Circuit Diagram of the Power Supply

The following table shows the connection options for IO-Link devices (class A) and digital inputs and outputs.

Table 48: Connecting an IO-Link Device or Digital Input or Output

Connection Option	Description
	Connection of an IO-Link device Required port configuration: IO-Link master and pin 2 disabled.
	Connection of an IO-Link device and a digital input on channel B. Required port configuration: IO-Link master and pin 2 as a digital input.
	Connection of an IO-Link device and a digital output on channel B. Required port configuration: IO-Link master and pin 2 as a digital output.
	Connection of a digital input at channel A. Required port configuration: pin 4 as digital input and pin 2 disabled.
	Connection of two digital inputs on channels A and B. Required port configuration: pin 4 and pin 2 as digital inputs.
	Connection of a digital output on channel A. Required port configuration: pin 4 as a digital output and pin 2 disabled.
	Connection of two digital outputs on channels A and B. Required port configuration: pin 4 and pin 2 as digital outputs.
	Connection of a digital input on channel A and a digital output on channel B. Required port configuration: pin 4 as a digital input and pin 2 as a digital output.

Connection Option	Description
	Connection of a digital output on channel A and a digital input on channel B. Required port configuration: pin 4 as a digital output and pin 2 as a digital input.

Commissioning

Note

The figures and descriptions below are an example configuration

The figures and descriptions this section contains are based on an example configuration.

Your configuration, and thus the content shown, may differ from the content illustrated here.

10.1 Getting the IP Address from a DHCP Server

The module requires an IP address so it can be addressed via the ETHERNET network. It has no IP address when delivered. As soon as the module starts up, it sends queries to a DHCP server to get an IP address.

If there is already a DHCP server on the network, ask your network administrator for the IP address assigned to the module and use its MAC address for identification.

Using a DHCP Server on Your Computer

If no DHCP server exists on the network, or you want to use a DHCP server on the local network for test purposes, you can use Open DHCP Server, for example.

Please note:

- If a DHCP server is installed on your computer, you should never connect it to a larger network. Since global networks usually have a DHCP server, collisions could occur and crash the network.
- Only use a DHCP server on your computer if there is no DHCP server on the network.

Installing and Using Open DHCP Server

You can install Open DHCP Server on your computer. To configure the DHCP server, you need the IP address of your computer's network connection. On Windows, you can use the `ipconfig` command to show your computer's IP address(es).

Proceed as follows:

1. Launch the "ETHERNET Device Configuration" software.
2. Download Open DHCP Server from  <http://dhcpserver.sourceforge.net/>
3. Install Open DHCP Server.
4. In the Open DHCP Server installation directory, open the `OpenDHCPServer.ini` file in a text editor.
5. Under `[LISTEN_ON]`, enter the IP address of your computer's network card on which the DHCP server should work.
6. Save the `OpenDHCPServer.ini` file.
7. Under `[RANGE_SET]`, enter the IP address range the DHCP server is allowed to assign.

8. Then run the `RunStandAlone.bat` file.

⇒ The DHCP server is now ready.

⇒ In the output window, Open DHCP Server shows the query and the assigned IP address.

10.2 Configuration

10.2.1 Configuring the Module via EtherNet/IP

For the EtherNet/IP scanner and EtherNet/IP adapter to exchange process data, you need to configure the EtherNet/IP scanner. This requires the device description file (EDS file) for the module used:

- `wago_07654501.eds`

Carry out the following steps in the configuration software of the EtherNet/IP scanner used:

- Import the EDS file.
- Select the module from the device catalog.
- Add the module to the configuration project.
- Select a connection: connection 1, connection 2 etc.
- Set the parameters.

The individual steps are describe in detail below.

10.2.1.1 Selecting the Module

Select the module used from the device catalog.

Module: 765-4501/100-000

Designation: 8 PORT IOL-A FLD EI 24 VDC 2.0 A

10.2.1.2 Selecting a Connection

The module offers multiple connections. Select a connection for your application. By selecting the connection, you determine the following:

- Connection type: "Exclusive owner," "Input only" or "Listen only"
- Whether or not the scanner transfers the port parameters to the product
- Maximum amount of IO-Link process data of all connected IO-Link devices: 4, 16 or 32 bytes

Connection Type

The module offers multiple connection types:

- Input only: The scanner can only read input process data. This is the default connection type.
- Listen only: The scanner can only read input process data. This connection type requires another scanner that establishes an "Input only" connection to the product.

Scanner Sends IO-Link Parameters to the Module (Only for Modules with IO-Link Master Ports)

With “Exclusive Owner without Config” and “Listen Only” connections, the scanner does not transfer any port parameters. For these connection types, the port parameters are set with a different tool. You can find an overview of the tools you can use to set the port parameters under  [Parameterization Tools \[► 48\]](#).

With “Exclusive Owner” and “Input Only” connections, the scanner transfers the port parameters to the module that you set up previously with the scanner’s configuration software. The scanner sends these parameters to the module every time a connection is established.

Maximum Amount of IO-Link Process Data

By selecting the connection, you determine the maximum number of bytes of the IO-Link process data, which applies to all connected IO-Link devices: 4, 16 or 32 bytes. By selecting the connection, you also specify the process data memory required in the controller.

If you use one or more IO-Link device with more than 16 bytes of IO-Link process data, select a connection with “... 32 bytes per IO-Link port.” This connection requires 276 input data bytes and 276 output data bytes in the controller.

If you use only IO-Link devices with 16 bytes of IO-Link process data or less, and you would like to use less process data memory in the controller, select a connection with “... 16 bytes per IO-Link port.” This connection requires 148 input data bytes and 148 output data bytes in the controller.

If you use only IO-Link devices with 4 bytes of IO-Link process data or less, and you would like to use as little process data memory in the controller as possible, select a connection with “... 4 bytes per IO-Link port.” This connection requires 52 input data bytes and 52 output data bytes in the controller.

List of Connections

Table 49: Connections

Connection	Name	Description
Connection 1	Exclusive Owner – 32 bytes per IO-Link port	- Standard connection - The port parameters are set with the configuration software of the scanner and transferred to the module through this connection. - The scanner can read the module’s input data and write the output data. - IO-Link devices with up to 32 IO-Link input and output data points each can be used.
Connection 2	Exclusive Owner – 32 bytes per IO-Link port without config	- No port parameters are transferred to the module through this connection. - The scanner can read the module’s input data and write the output data. - IO-Link devices with up to 32 IO-Link input and output data points each can be used.
Connection 3	Listen only – 32 bytes per IO-Link port	- No port parameters are transferred to the module through this connection. - The scanner can read the module’s input data. - An additional scanner that communicates with module via an “Exclusive Owner” connection is necessary. - IO-Link devices with up to 32 IO-Link input and output data points each can be used.

Connection	Name	Description
Connection 4	Input Only – 32 bytes per IO-Link port	- The port parameters are set with the configuration software of the scanner and transferred to the module through this connection. - The scanner can read the module's input data. - IO-Link devices with up to 32 IO-Link input and output data points each can be used.
Connection 5	Exclusive Owner – 16 bytes per IO-Link port	- Standard connection - The port parameters are set with the configuration software of the scanner and transferred to the module through this connection. - The scanner can read the module's input data and write the output data. - IO-Link devices with up to 16 IO-Link input and output data points each can be used.
Connection 6	Exclusive Owner – 16 bytes per IO-Link port without config	- No port parameters are transferred to the module through this connection. - The scanner can read the module's input data and write the output data. - IO-Link devices with up to 16 IO-Link input and output data points each can be used.
Connection 7	Listen Only – 16 bytes per IO-Link port	- No port parameters are transferred to the module through this connection. - The scanner can read the module's input data. - An additional scanner that communicates with module via an "Exclusive Owner" connection is necessary. - IO-Link devices with up to 16 IO-Link input and output data points each can be used.
Connection 8	Input Only – 16 bytes per IO-Link port	- The port parameters are set with the configuration software of the scanner and transferred to the module through this connection. - The scanner can read the module's input data. - IO-Link devices with up to 16 IO-Link input and output data points each can be used.
Connection 9	Exclusive Owner – 4 bytes per IO-Link port	Like connection 5, but IO-Link devices with at most 4 IO-Link input and output data points.
Connection 10	Exclusive Owner – 4 bytes per IO-Link port without config	Like connection 6, but IO-Link devices with at most 4 IO-Link input and output data points.
Connection 11	Listen Only – 4 bytes per IO-Link port	Like connection 7, but IO-Link devices with at most 4 IO-Link input and output data points.
Connection 12	Input Only – 4 bytes per IO-Link port	Like connection 8, but IO-Link devices with at most 4 IO-Link input and output data points.

10.2.1.3 Setting Parameters

Set the module and port parameters in the configuration software of the EtherNet/IP scanner to define the behavior of the module and the required port functions for use of the connected sensors and actuators.

You can find all the module parameters under  **Module Parameters** [\[► 64\]](#).

10.3 Parameterization

The following tools are described below:

-  **WAGO Webserver I/O Field** [\[► 85\]](#)

-  **WAGO IO-Link Configurator** [► 112]
-  **WAGO I/O Field app** [► 112]
-  **OPC UA Server** [► 112]

10.3.1 WAGO Webserver I/O Field

10.3.1.1 Call WAGO Webserver I/O Field

This section describes how you can use the integrated software WAGO I/O Field Webserver to get access to detailed information on the current operating state of the product and make settings to affect the product's behavior.

- ✓ Requirement: Opening the user interface of WAGO I/O Field Webserver requires that product's IP address is configured and known.

- Proceed as follows:

Enter the following text in the address bar of your Web browser to address the product:

`http://<IP-address-according-to-configuration>`

e.g., `http://192.168.10.2`.

- ⇒ The WAGO I/O Field Webserver **Dashboard** appears. You can now use the functions described below.

10.3.1.2 User Interface of the WAGO Webserver I/O Field



WAGO Webserver I/O Field

guest connected
role: guest

Dashboard

License

Port X01

Port X02

Port X03

Port X04

Port X05

Port X06

Port X07

Port X08

Settings

Sign In

Device information

Vendor name: WAGO Kontakttechnik GmbH & Co. KG
Vendor address: Hansastr. 27, 32423 Minden, Germany
Vendor phone: +49 571-887-0
Vendor URL: www.wago.com
Description: WAGO 765-4501
Item no.: 765-4501/0100-0000
Hardware name: 8 Port IO-Link Master Class A 24V 2.0A
Software name: EtherNet/IP Firmware (375)
Unique Item ID: UN315640102
60422320
0000000000021008

Device version

Hardware revision: 2
Software version: V1.1
Webpage version: V1.1.3.3

Maintenance information

Name:
Installation location:
Contact information:
Description:
Installation date:
Last service date:
Next service date:

IOL device information

1L mean voltage: 23.6 V
1L total current: 0.4 A
Mean temperature: 37.4°C

Figure 13: **Dashboard** Menu Item, Main Page (Example View)

When the user interface of the WAGO I/O Field Webserver opens, the main page of the **Dashboard** appears first.

It shows the following product information:

Table 50: Data on the "Dashboard" Page

Section	Information Displayed
Device information	Product data and WAGO contact information

Section	Information Displayed
Device version	Information on the product version: Hardware name and version number Software name and version number Website version number
Maintenance information	Maintenance information in text form
IOL device information	Advanced module and port information (measurement data on the module state)

10.3.1.2.1 Maintenance Information

The maintenance information includes information in text form that the user can set, e.g., the product name, installation location and date, contact information, description and date of the last and next product service. The texts can be edited by selecting **Settings** from the menu on the **Maintenance information** tab.

10.3.1.2.2 Advanced Module and Port Information

The advanced module and port information includes the following measurement data that is measured by the integrated sensors in the module:

- The module temperature
- The supply voltage (for supply cables 1L and 2L)
- The sum of all currents (for supply cables 1L and 2L)

10.3.1.2.3 Displaying Licenses

The **Licenses** menu item displays the page of the same name.

The menu item contains the following information:

- A list of the licensed software components the product contains
- A link for each licensed software component to the associated license terms

10.3.1.3 Opening the Product Information via WAGO Webserver I/O Field

10.3.1.3.1 Displaying Port Information

For each of the module's IO-Link ports (port X01, port X02 etc.), individual port information can be found on the **Information**, **Status**, **Configuration**, **IOL** and **Process data** tabs.

The **Configuration** tab also offers the option of making port settings.

You can access the port information as follows:

1. From the main menu of the Webserver (left), select the menu item „Port X0i“ which you want to view information about.
⇒ The **Information** tab opens.
2. Click the desired tab.
⇒ You can now access information about the desired port.

For each port, you can select from the following five tabs:

Table 51: Tabs for Port Information and Settings (IO-Link Ports X01, X02 etc.)

Tab	Description
Information	Displays the current measured values for temperature, voltage and current, as well as the port state, individually for each of pin 1, pin 2 and pin 4. If an IO-Link device is connected to the port via pin 4, its product data is also shown. This tab is pre-configured.
Status	Displays status information for the entire port
Configuration	For displaying and setting port parameters, such as the operating time or cycle time of the port
IOL	Read/write access to data of one of the IO-Link devices connected to the port
Process data	Displays the process data

10.3.1.3.2 Displaying Measured Values and Information on Connected IO-Link Devices

The screenshot shows the WAGO Webserver I/O Field interface. On the left is a sidebar with a menu: Dashboard, Port X01, Port X02, Port X03 (connected), Port X04 (connected), Port X05, Port X06, Port X07, Port X08, DIOForcing, IOLForcing, Settings, and Sign out. The main area is titled 'WAGO Webserver I/O Field' and 'Port X01'. It has five tabs: Information (selected), Status, Configuration, IOL, and Process Data. Under the 'Information' tab, there are three sections: 'Port Diagnosis - Pin 1', 'Port Diagnosis - Pin 2', and 'Port Diagnosis - Pin 4'. Each section lists Temperature, Voltage, Current, and Connector status.

Port Diagnosis - Pin 1	
Temperature	40.4°C
Voltage	23.4 V
Current	0.1 A
Connector	OK

Port Diagnosis - Pin 2	
Temperature	45.2°C
Voltage	22.6 V
Current	0.1 A
Connector	OK

Port Diagnosis - Pin 4	
Temperature	40.4°C
Voltage	-0.1 V
Current	0.0 A
Connector	OK

Figure 14: Information Tab, Port X0i Menu Item (Example View)

The **Information** tab shows the following information:

- The measured values and states of the port diagnostics
- The information on connected IO-Link devices

Displaying Pin- and Port-Specific Measured Values and States

The **Information** tab shows the following current measured values for each of pin 1, pin 2 and pin 4 of the selected port:

- Temperature of the pin, measured in °C
- Voltage on the pin, measured in volts
- Current flowing through the pin, measured in amperes
- State of the connection pin

States of the Connection Pin

The possible states of the connection pin are:

- OK
- Short circuit

- Module-internal overload protection has triggered
- Module-internal overtemperature protection has triggered
- Module-internal overvoltage protection has triggered
- Overcurrent
- Undercurrent
- Overtemperature
- Undertemperature
- Overvoltage
- Undervoltage
- Module-internal watchdog timer has elapsed

Displaying Information on Connected IO-Link Devices

On IO-Link ports on which an IO-Link device is connected and recognized by the product's firmware, the following product information is also displayed in the **Device information** block:

The screenshot shows the WAGO Webserver I/O Field interface. On the left is a sidebar with navigation links: Dashboard, Port X01, Port X02, Port X03 (labeled 'lfrn electronic zmbh OSD150'), Port X04 (labeled 'Wago Kontakttechnik GmbH u. Co KG Hubline'), Port X05, Port X06, Port X07, Port X08, DIOForcing, IOLForcing, Settings, and Sign out. The main area is titled 'Port X04' and has tabs for Information, Status, Configuration, IOL, and Process Data. The 'Information' tab is active, showing a 'Device information' section with a table of product data. Below this are 'Port Diagnosis' sections for Pin 1, Pin 2, and Pin 4, each with a table of diagnostic data.

Device information	
Min cycle time	0x14
Function ID	0
Number of profile IDs	1
Vendor name	Wago Kontakttechnik GmbH u. Co KG
Vendor text	Wago IO-Link Hubline
Product name	Hubline 765-1703/0200-0000
Product ID	765-1703
Product text	IO-Link DIO Hubline Slave Device
Serial number	0000000000020010
Hardware revision	V1.0
Firmware revision	IO-Hub V1.0.0.5

Port Diagnosis - Pin 1	
Temperature	40.1°C
Voltage	23.5 V
Current	0.1 A
Connector	OK

Port Diagnosis - Pin 2	
Temperature	45.3°C
Voltage	22.7 V
Current	0.1 A
Connector	OK

Port Diagnosis - Pin 4	
Temperature	40.1°C
Voltage	19.1 V
Current	0.0 A
Connector	OK

Figure 15: **Information** Tab, **Port X0i** Menu Item (Example View)

Table 52: Additional Information on the Products Connected to the Selected Port

Information	Description
Min cycle time	Minimum cycle time supported by the connected product, in units of 0.1 milliseconds
Function ID	Function ID of the connected product
Number of profile IDs	Number of profile IDs in the profile characteristic (index 0x000D) of the connected product
Vendor name	Detailed name of the manufacturer/vendor of the connected device (up to 64 characters)
Vendor text	Additional text for description of the manufacturer/vendor (up to 64 characters)
Product name	Complete name of the connected product (up to 64 characters)

Information	Description
Product ID	Manufacturer-specific product or type information on the connected product (up to 64 characters)
Product text	Additional text for description of the connected product (up to 64 characters)
Serial number	Individual manufacturer-specific unique serial number of the connected product (up to 16 characters)
Hardware revision	Manufacturer-specific information on the hardware version (up to 64 characters)
Firmware revision	Manufacturer-specific information on the firmware version (up to 64 characters)

10.3.1.3.3 Displaying Port Status Information

The screenshot displays the WAGO Webserver I/O Field interface. On the left is a sidebar menu with options: Dashboard, Port X01, Port X02, Port X03 (labeled 'Ifm electronic gmbh OSD150'), Port X04 (labeled 'Wago Kontakttechnik GmbH u. Co KG Hül', highlighted with a green checkmark), Port X05, Port X06, Port X07, Port X08, DIOForcing, IOLForcing, Settings, and Sign out. The main area is titled 'WAGO Webserver I/O Field' and 'Port X04'. It features five tabs: Information, Status (active), Configuration, IOL, and Process Data. The Status tab shows a table of port parameters:

State	Operate
Quality	0x2
Revision ID	0x11
Baudrate	230.4 kbps
Cycle time	0x14
Input data length	2
Output data length	2
Vendor ID	0x11D
Device ID	0x8006A5

Figure 16: **Port X0i** Menu Item, **Status** Tab (Example View)

The **Status** tab shows status information for pins 2 and 4 of the selected port.

This tab answers the following questions about the selected port:

- What is the current port status of the port?
- Is the process data valid for input/output?
- Is a product connected to the selected port? If so, what is this product's version ID?
- How high is the data transmission rate between the port and a product connected there?
- How long is the communication cycle time in the **Operate** operating mode?
- What is the true input/output data length of the connected product in bytes?
- What is the manufacturer ID or product ID of the product connected to the IO-Link port?

Proceed as follows to display the status information on a specific port:

1. From the main menu of the Webserver (left), select the menu item which you want to view information about.
 2. Open the **Status** tab.
- ⇒ The **Status** tab opens. The current port status information appears.

10.3.1.3.4 State

This shows the current port status information of the IO-Link port. The following table contains all possible values for the status of the IO-Link port:

Table 53: Possible Values of "State" (Port Status Information)

Value	Port Status	Description
0	No Device	No product is connected to the port, or there is no communication with the connected product
1	Disabled	The port is inactive
2	Incorrect Device	The version or compatibility check failed
3	Preoperate	The product is ready for communication
4	Operate	The product is communicating
5	DI CQ	The port is in digital input mode
6	DO CQ	The port is in digital output mode
7	Reserved	Reserved
8	Reserved	Reserved
9	Incorrect Cycle Time	The cycle time according to the configuration does not correspond to the connected product
254	Port Power Off	The port voltage is switched off
255	Not Available	The port is not available

10.3.1.3.5 Quality

This shows the **Port Quality Info**, including information on the validity of the process data for input and output (separately). The content is binary coded.

Table 54: Meaning of the Individual Bits

Bits of Port Quality Info	Description
Bit 0	0 = input process data valid 1 = input process data invalid
Bit 1	0 = output process data valid 1 = output process data invalid
Bit 2 to bit 7	Reserved

10.3.1.3.6 Revision ID

This shows the version ID of the connected device.

A value of 0 means: no device connected.

All other values must be interpreted as the version ID of the connected device.

10.3.1.3.7 Baud Rate

If an IO-Link device is connected to the port, its data transmission rate appears here. For IO-Link, the transmission rate of the communication between the port and a connected device can have the following values:

- 4.8 kbps (COM1)
- 38.4 kbps (COM2)
- 230.4 kbps (COM3)

If no IO-Link device is connected to the port, the text `Not connected` appears here.

10.3.1.3.8 Cycle Time

The cycle time of the master is bit-coded as follows:

- Bits 0 ... 5 specify a whole-number multiplier between 0 and 63.
- Bits 6 ... 7 specify the calculation formula to use according to the following table:

Table 55: Cycle Time of the Master – Bits 6 ... 7

Bits 6 ... 7	Calculation Formula
0	Multiplier × 0.1 ms
1	6.4 ms + multiplier × 0.4 ms
2	32.0 ms + multiplier × 1.6 ms
3	Reserved

10.3.1.3.9 Input Data Length

This shows the actual input data length of the connected product in bytes.

10.3.1.3.10 Output Data Length

This shows the actual output data length of the connected product in bytes.

10.3.1.3.11 Vendor ID

This value is the manufacturer ID of the connected product.

10.3.1.3.12 Device ID

This value is the device ID of the connected product.

10.3.1.3.13 Displaying Process Data

You can view the process data associated with a specific port on the **Process Data** tab.

Proceed as follows to view the process data for a port:

1. From the main menu of the Webserver (left), select the menu item which you want to view information about.
2. Open the **Process Data** tab.
 - ⇒ The **Process Data** tab opens. The current values of the process data configured for input/output appear in hexadecimal format under Input/Output. If no process data has been configured for a data direction (input or output), the corresponding field remains empty.

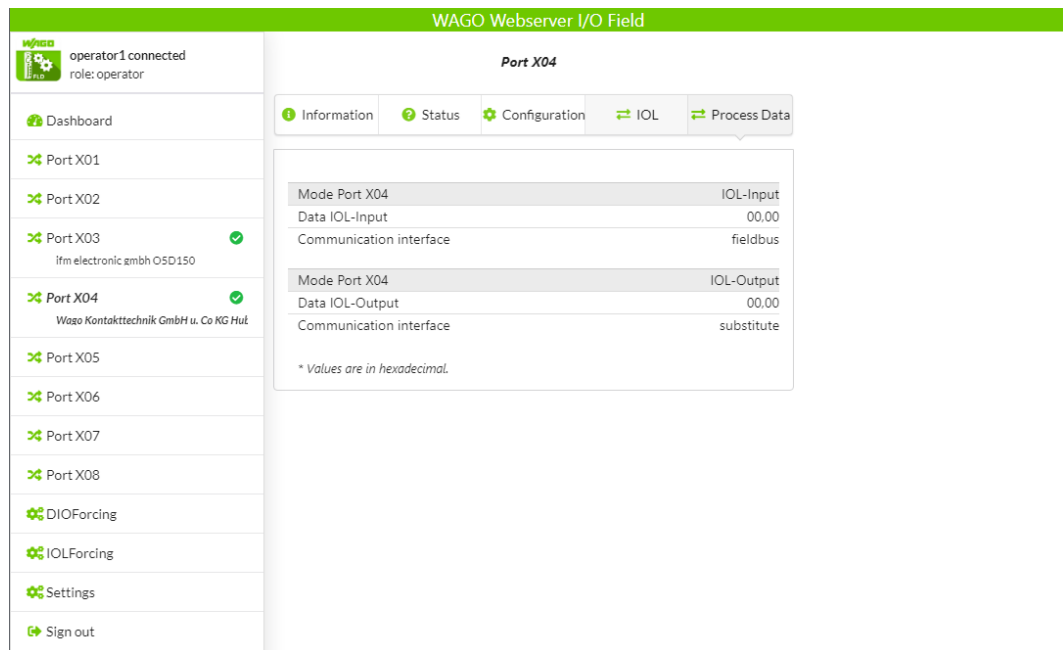


Figure 17: Port X0i Menu Item, Process Data Tab (Example View)

10.3.1.4 Parameterizing the Module via the WAGO I/O Field Webserver

You can make the following settings on the module with WAGO Webserver I/O Field:

- **Accessing a Connected IO-Link Device** [[▶ 92](#)]
- **Configure Ports** [[▶ 95](#)]
- **Configuring IP Parameters** [[▶ 99](#)]
- **Storing Maintenance Information** [[▶ 100](#)]
- **Updating Firmware** [[▶ 101](#)]
- **Resetsetting the Module to the Factory Settings** [[▶ 103](#)]
- **Configure Bluetooth** [[▶ 104](#)]
- **Logging Users on and off and Managing Them** [[▶ 106](#)]
- **Forcing Digital Inputs and Outputs** [[▶ 109](#)]
- **Forcing for IO-Link Ports** [[▶ 111](#)]

10.3.1.4.1 Accessing a Connected IO-Link Device

The IOL tab allows read and write access to the IO-Link device connected to an IO-Link port via index and subindex. The ISDU message format (ISDU = Indexed Service Data Unit) is used for this purpose.

Note

You can find the meaning of the index and subindex values in the documentation of the connected IO-Link device.

You can find a description of the ISDU message format in the IO-Link specification.

Required Rights

Changes to settings require operator or admin rights. If you do not have these, the tab is grayed out, and the displayed values cannot be edited.

Access to IO-Link Device

To access the data of an IO-Link device connected to the selected IO-Link port via index and subindex (ISDU message format), proceed as follows:

1. Select the port to which the IO-Link device is connected from the menu on the left.
2. Open the **IOL** tab.

⇒ The **IOL** tab appears.

Read Access

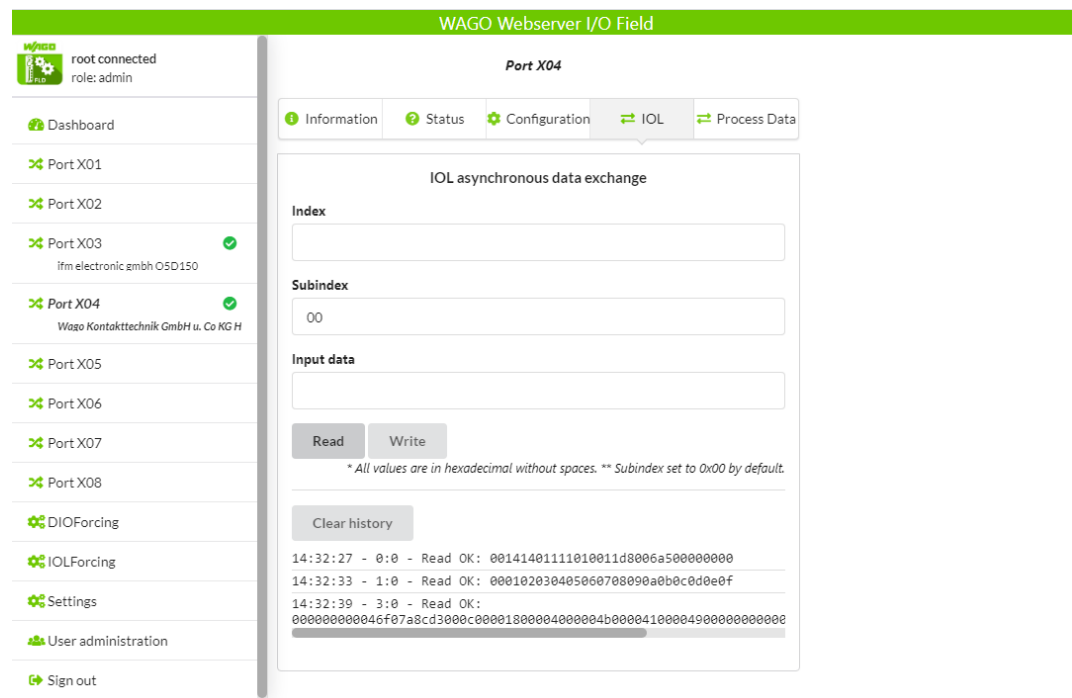


Figure 18: Ports X0i – Read Access to IO-Link Device (Example View)

To read data from the connected IO-Link device, proceed as follows:

1. On the **IOL** tab, enter the index of the connected IO-Link device you want to access into the **Index** field as a hexadecimal value.
2. On the **IOL** tab, enter the subindex of the connected IO-Link device you want to access into the **Subindex** field as a hexadecimal value; the default setting is 00
3. Click the **[Read]** button.

⇒ The read operation is performed. An entry is written to the history at the bottom of the tab and logged there with the current time.

If the operation was successful, the text `Read ok:` and the result appear in the history.

The entries in the history then have the following structure:

Time - Index:Subindex - Read ok: <Result>

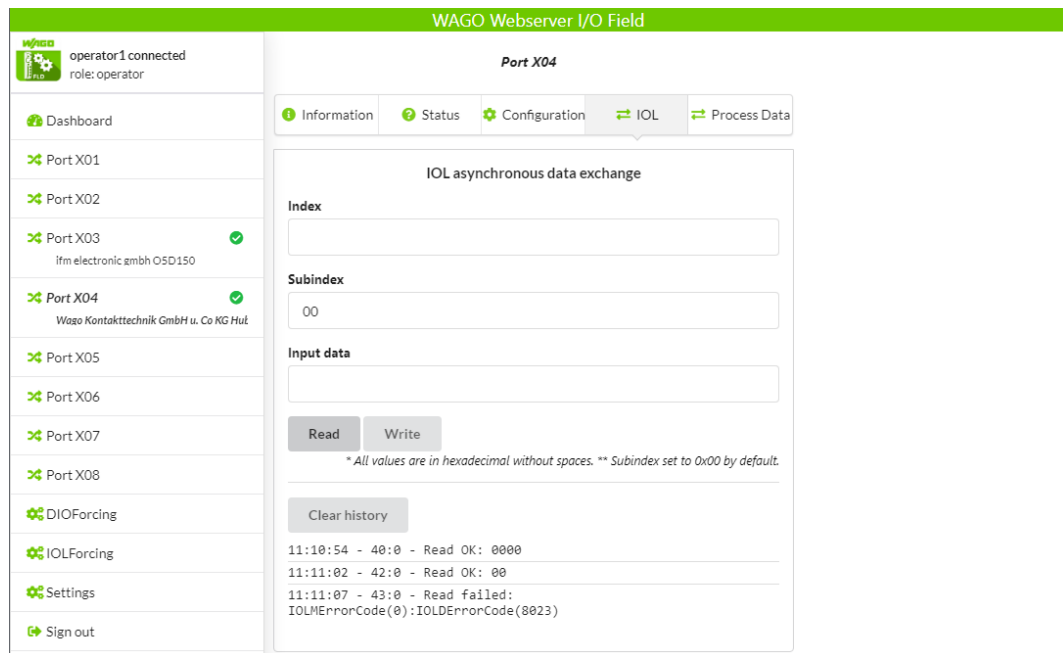


Figure 19: Ports X0i – Read Access to IO-Link at Index 43 and Subindex 0 Unsuccessful (Read Failed, Example View)

If the operation was not successful, an error message appears in the history with error codes from the IO-Link master and IO-Link device.

In this case, the entries in the history have the following structure:

Time - Index:Subindex - Read failed: IOLMErrorCode(<error code of the IO-Link master>): IOLDErrorCode(<error code of the IO-Link device>)

Note

You can find information on the meaning of the error codes of IO-Link masters (IOLMErrorCode) and IO-Link devices (IOLDErrorCode) in the IO-Link specification.

The following applies in both cases:

- The time appears in HH:MM:SS format
- The index and subindex appear in hexadecimal format

Write Access

To write data to the connected IO-Link device, proceed as follows:

1. On the **IOL** tab, enter the index of the connected IO-Link device you want to access into the **Index** field as a hexadecimal value.
2. On the **IOL** tab, enter the subindex of the connected IO-Link device you want to access into the **Subindex** field as a hexadecimal value; the default setting is 00
3. On the **IOL** tab, enter the data to write in the **Input data** field.
4. Click the **[Write]** button.

⇒ The write operation is performed.

If the operation was successful, the text `Write ok:` and the result appear in the history. The entries in the history then have the following structure:

```
Time - Index:Subindex - Write ok: <Result>
```

If the operation was not successful, an error message appears in the history with error codes from the IO-Link master and IO-Link device. The entries in the history then have the following structure:

```
Time - Index:Subindex - Write failed: IOLMasterCode(<error code of the IO-Link master>): IOLDeviceCode(<error code of the IO-Link device>)
```

Deleting the Read and Write Access History

To delete the logged history of read and write operations:

- Click the **[Clear history]** button.
- ⇒ The history of read and write access operations is deleted.

10.3.1.4.2 Configure Ports

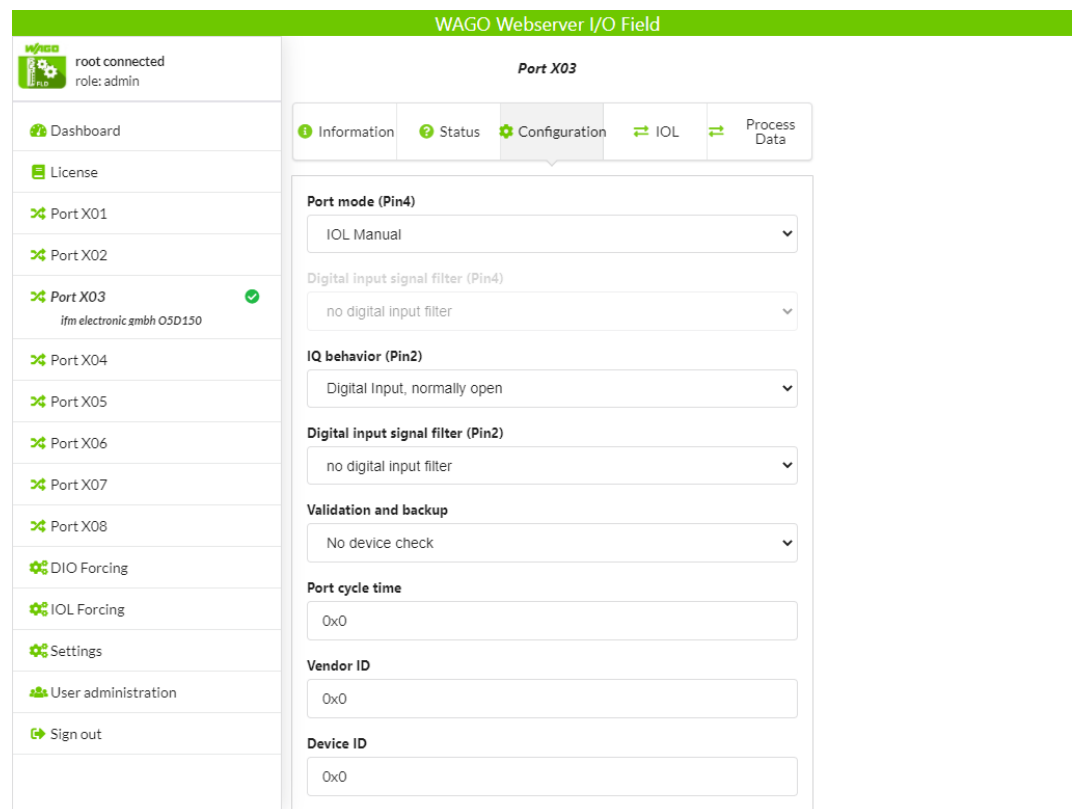


Figure 20: **Port X0i** Menu Item, **Configuration** Tab (Example View)

The **Configuration** tab is used to display and modify the following port settings for the selected port of the device:

Table 56: Port Configuration Settings for IO-Link Devices

Name	Type	Description
Port mode (pin 4)	Drop-down menu	Port operating mode (configuration of pin 4)
Digital input signal filter (pin 4)	Drop-down menu	Filter time for digital input signals on pin 4 (only for "Port mode (pin 4)" on digital input)

Name	Type	Description
IQ behavior (pin 2)	Drop-down menu	IQ behavior of the port (configuration of pin 2)
Validation and backup	Drop-down menu	Validation and Backup Settings for Device Check When Replacing Devices
PortCycleTime	Input field	Expected cycle time of the port
VendorID	Input field	Expected manufacturer ID of the connected device
DeviceID	Input field	Expected device ID of the connected device

The **Validation and Backup**, **PortCycleTime**, **VendorID** and **DeviceID** settings only appear for the IOL Manual selection in the **Port mode (pin 4)** drop-down menu.

Changes to settings require operator or admin rights. If you do not have these, the **Configuration** tab is grayed out, and the displayed values cannot be edited.

If cyclic data exchange takes place via EtherNet/IP, no configuration is possible. In this case, a message appears:

Note: Changing configuration not allowed because interface state is "communicating."

To make changes to a port's configuration, proceed as follows:

1. Select the desired port (port X01, port X02 etc.) from the menu
 2. Open the **Configuration** tab.
 3. Configure pin 4 by setting the port operating mode.
 4. If applicable, configure the filter time for the signals of the digital inputs.
 5. If applicable, configure the device check for validation and backup.
 6. If applicable, configure pin 2 by setting the I/Q behavior.
 7. If applicable, enter the expected vendor ID.
 8. If applicable, enter the expected device ID.
 9. If applicable, set the expected cycle time.
 10. Click the **[Apply]** button.
- ⇒ Your changes now take effect.

Configuring the Operating Mode for Pin 4 of the Port

You can select the port operating mode for pin 4 of the selected IO-Link port from the **Port mode** drop-down menu. The following operating modes are available:

Table 57: "Port Mode" Drop-Down Menu: Selecting the Operating Mode for Pin 4 of the Selected IO-Link Port

Selection Option	Description
Deactivated	The port is disabled. L+ is switched off. The process data (both input and output) is set to 0. The master no longer performs actions related to this port.
IOL Manual	The port is used as an IO-Link port with manual (user-defined) configuration. The vendor ID, device ID and version ID are validated.
IOL Autostart	The port is used as an IO-Link port with automatic start. No configuration or device validation occurs.
Digital input, normally open	The port is used as a digital input. All elements of the port configuration are ignored except for the input and output data length.
Digital input, normally closed	The port is used as a digital input. The signals on the port are inverted. All elements of the port configuration are ignored except for the input and output data length.

Selection Option	Description
Digital Output	The port is used as a digital output. All elements of the port configuration are ignored except for the input and output data length.
Digital output, static on	The port is used as a digital output. The signal on pin 4 is permanently set to logic 1 (for testing purposes only).

Setting the Filter Time for Digital Inputs

The filter time for the digital inputs can be selected from the **Digital input signal filter** drop-down menu. You can select from the following values:

- No digital input filter
- 3 ms
- 15 ms
- 20 ms

If the **No digital input filter** option is selected, no filtering occurs.

Configure Pin 2 (I/Q)

The behavior of pin 2 (I/Q) can be selected from the **IQ behavior** drop-down menu. For your IO-Link class A device, the following configuration options are available for using pin 2 as a digital input or output:

Table 58: **IQ Behavior** Drop-Down Menu – Configuration of Pin 2 (I/Q) for IO-Link Class A Devices

Selection Option	Explanation
Not supported	Pin 2 is not used.
Digital input, normally open	Pin 2 is a digital input.
Digital input, normally closed	Pin 2 is a digital input. The signal is inverted.
Digital Output	Pin 2 is a digital output.
Digital output, static on	Pin 2 is a digital output. The signal is permanently set to logic 1 (for testing purposes only).

Configuring the Device Check for Validation and Backup

Note

In the “IOL Autostart” operating mode (see above), this drop-down menu has no effect.

The **Validation and backup** drop-down menu can be used to determine whether a validation (device check) is performed and, if so, at what level (Inspection Level) when a connected device is replaced, and whether or not the stored operating parameters of the old device are carried over to the new one.

The following table explains the possible values for Inspection Level:

Table 59: Possible Values of the **Inspection Level** Parameter

Inspection Level	Description
NO_CHECK	No device check is performed.

Inspection Level	Description
TYPE_COMP	A device check for type compatibility is performed. For the device check, the actual vendor ID is compared to the vendor ID setting in the configuration, and the actual device ID is compared to the device ID setting in the configuration.
IDENTICAL	A device check for device identity is performed. For this purpose, a device check for type compatibility is performed. Furthermore, the actual serial number is compared to the serial number setting of the configuration.

The **Backup Level** parameter determines the system behavior when a device connected to the port is replaced in terms of continued operation with unmodified device parameters.

This parameter can have three different values:

Table 60: Possible Values of the **Backup Level** Parameter

Backup Level	Description
Commissioning ("Disable")	Parameter data of the old device is not saved for transfer to the new device. Therefore, if the device is replaced, the new device must be parameterized anew.
Production ("Backup/Restore")	Changes to all active parameters within the device are copied and saved. Thus all parameter data of the old device is stored for transfer to a new device. Device replacement with automatic or semi-automatic data storage is supported.
Production ("Restore")	Changes to all active parameters within the device are not copied and saved. Only special parameter data of the old device is stored for transfer to a new device. Device replacement with automatic or semi-automatic data storage is only supported for these "frozen" parameters.

The **Validation and Backup** drop-down menu offers the following options for setting the **Inspection Level** and **Backup Level** parameters:

Table 61: Setting the **Inspection Levels** and **Backup Levels** for Device Check during Validation and Backup

Selection Option	Inspection Level	Backup Level	Description
No device check	NO_CHECK	Disable	No device check is performed.
Type compatible device (V1.0)	TYPE_COMP	Disable	Device check for type-compatible device per IO-Link specification 1.0
Type compatible device (V1.1)	TYPE_COMP	Disable	Device check for type-compatible device per IO-Link specification 1.1
Type compatible device (V1.1) with backup + restore	TYPE_COMP	Backup + Restore	Device check for type-compatible device per IO-Link specification 1.1 with backup & restore functionality
Type compatible device (V1.1) with restore	TYPE_COMP	Restore	Device check for type-compatible device per IO-Link specification 1.1 with restore functionality

VendorID Input Field

This element contains the expected manufacturer ID (VendorID, 2 bytes) of the connected device. The permissible values range from 1 to 0xFFFF. This information is required for the device check for type compatibility. It can be omitted if **[No device check]** is selected.

DeviceID Input Field

This element contains the expected device ID (DeviceID, 3 bytes) of the connected device. The permissible values range from 1 to 0xFFFFFFFF. This information is required for the device check for type compatibility. It can be omitted if **[No device check]** is selected.

PortCycleTime Drop-Down Menu

Depending on the selected operating mode, the expected cycle time of the port either can be selected from the **PortCycleTime** drop-down menu or is merely displayed. The encoding corresponds to the one in the port status.

10.3.1.4.3 Configuring IP Parameters

The screenshot shows the WAGO Webserver I/O Field interface. On the left is a sidebar menu with options: Dashboard, License, Port X01 through X08, DIO Forcing, IOL Forcing, Settings (highlighted), User administration, and Sign out. The main area is titled 'WAGO Webserver I/O Field' and has tabs for Device configuration, Maintenance information, Firmware upgrade, Factory reset, Bluetooth, and Radio test. The 'Device configuration' tab is active, showing 'Interface configuration control'. Under 'Configuration control', a dropdown menu is set to 'DHCP'. Below this are input fields for 'Device IP address' (192.168.10.103), 'Subnet mask' (255.255.255.0), and 'Gateway IP address' (192.168.10.1). An 'Apply (effective after next reboot)' button is present. At the bottom, 'Interface configuration status' is shown as a table:

Parameter	Value
Device IP address	192.168.10.103
Subnet mask	255.255.255.0
Gateway IP address	192.168.10.1

Figure 21: Settings **Menu Item**, Device Configuration **Tab** (Example View)

The **Device configuration** tab allows you to do the following:

- Specify how the module gets its IP address (via the **Configuration control** drop-down menu with the STATIC, BOOTP and DHCP options)

Table 62: **Configuration Control Drop-Down Menu**

#	Option	Description
0	STATIC	The module's IP address is configured statically. This is done using the module IP address, the subnet mask and the gateway IP address entered on the "Device configuration" tab.
1	BOOTP	The module gets its IP address with the BOOTP protocol.
2	DHCP	The module gets its IP address with the DHCP protocol. This is the standard setting.

- If static configuration is used, specify the IP address and subnet mask manually (the gateway IP address is optional).

Table 63: **Device Configuration Tab – Parameter Overview**

Parameter	Settings/Action
Device IP address	IP address for the ETHERNET configuration with static IP address configuration

Parameter	Settings/Action
Subnet mask	Subnet mask for the ETHERNET configuration with static IP address configuration
Gateway IP address	Gateway IP address for the ETHERNET configuration with static IP address configuration

Other tabs under the menu item **Settings** are described below.

10.3.1.4.4 Storing Maintenance Information

On the **Maintenance Information** tab, you can store maintenance information, such as the device name, the installation location and date, contact information, a description text or the date of the last and next product service.

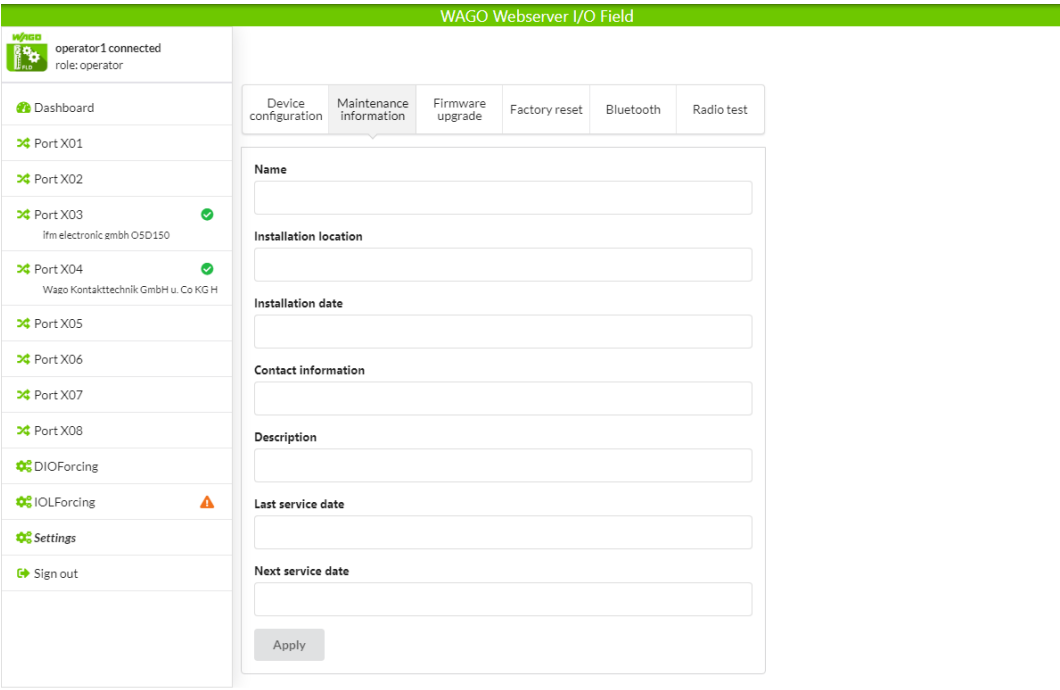


Figure 22: **Settings** Menu Item, **Maintenance Information** Tab (Example View)

Changes to settings require operator or admin rights. If you do not have these, the **Maintenance Information** tab is grayed out and cannot be edited.

The maintenance information includes:

Table 64: Maintenance Information

Name	Data Format and Length	Description	Corresponding I&M Field
Name	Printable ASCII string, max. 64 characters	Uniform label (string) in the system for the function of this device	I&M1:TAG_FUNCTION
Installation Location	Printable ASCII string, max. 32 characters	Uniform label (string) in the system for the location where the device is installed	I&M1: TAG_LOCATION
Installation Date	ASCII time indication, max. 32 characters	Installation or commissioning date of this device; the format can be determined by the fieldbus organization.	I&M2: INSTALLATION_DATE

Name	Data Format and Length	Description	Corresponding I&M Field
Contact Information	Printable ASCII string, max. 32 characters	Text for identification of a contact person for this managed node of the system, together with information on how to contact this person.	
Description	Printable ASCII string, max. 64 characters	Readable comment field (plain text) to store free text containing individual state information and comments.	I&M3: DESCRIPTOR
Signature	Printable ASCII string, max. 128 characters	Signature	I&M4: SIGNATURE
Number of changes (Change Count)	ASCII decimal number, max. 32 characters	Counter for changes to the hardware or the device parameters; only needs to be incremented if the data has really changed.	I&M0: REV_COUNTER
Date/time of the last service (Last Service Date)	ASCII time indication, max. 32 characters	Date/time of the last service, e.g., firmware update.	
Date of the next service (Next Service Date)	ASCII time indication, max. 32 characters	Date/time of the next service, e.g., firmware update	

To make changes to the maintenance information:

1. From the Webserver main menu (left), select the **Settings** menu item
⇒ The **Device Configuration** tab appears.
2. Select the **Maintenance Information** tab.
3. Modify the relevant fields there.
4. Click the **[Apply]** button.
⇒ Your changes take effect.

10.3.1.4.5 Updating Firmware

With the **Firmware upgrade** tab, WAGO Webserver I/O Field provides an option for updating the product firmware.

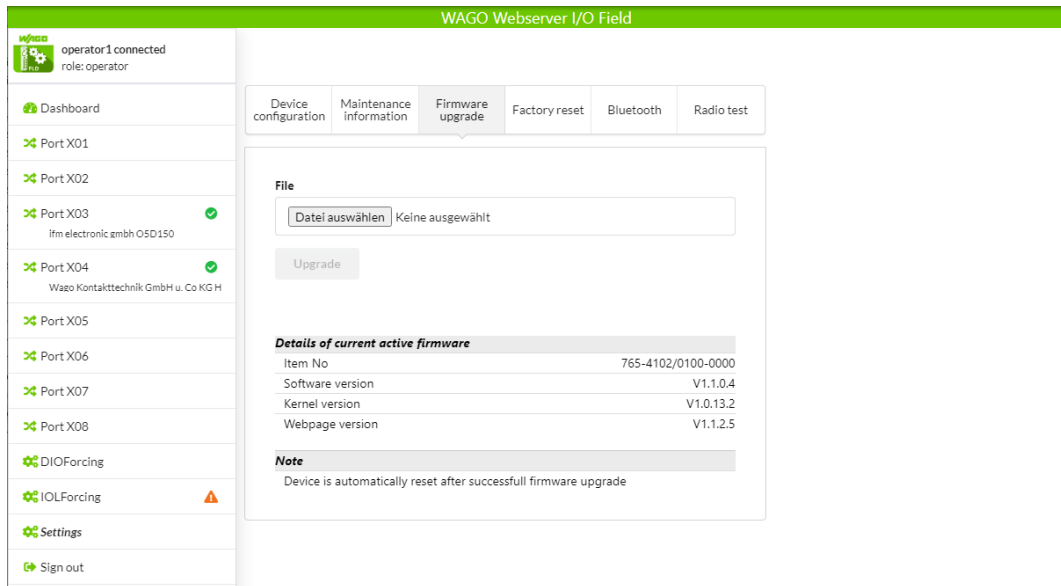


Figure 23: Settings Menu Item, Firmware Upgrade Tab (Example View)

! NOTICE

Put system in safe operating mode

Never perform a firmware update during ongoing operation of the system in which the product is installed. Before any firmware update, the system must first be properly shut down or put in a safe operating state.

i Note

Create backup before update

When you update your product's firmware, the state of your product before the update, including the firmware used up to that point, can no longer be reconstructed unless a firmware and configuration data backup exists.

Changes to settings require operator or admin rights. If you do not have these, the **Settings** tab is grayed out and cannot be edited.

To update the firmware, you need a firmware container file: FWUPDATE.ZIP. You can get it from the Downloads section of the WAGO website: <http://www.wago.com>.

Proceed as follows to update the firmware:

1. In the left-hand column of the WAGO I/O Field Webserver, click the **Settings** menu item.
 - ⇒ The **Device configuration** tab appears.
2. Select the **Firmware upgrade** tab.
3. Click the **[Select file]** button.
 - ⇒ A file selection dialog opens.
4. Select the firmware container file FWUPDATE.ZIP from this dialog.
 - ⇒ The name of the selected firmware container file appears in the **File** field.

5. Click the **[Upgrade]** button.

⇒ The firmware update is performed. After that, the port must be configured anew.

The firmware update procedure is as follows:

1. The firmware from the `FWUPDATE.ZIP` firmware container file is stored in the module's flash memory.
2. An internal reset is triggered.
3. Then the device maintenance firmware starts; this edits the firmware container file and installs the new firmware, including the module's configuration files.
4. You are notified when the installation procedure finishes.
5. The module then resets again.
6. The new firmware that has just been loaded starts.

10.3.1.4.6 Resetting the Module to the Factory Settings

In many cases, it can be helpful to reset the module to the factory settings. This can be done for various selectable classes of settings with the **Settings** menu item on the **Factory reset** tab.

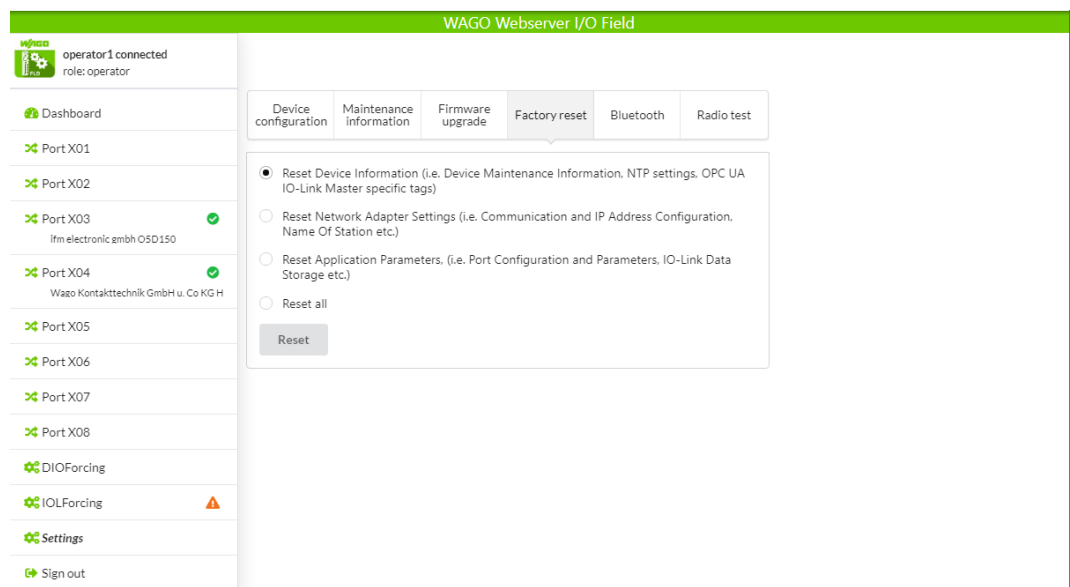


Figure 24: **Settings** Menu Item, **Factory Reset** Tab (Example View)

Changes to settings require operator or admin rights. If you do not have these, the **Settings** tab is grayed out and cannot be edited.

Various settings can be reset according to the radio button selection:

Table 65: Options for Resetting the Module to the Factory Settings

Option	Reset Settings
Reset Device Information	Module settings (e.g., maintenance information, system time settings)
Reset Network Adapter Settings	Network adapter settings (communication settings, IP address configuration, station name)
Reset Application Parameters	Application-specific data (port configuration and parameters, remanent parameters)
Reset All	All Settings

To reset the module to the factory settings, proceed as follows:

1. In the left-hand column of the WAGO I/O Field Webserver, click the **Settings** menu item.
⇒ The **Device configuration** tab appears.
2. Select the **Factory reset** tab.
3. Use the radio buttons to select the settings that you want to reset to their factory setting values.
4. Click the **[[Reset]]** button.
⇒ The selected settings are reset to the factory settings.

10.3.1.4.7 Configure Bluetooth

The **Bluetooth®** tab provides the following functions:

- Displaying information on the product's Bluetooth® interface module
- Displaying diagnostic information
- Activating the Bluetooth® interface via DM code
- Starting a Bluetooth® firmware update
- Resetting the Bluetooth® firmware
- Switching the Bluetooth® wireless connection on/off
- Switching the Bluetooth® LED on/off

Proceed as follows to access these Bluetooth® functions on the WAGO I/O Field Webserver:

- Open the **Bluetooth®** tab.
- ⇒ The **Bluetooth®** tab appears.

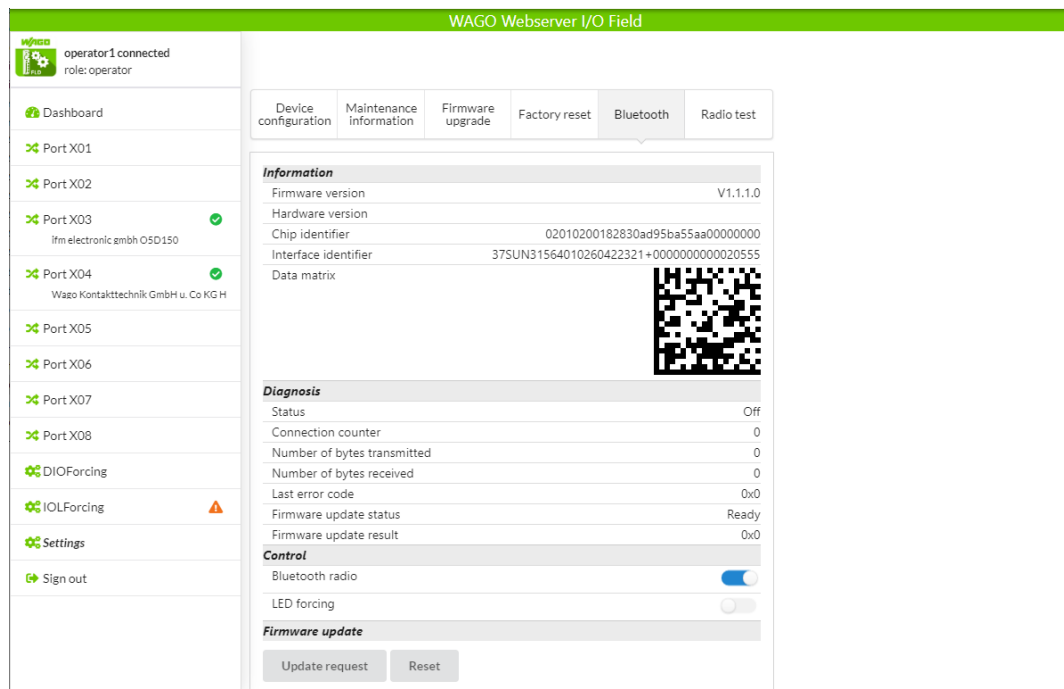


Figure 25: **Settings** Menu Item, **Bluetooth®** Tab (Example View)

Displaying Information on the Product's Bluetooth® Interface Module

The **Information** section of the **Bluetooth®** tab shows the following information on the product's Bluetooth® interface module:

- Current version of the Bluetooth® firmware used
- Current version of the Bluetooth® hardware used
- Chip identifier of the Bluetooth® chip used
- Interface identifier of Bluetooth® interface module
- Individual DM code of the product
(can be scanned by a smartphone or tablet to launch an app on it for communication with the product)

Displaying Diagnostic Information

The **Diagnostics** section of the **Bluetooth®** tab shows the following diagnostic information on the Bluetooth® connection:

- Connection state
- Connection counter; is set to 0 with each new Bluetooth® connection.
- Number of bytes sent over the Bluetooth® connection
- Number of bytes received over the Bluetooth® connection
- Last error code that occurred during operation of the Bluetooth® connection
- Status of the last Bluetooth® firmware update
- Result of the last Bluetooth® firmware update

The status of the last Bluetooth® firmware update is indicated as follows:

Table 66: Status of the Last Bluetooth® Firmware Update

Value	Status
0	Ready for operation
1	Firmware file is being checked
2	Firmware update is being performed

Activating the Bluetooth® Interface Using the DM Code Displayed

Note

Never use the product in areas where operation of radio equipment is prohibited.

Never use the Bluetooth® interface in areas where operation of radio equipment is prohibited. The module contains a Bluetooth® radio transmitter that can impair the function of medical electronic equipment such as hearing aids and pacemakers. Disable the Bluetooth® interface in these cases.

Note

Only use the product with Bluetooth® if the product has an approval for the specific country or region.

To enable the Bluetooth® interface, you must have the WAGO I/O Field app installed on the smartphone or tablet. Proceed as follows:

- A DM code appears in the “Information” section of the **Bluetooth®** tab. Scan it with the smartphone or tablet.
⇒ The smartphone or tablet then sends an optical sequence (flash code) to the device's integrated light sensor.

- ⇒ The light sensor registers this sequence. If the sequence is recognized as correct, the Bluetooth® interface is enabled, and the product attempts to establish a Bluetooth® connection to the smartphone or tablet.

Starting a Bluetooth® Firmware Update

Proceed as follows to start a Bluetooth® firmware update:

1. Click **Update Request**.
 - ⇒ A dialog appears for selecting the Bluetooth® firmware file.
2. Select the firmware file.
 - ⇒ The Bluetooth® firmware update starts.

Performing a Reset

Proceed as follows to reset the Bluetooth® firmware:

- Click **Reset**.
 - ⇒ The Bluetooth® firmware is reverted and restarts.

Switching the Bluetooth® Interface Wireless Transmitter on/off

To switch the Bluetooth® interface wireless transmitter on:

- Slide the **Bluetooth Radio** switch to the right.
 - ⇒ The Bluetooth® interface wireless transmitter switches on.

To switch the Bluetooth® interface wireless transmitter off, slide the **Bluetooth Radio** switch to the left.

Switching LED Forcing on/off

Proceed as follows to switch LED forcing (externally controlled LED mode) on:

- Slide the **LED Forcing** switch to the right.
 - ⇒ LED forcing switches on. The LED on the Bluetooth® interface can now be externally controlled.

To switch LED forcing off, slide the **LED Forcing** switch to the left.

10.3.1.4.8 Logging Users on and off and Managing Them

Logging Users on

Proceed as follows to log users on:

1. From the Webserver main menu (left), select the **Sign in** menu item.
 - ⇒ The input screen for username and password appears:

Figure 26: **Sign in** Menu Item – Input Screen for Username and Password (Example View)

2. Enter your username and password into the corresponding fields.
 3. Click the **[Sign in]** button.
- ⇒ If you have entered a known username correctly, you can now work with the WAGO I/O Field Webserver with this user's specified rights. The username that was used to log on is shown in the upper left-hand corner. The **Sign in** menu item changes to **Sign out**.

Logging Users off

Proceed as follows to log a user off:

- From the Webserver main menu (left), select the **Sign out** menu item.
- ⇒ You can now no longer work in the WAGO I/O Field Webserver with the rights you had been using till this point. The username used to log on is no longer shown in the upper left-hand corner. The **Sign out** menu item changes back to **Sign in**.

Guest User Access

By default, the Webserver recognizes the user `guest` without a password; this was set up for initial access or guest access.

Initial Login as Administrator

Upon delivery or after a reset to the factory settings, the WAGO I/O Field Webserver can be accessed with the username `root` and password `password`. This combination has administrator rights.

Note

Change the administrator password immediately after commissioning. The factory default setting is widely known and does not provide adequate protection.

The **Administration** tab provides role-based user administration. It allows you to create and delete users and assign them roles, which their rights depend on. Users can be divided into three roles:

- Maintenance
- Operator
- Administrator

Creating a New User

When “User administration” opens, the following screen appears:

Account list		Actions
User name	Role	
root	Admin	

New account			Actions
User name	Password	Role	
user1	*****	Maintenance	

Figure 27: **User Administration** Menu Item (Initial State) (Example View)

The user `root` with pre-set password `password` exists by default; see first row.

An additional user can be created in the second row. Proceed as follows:

1. In the **Username** field, enter the username to use for the user. Users that are already in use are not allowed here.
2. In the **Password** field, enter the password for this username.
3. Using the combo box on the right, select the role for the new user being created (the available roles are *Maintenance*, *Operator* and *Administrator*).
4. Click the green field to finish.

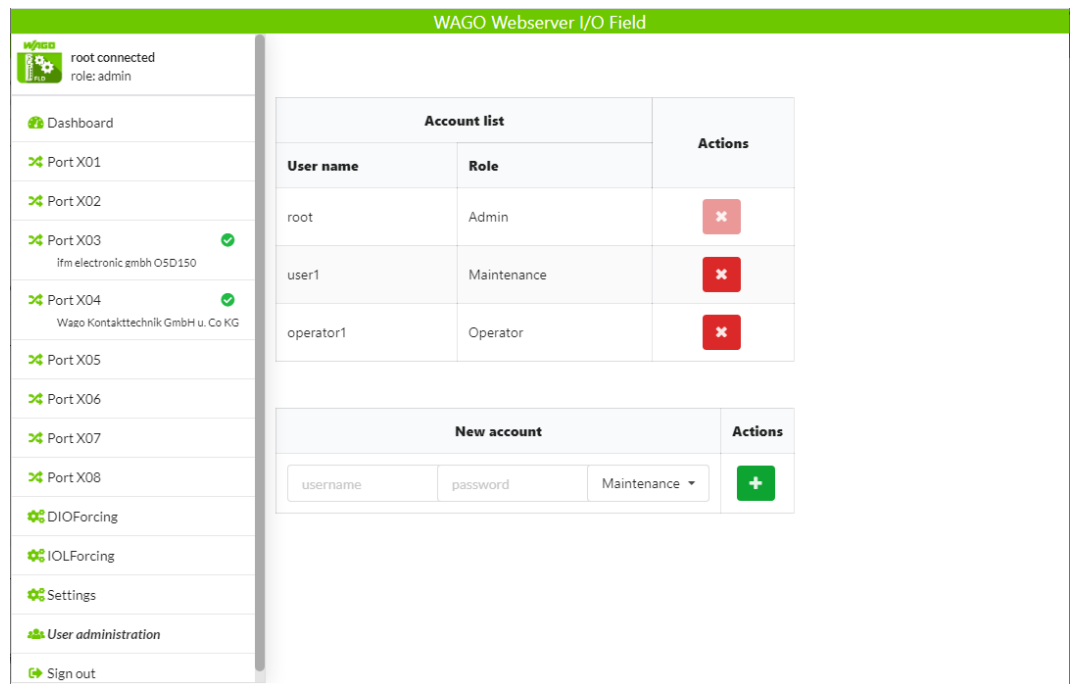


Figure 28: User Administration Menu Item (Example View)

⇒ The new user is created and assigned the selected role.

Removing Users

To remove an existing user from the product's user administration, proceed as follows:

- Click the red square with the white "x" to the right of the user you want to remove.

⇒ The user is deleted.

The user `root` cannot be deleted, so the red deletion button is grayed out there.

10.3.1.4.9 Forcing Digital Inputs and Outputs

To access the forcing functionality for the digital inputs and outputs via the Webserver, you must be logged in there with operator or administrator rights. To perform forcing, proceed as follows:

1. From the Webserver main menu (left), select the **DIO Forcing** menu item.
2. Check the **Forcing enable** box.

⇒ Unless another user is already accessing it, access to the forcing functionality is now enabled. A table with checkboxes in some of its cells appears on the screen:

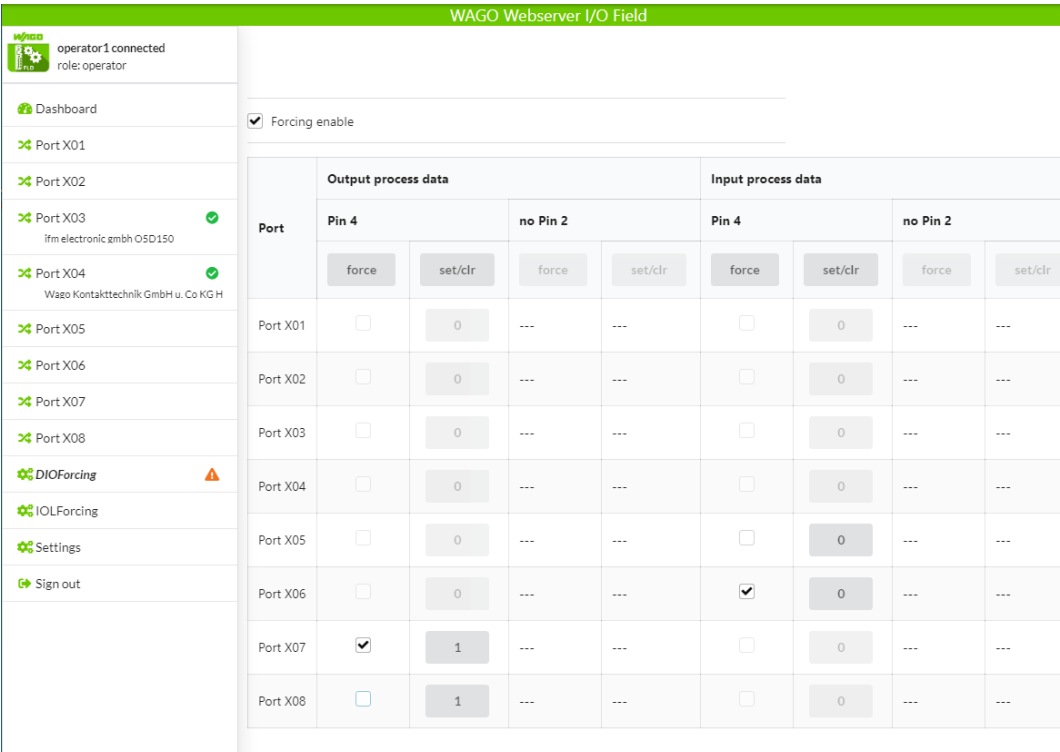


Figure 29: DIO Forcing Menu Item, “DIO Forcing” Screen (Example View)

You have three options for each pin that supports the forcing function:

Table 67: Input Options for Forcing for Each Pin of a Port

Option	“Force” Checkbox	“Set/Clr” Checkbox
Forcing – substitute value bit is set (1)	Checked	Checked
Forcing – substitute value bit is deleted (0)	Checked	Not checked
No forcing for this pin	Not checked	No meaning

For entering these, there are two checkboxes in the table for each pin of a port: **force** for switching the forcing functionality on/off, and **set/cclr** for setting or deleting the setpoint (1 bit); the latter checkbox is only relevant if the **force** box is checked. The following applies to this:

- All inputs for input simulation are entered in the right half of the table under “Input process data”; all the inputs for output forcing are then entered in the left half of the table under “Output process data.”

You can find a description of and more information on the forcing function and explanations of terms under [Forcing \[► 46\]](#).

Each of the eight ports (X01 ... X08) has its own table row.

Concurrent Access

As long as one user is accessing the forcing functionality through a forcing medium, e.g., the WAGO I/O Field Webserver, it is locked for all other users of the module. They cannot access the forcing functionality until the user that is active now terminates his or her access.

In this case, the Web browser displays a message box with the text "Somebody else is already forcing. Try again later." When the forcing functionality is being accessed, a small orange icon also appears in the forcing option entry in the menu bar on the left.

10.3.1.4.10 Forcing for IO-Link Ports

To access the forcing functionality for the IO-Link module via the Webserver, you must be logged in there with operator or administrator rights. To perform forcing, proceed as follows:

- Select the **IOL Forcing** option from the main menu of the Webserver on the left and check the **Forcing enable** box at the top.

⇒ Unless another user is already accessing it, access to the forcing functionality is now enabled. The screen shows a table with checkboxes in the **force** columns and should look something like this:

Ports	Output process data				Input process data						
	force	set value (hexadecimal)				force	set value (hexadecimal)				
Port X01	☒	00-07	0	0	0	0	00-07	0	0	0	0
		08-15	0	0	0	0	08-15	0	0	0	0
		16-23	0	0	0	0	16-23	0	0	0	0
		24-31	0	0	0	0	24-31	0	0	0	0
Port X02	☐	00-07	0	0	0	0	00-07	0	0	0	0
		08-15	0	0	0	0	08-15	0	0	0	0
		16-23	0	0	0	0	16-23	0	0	0	0
		24-31	0	0	0	0	24-31	0	0	0	0
Port X03	☐	00-07	0	0	0	0	00-07	0	a1	0	0
		08-15	0	0	0	0	08-15	0	0	0	0
		16-23	0	0	0	0	16-23	0	0	0	0
		24-31	0	0	0	0	24-31	0	0	0	0
Port X04	☐	00-07	0	0	0	0	00-07	0	0	0	0
		08-15	0	0	0	0	08-15	0	0	0	0
		16-23	0	0	0	0	16-23	0	0	0	0
		24-31	0	0	0	0	24-31	0	0	0	0

Figure 30: **IOL Forcing** Menu Item, "IOL Forcing" Screen (Example View)

You can find a description of and more information on the forcing function and explanations of terms under [Forcing \[► 46\]](#).

You can use the **force** checkbox to specify for each port of the port group X01...X04 or X05...X08 in its own row whether port forcing applies to this port. You can do this separately for the input and output process data. You can switch between the two port groups X01...X04 and X05...X08 with the **X01-X04** and **X05-X08** radio buttons at the top.

To enable forcing for a port and enter forcing data (i.e., substitute values) for it, proceed as follows:

1. Check the **force** box for the port in question.

2. For this port, you can enter 16 byte substitute values in hexadecimal format in the **set value (hexadecimal)** input fields of the column.

Concurrent Access

As long as one user is accessing the forcing functionality through a forcing medium, e.g., the WAGO I/O Field Webserver, it is locked for all other users of the module. They cannot access the forcing functionality until the user that is active now terminates his or her access.

In this case, the Web browser displays a message box with the text "Somebody else is already forcing. Try again later." When the forcing functionality is being accessed, a small orange icon also appears in the forcing option entry in the menu bar on the left.

10.3.2 WAGO IO-Link Configurator

WAGO IO-Link masters can be used in various system environments. They can be either gateways that link IO-Link to higher-level fieldbus or ETHERNET systems, modules in modular remote I/O Systems or a fixed component of devices like controllers.

In most cases, a higher-level engineering tool is used in the relevant system environment. Often, however, there is none or at least no uniform integration option. Various options are implemented for the IO-Link device tool as easy-to-use solutions for the respective cases.

The WAGO IO-Link Configurator software can be operated as a stand-alone program or via WAGO-I/O-CHECK.

You can find further information in the product manual WAGO IO-Link Configurator.

The manual is available in the download area for the WAGO IO-Link Configurator software at www.wago.com, item number 765-4501/100-000.

10.3.3 WAGO I/O Field app

10.3.3.1 Parameterizing a Module with the WAGO I/O Field App

Note

Read the online help!

You can find Product-specific information on the WAGO App I/O Field in the online help for the app.

10.3.4 OPC UA Server

The device has an OPC UA server. An OPC UA client can establish a connection with the device and access the following parameters, among others:

- Device identification
- Configuration parameters
- Process Data
- Measured values
- Diagnostic information

- Statistical information

The OPC UA client establishes a connection via the following URL:

```
opc.tcp://IP-address:4840
```

For IP-address, use the IP address of the device.

The client can access device parameters anonymously (only read access) or with a username/password (read/write access). The username and password are set with the WAGO Webserver IO Field.

The following figure shows an excerpt from the device's information model.

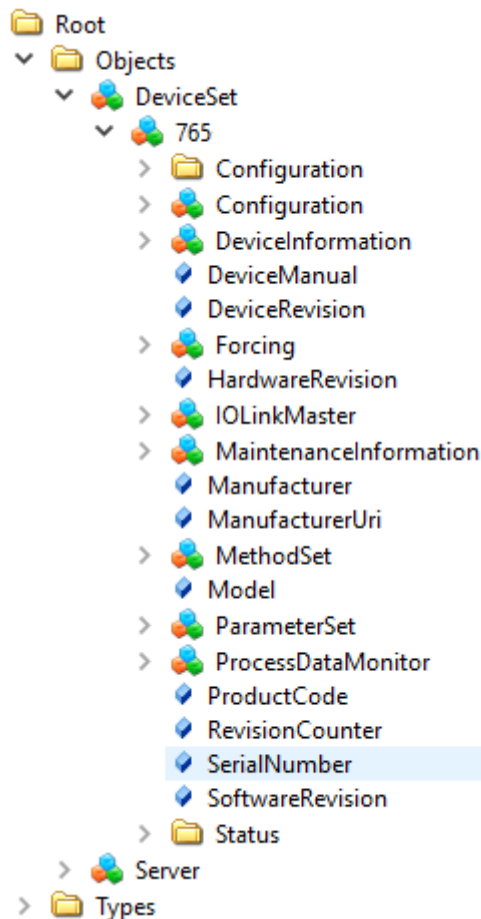


Figure 31: OPC UA: Device Information Model

10.3.4.1 Parameterizing the Product via OPC UA

10.3.4.1.1 Identifying Devices

The device provides nodes for device identification. For example, the OPC UA client can read out the version of the device firmware used in the `SoftwareRevision` node. The path to this node is:

```
Root > Object > DeviceSet > [device name]
```

Table 68: Identify Devices

Node Name	Node Class	Access	Description
Manufacturer	Variable	Read	Device manufacturer
ManufacturerUri	Variable	Read	URL of the device manufacturer

Node Name	Node Class	Access	Description
Model	Variable	Read	Short name of the device
ProductCode	Variable	Read	Product code of the device: "765-xxxx/xxxx-xxxx"
RevisionCounter	Variable	Read	Hardware version of the device
SerialNumber	Variable	Read	Serial number of the device
SoftwareRevision	Variable	Read	Revision/version of the device firmware

10.3.4.1.2 Setting Device Parameters

The OPC UA server provides nodes with configuration parameters for the device. For example, the OPC UA client can read out the upper limiting value for temperature in the `OverTemperature` node.

The path to this node is:

```
Root > Object > DeviceSet > [device name] > IOLinkMaster > Diagnostics > Configuration
```

The following table lists device-specific configuration parameters.

Table 69: Device-Specific Configuration Parameters

Node Name	Node Class	Access	Default	Description
CurrentHysteresis	Variable	Read	10 mA	Current hysteresis; unit: mA If the current exceeds the limiting value, the current must fall back below the limiting value by the hysteresis value before the diagnosis is revoked.
OverTemperature	Variable	Read	70 °C	Upper limiting value for the temperature of a port; unit: 0.1 °C
OverVoltage1L	Variable	Read	30000 mV	Upper limiting value for the voltage in supply cable 1; pins with the following functions can be monitored: L+, DI, DO, DIO, IO-Link; unit: mV
OverVoltage2L	Variable	Read	30000 mV	Upper limiting value for the voltage in supply cable 2; unit: mV
TemperatureHysteresis	Variable	Read	2 °C	Temperature hysteresis; unit: 0.1 °C If the temperature exceeds the limiting value, the temperature must fall back below the limiting value by the hysteresis value before the diagnosis is revoked.
UnderTemperature	Variable	Read	-25 °C	Lower limiting value for the temperature of a port; unit: 0.1 °C
UnderVoltage1L	Variable	Read	18000 mV	Lower limiting value for the voltage in supply cable 1; pins with the following functions can be monitored: L+, DI, DO, DIO, IO-Link; unit: mV
UnderVoltage2L	Variable	Read	18000 mV	Lower limiting value for the voltage in supply cable 2; unit: mV
VoltageHysteresis	Variable	Read	300 mV	Voltage hysteresis; unit: mA If the voltage exceeds the limiting value, the voltage must fall back below the limiting value by the hysteresis value before the diagnosis is revoked.

10.3.4.1.3 Setting Port Parameters

The OPC UA server provides nodes with configuration parameters for each port.

The path to this node is:

Root > Object > DeviceSet > [device name] > IOLinkMaster > Diagnostics > PortXX > Configuration

The following table lists port-specific configuration parameters.

Table 70: Port-Specific Configuration Parameters

Node Name	Node Class	Access	Default	Description
OverCurrentPin1	Variable	Read	0	Warning level for current upper limit on pin 1; unit: 1 mA 0: monitoring not enabled
OverCurrentPin2	Variable	Read	0	Warning level for current upper limit on pin 2; unit: 1 mA 0: monitoring not enabled
OverCurrentPin4	Variable	Read	0	Warning level for current upper limit on pin 4; unit: 1 mA 0: monitoring not enabled
UnderCurrentPin1	Variable	Read	0	Warning level for current lower limit on pin 1; unit: 1 mA 0: monitoring not enabled
UnderCurrentPin2	Variable	Read	0	Warning level for current lower limit on pin 2; unit: 1 mA 0: monitoring not enabled
UnderCurrentPin4	Variable	Read	0	Warning level for current lower limit on pin 4; unit: 1 mA 0: monitoring not enabled

10.3.4.1.4 Reading Port Process Values

The OPC UA server provides nodes with process data. For example, the OPC UA client can read out the value on pin 4 of a port in the `Pin4ProcessData` node.

IO-Link Process Data

The path to this node is:

Root > Objects > DeviceSet > [Device name] > IOLinkMaster > Port XX > Device > ParameterSet

The following table lists port-specific IO-Link process data.

Table 71: Port-Specific IO-Link Process Data

Node Name	Node Class	Access	Description
ProcessDataInput	Variable	Read	Process data (inputs)
PDDescriptor	Variable	Read	Coding per "IO-Link Companion Specification"
ProcessDataLength	Variable	Read	Input process data length
ProcessDataOutput	Variable	Read	Process data (outputs)
PDDescriptor	Variable	Read	Coding per "IO-Link Companion Specification"
ProcessDataLength	Variable	Read	Output process data length

Process Data of the Digital Inputs and Outputs

The path to this node is:

```
Root > Object > DeviceSet > [device name] > IOLinkMaster > PortXX
> SIOProcessData
```

Note

OPC UA client can only read process output data

The process output data is written by the EtherNet/IP scanner. The OPC UA client can only read process output data.

The following table lists port-specific process data of the digital inputs and outputs.

Table 72: Port-Specific Process Data of the Digital Inputs and Outputs

Node Name	Node Class	Access	Description
Pin2ProcessData	Variable	Read	Process data on pin 2
Pin4ProcessData	Variable	Read	Process data on pin 4

10.3.4.1.5 Reading Measured Power Values

The OPC UA server provides nodes with calculated measured values. For example, the OPC UA client can read out the calculated total current of supply cable 1 in the `SumCurrentL` node.

The path to this node is:

```
Root > Object > DeviceSet > [device name] > IOLinkMaster > Diag-
nostics > Current
```

The following table lists device-specific (calculated) measured current values.

Table 73: Device-Specific (Calculated) Measured Current Values

Node Name	Node Class	Access	Description
SumCurrent1L	Variable	Read	Total current in supply cable 1 calculated from individual measurements; unit: mA
SumCurrent2L	Variable	Read	Total current in supply cable 2 calculated from individual measurements; unit: mA
MeanTemperature	Variable	Read	Average value for the temperature of the assembly, calculated from the temperature values measured individually on the three chips; unit: °C
MeanVoltage1L	Variable	Read	Average voltage in supply cable 1; unit: mV
MeanVoltage2L	Variable	Read	Average voltage in supply cable 2; unit: mV

The path to the node of the measured temperature value is:

```
Root > Object > DeviceSet > [device name] > IOLinkMaster > Diag-
nostics > Temperature
```

The following table lists device-specific (calculated) measured temperature values.

Table 74: Device-Specific (Calculated) Measured Temperature Values

Node Name	Node Class	Access	Description
MeanTemperature	Variable	Read	Average value for the temperature of the assembly, calculated from the temperature values measured individually on the three chips; unit: °C

The path to the node of the measured voltage values is:

```
Root > Object > DeviceSet > [device name] > IOLinkMaster > Diagnostics > Voltage
```

The following table lists device-specific (calculated) measured voltage values.

Table 75: Device-Specific (Calculated) Measured Voltage Values

Node Name	Node Class	Access	Description
MeanVoltage1L	Variable	Read	Average voltage in supply cable 1; unit: mV
MeanVoltage2L	Variable	Read	Average voltage in supply cable 2; unit: mV

10.3.4.1.6 Reading out Diagnostic Information

The OPC UA server provides nodes with diagnostic information. For example, the OPC UA client can read out whether the device has detected an overcurrent on pin 1 of a port in the `DiagnosticsPin1` node.

The path to this node is:

```
Root > Object > DeviceSet > [device-name] > IOLinkMaster > PortXX > Diagnostics > Flags
```

The following table lists port-specific diagnostic information.

Table 76: Port-Specific Diagnostics

Node Name	Node Class	Access	Description
DiagnosticsPin1, DiagnosticsPin2, DiagnosticsPin4	Variable	Read	Diagnostics on pin 1, pin 2 or pin 4; the numerical value contains bit-coded information: - Bit 0: short circuit - Bit 1: overload protection - Bit 2: overtemperature protection - Bit 3: overvoltage protection - Bit 4: overcurrent - Bit 5: undercurrent - Bit 6: overtemperature - Bit 7: undertemperature - Bit 8: overvoltage - Bit 9: undervoltage - Bit 10: watchdog 0: diagnostics inactive 1: diagnostics active

10.3.4.1.7 Reading Statistics

The OPC UA server provides nodes with statistical information. For example, the OPC UA client can read out the maximum measured current on pin 1 of a port in the `MaxCurrentPin1` node.

The path to this node is:

```
Root > Object > DeviceSet > [device-name] > IOLinkMaster > PortXX > Statistics > Current / Temperature / Voltage
```

The following table lists port-specific statistical information:

Table 77: Port Specific Statistical Information

Measurement	Node Name	Node Class	Access	Description
Current	MaxCurrentPin1	Variable	Read	Maximum current on pin 1 since the value was reset; unit: mA
	MaxCurrentPin2	Variable	Read	Maximum current on pin 2 since the value was reset; unit: mA
	MaxCurrentPin4	Variable	Read	Maximum current on pin 4 since the value was reset; unit: mA
	MinCurrentPin1	Variable	Read	Minimum current on pin 1
	MinCurrentPin2	Variable	Read	Minimum current on pin 2
	MinCurrentPin4	Variable	Read	Minimum current on pin 4
Temperature	MaxTemperaturePin1	Variable	Read	Maximum temperature on pin 1 since the value was reset; unit: °C
	MaxTemperaturePin2	Variable	Read	Maximum temperature on pin 2 since the value was reset; unit: °C
	MaxTemperaturePin4	Variable	Read	Maximum temperature on pin 4 since the value was reset; unit: °C
	MinTemperaturePin1	Variable	Read	Minimum temperature on pin 1 since the value was reset; unit: °C
	MinTemperaturePin2	Variable	Read	Minimum temperature on pin 2 since the value was reset; unit: °C
	MinTemperaturePin4	Variable	Read	Minimum temperature on pin 4 since the value was reset; unit: °C
Voltage	MaxVoltagePin1	Variable	Read	Maximum voltage on pin 1 since the value was reset; unit: mV
	MaxVoltagePin2	Variable	Read	Maximum voltage on pin 2 since the value was reset; unit: mV
	MaxVoltagePin4	Variable	Read	Maximum voltage on pin 4 since the value was reset; unit: mV
	MinVoltagePin1	Variable	Read	Minimum voltage on pin 1 since the value was reset; unit: mV

Measurement	Node Name	Node Class	Access	Description
	MinVoltagePin2	Variable	Read	Minimum voltage on pin 2 since the value was reset; unit: mV
	MinVoltagePin4	Variable	Read	Minimum voltage on pin 4 since the value was reset; unit: mV

10.3.4.1.8 NTP Client Configuration

The OPC UA server provides nodes for the configuration of the NTP client. The path to this node is:

```
Root > Object > DeviceSet > [device name] > Configuration > Ntp-Client
```

Table 78: NTP Client Configuration

Node Name	Node Class	Access	Default	Description
NtpClientServerIpAddress	Variable	Read/write	0	IP address of the NTP server The NTP client uses the IP address setting to retrieve the time from an NTP server. The IP address must be converted to a decimal number. The calculation is described below the table. A value of 0 disables the function.
NtpClientServerIpAddressFallback	Variable	Read/write	0	IP address of the NTP server (fallback) Optional additional IP address in case the NTP server cannot be reached via the IP address in the NtpClientServerIpAddress node. The IP address must be converted to a decimal number. The calculation is described below the table. A value of 0 disables the function.
NtpClientUpdate-Configuration	Method	Write	-	Method for writing the NtpClientServerIpAddress and NtpClientServerIpAddressFallback nodes.

Use the following formula to convert the IP address to a decimal number. For an IP address in the format "A.B.C.D.":

$$((A \times 256 + B) \times 256 + C) \times 256 + D = \text{IP address as decimal number}$$

Example for IP address 192.53.103.108:

$$((192 \times 256 + 53) \times 256 + 103) \times 256 + 108 = 3224725356$$

10.3.4.1.9 I/O Forcing via OPC UA

The OPC UA client can force output data and simulate input data. In what follows, forcing output data and simulating input data are referred to together as the Force function. From the product's point of view, there must be only one external instance that uses the Force function. Therefore, the OPC UA client must first obtain a Force ID from the product and send this Force ID with each Force function call. If the Force ID is incorrect, the product does not execute the Force function.

The path in the information model is:

```
Root > Objects > DeviceSet > [device name] > Forcing
```

The OPC UA client calls the “GetForcingID” method to get a Force ID and enable the Force function. The OPC UA client can now use the following methods:

- InputSimulationPin2
- InputSimulationPin4
- OutputPin2
- OutputPin4
- IoLinkInputSimulation
- IoLinkOutput

Each of these methods has a Force ID parameter.

The module monitors the Force function with a watchdog timer. If the OPC UA client becomes inactive, or the connection via OPC UA is lost, the watchdog timer expires, and the product switches the Force function off. The watchdog timer has the value 10 s.

While the Force function is enabled, the watchdog timer needs to be triggered regularly. Triggering occurs each time an input simulation and output method is called. The watchdog timer is also triggered when the “AssignedForceID” node is read. This means that regular reading of the “AssignedForceID” node triggers the watchdog timer and keeps the Force function active.

To terminate the Force function, the OPC UA client calls the “DisableForcing” method, using the previous Force ID again. This makes value of the Force ID invalid. The OPC UA client or another instance can request a new Force ID from the product in order to reenable the Force function.

10.3.4.1.10 Using OPC UA Client

The module has an integrated OPC UA server. You can communicate with the module with an OPC UA client.

For text purposes, you can, for example, use UaExpert from Unified Automation GmbH, which is available at <http://www.unifiedautomation.com>.

An OPC UA client can have read access to the module with the authentication “anonymous.” An OPC UA client can have read and write access to the module with the authentication “username and password” if the user in question has write permission.

10.3.4.1.10.1 Connecting to the Module

Requirements

- You must have an OPC UA client.
- For write access to the module: You must know the username and password and have write permission.
- You must know the module’s IP address.

Without a username and password, you can use “anonymous” to access the module and read data.

Establishing a Connection to the Module

1. Start UaExpert.
2. Create a new project with **File > New**.

3. Add a new server with **Server > Add**.

⇒ The **Add Server** dialog appears with the **Discovery** tab.

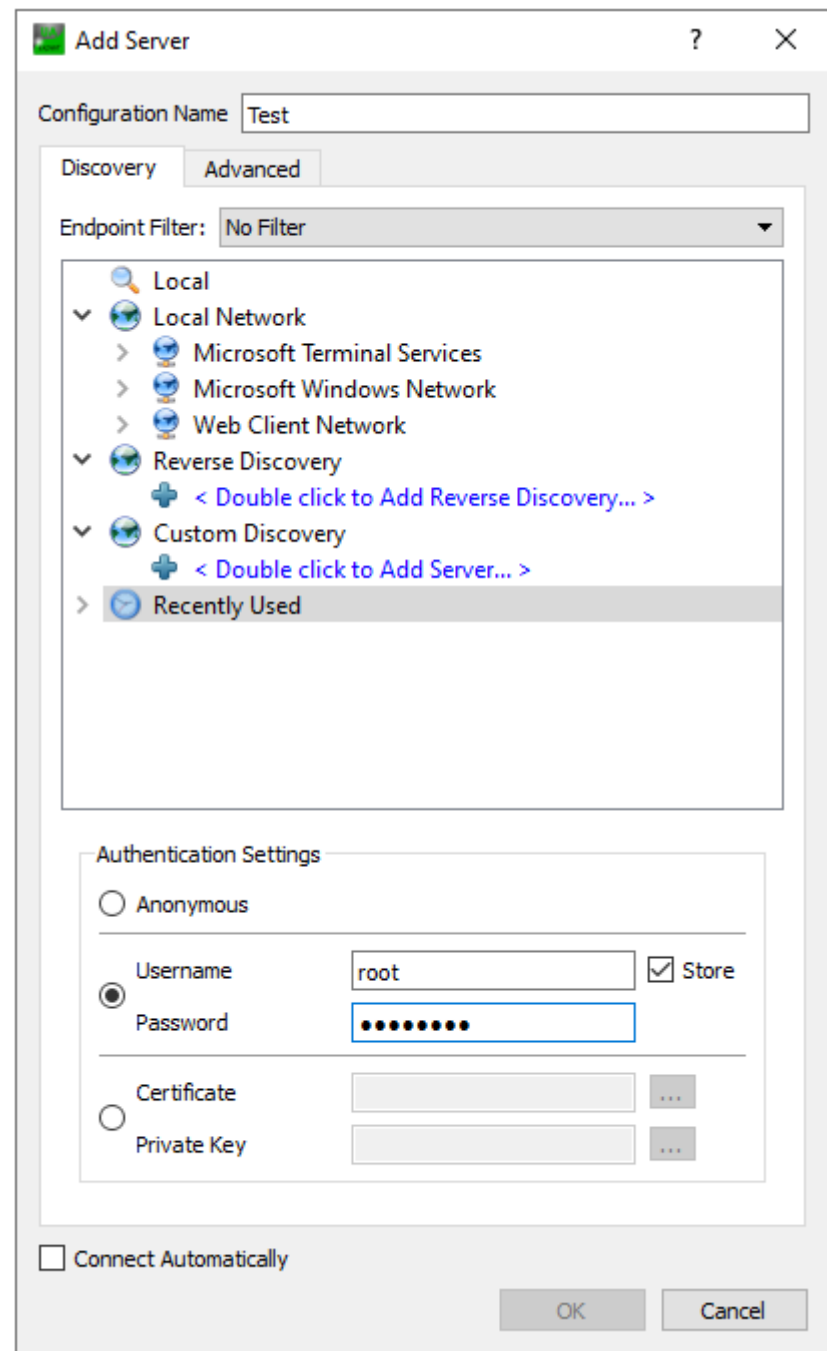


Figure 32: Add Server Dialog – Discovery Tab (Default)

Add Server

Configuration Name:

Discovery **Advanced**

Server Information

Endpoint Url:

Reverse Connect: ☐

Security Settings

Security Policy:

Message Security Mode:

Authentication Settings

☐ Anonymous

☒ Username/Password

Username: ☐ Store

Password:

☐ Certificate

Private Key

Session Settings

Session Name:

☐ Connect Automatically

OK **Cancel**

Figure 33: Add Server Dialog – Advanced Tab

4. In the **Configuration Name** field, enter a name for your configuration, e.g. “Test.”
5. Select the **Advanced** tab.
6. In the **Server Information** section of the **Advanced** tab, enter the following information in the **Endpoint URL** field: `opc.tcp://<IP address>:4840`. For <IP address>, use the module’s IP address.
7. In the **Authentication Settings** section, select the **Username/Password** option for write access to the module or **Anonymous** for read access.
8. If you selected the **Username/Password** option, enter your username and, if applicable, password there.

9. Click **OK**.

⇒ In the project window, UaExpert enters the server under **Project > Servers** e.g., "Test."

10. Open the context menu of the server ("Test") and select **Connect**.

⇒ The connection is established.

10.3.4.1.10.2 Setting the Module Time via OPC UA

Requirements

- You must have an OPC UA client.
- You must know the username and password and have write permission.
- You must know the IP address of the NTP server.
- You must have converted the IP address of the NTP server into a decimal number as described below.
- You must have already established a connection to the module.

Example for an NTP Server

The NTP server `ptbtime1.ptb.de` of the Federal Institute of Physics and Metrology in Brunswick, Germany with IP address `192.53.103.108`

Alternate NTP server (optional) `ptbtime2.ptb.de` of the Federal Institute of Physics and Metrology in Brunswick, Germany with IP address `192.53.103.104`

Converting an IP Address to a Decimal Number

Use the following formula to convert the IP address to a decimal number. For an IP address in the format "A.B.C.D.":

$$((A \times 256 + B) \times 256 + C) \times 256 + D = \text{IP address as decimal number}$$

Example for IP address 192.53.103.108:

$$((192 \times 256 + 53) \times 256 + 103) \times 256 + 108 = 3224725356$$

Instructions

1. In the **Address Space** window, open the context menu:

Root > Objects > DeviceSet > [device name] > Configuration > NtpClient > NtpClientUpdateConfiguration.

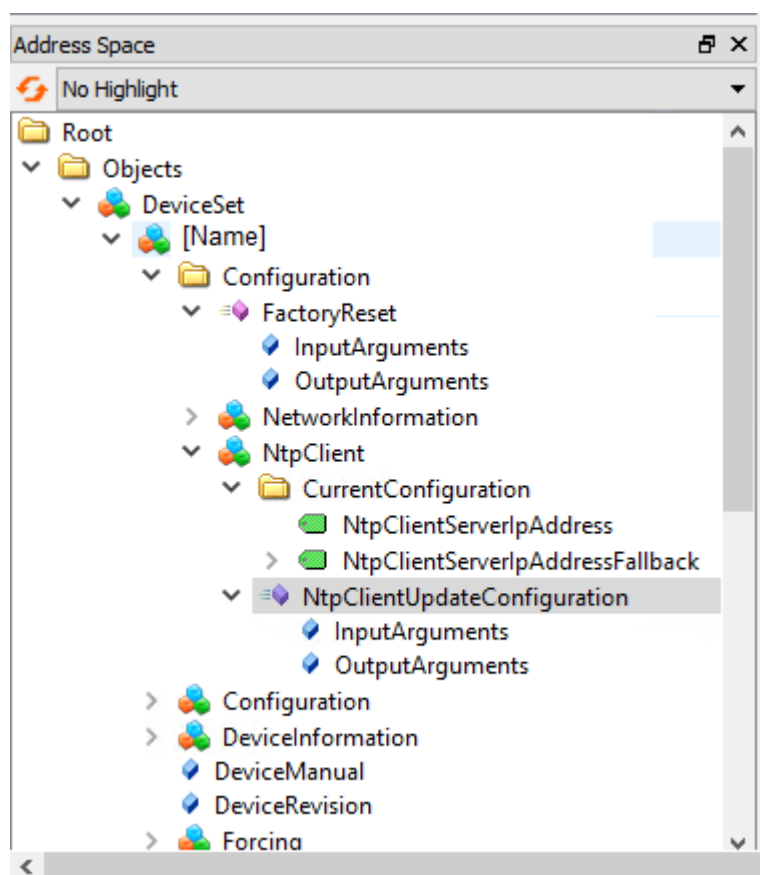


Figure 34: NtpClientUpdateConfiguration Node

2. In the context menu, select **Call**.

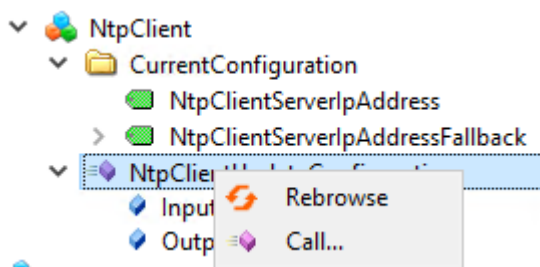


Figure 35: NtpClientUpdateConfiguration Node – Context Menu

⇒ The **Call NtpClientUpdateConfiguration on NtpClient** dialog appears.

Input Arguments			
Name	Value	DataType	Description
ServerIpAddress	3224725356	UInt32	
ServerIpAddressFallback	3224725352	UInt32	

Output Arguments			
Name	Value	DataType	Description
Status		Int32	

Result

Call Close

Figure 36: NTP Client Configuration Dialog

3. In the **Input Arguments** section, enter the value 3224725356 for the IP address of the NTP server in the **ServerIpAddress** field.
 4. In the **Input Arguments** section, enter the number 3224725352 for the IP address of the alternate NTP in the **ServerIpAddressFallback** field.
 5. Click **Call**.
- ⇒ If the function was successful, the output field in the **Output Arguments** section to the right of **Status** shows a value of 0.

A green bar appears in the **Result** section with the text "Succeeded." The two variables `ServerIpAddress` and `ServerIpAddressFallback` are now set.

The module retrieves the current time of the time server via NTP and synchronizes its internal time.

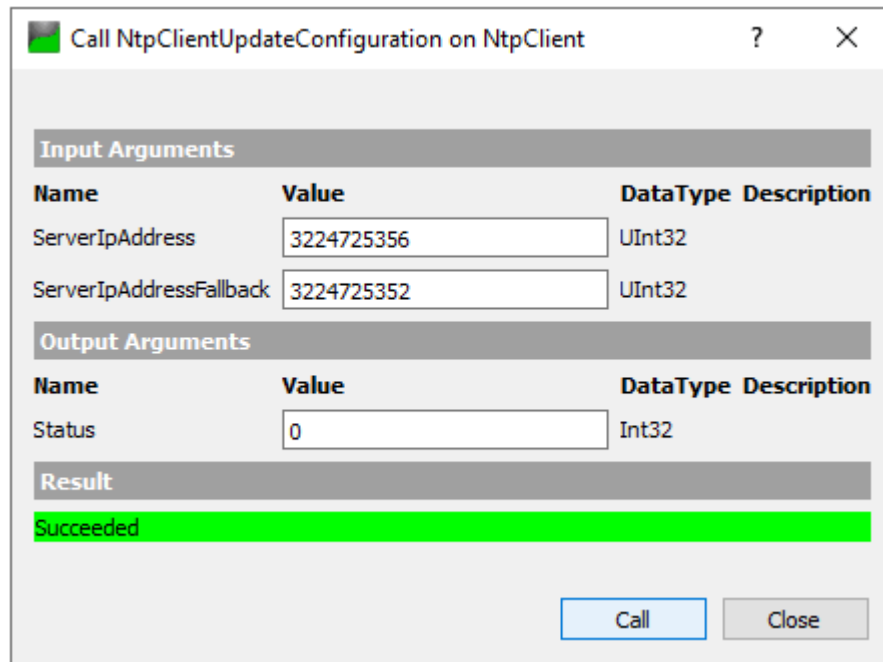


Figure 37: NTP Client Configuration Dialog (Succeeded)

10.3.4.1.10.3 Enabling Forcing

Requirements

- You must have an OPC UA client.
- You must know the username and password, and this user must have permission to execute methods.
- You must have already established a connection to the I/O module.

Step-by-Step Instructions

1. In the **Address Space** window, open the context menu: Root > Objects > DeviceSet > [device name] > Forcing > GetForcingID
2. In the context menu, select **Call**.
 - ⇒ The **Call GetForcingID on Forcing** window appears.

Name	Value	DataType	Description
Force Id		UInt32	
Message	... Save as...	String	
Status		Int32	

Result

Figure 38: GetForcingID Method

3. Click **[Call]**.

⇒ If the method call was successful, then the Force ID is displayed, and “0” appears under Status. The FLD LED on the I/O module flashes at a rate of 1 Hz.

Name	Value	DataType	Description
Force Id	2205101162	UInt32	
Message	Forcing ID has been assigned ... Save as...	String	
Status	0	Int32	

Result

Succeeded

Figure 39: GetForcingID Method: Successful

⇒ If the method call was not successful because the Force function is already in use, then “-1” appears under Status and “It’s being forced by someone else right now” under Message.

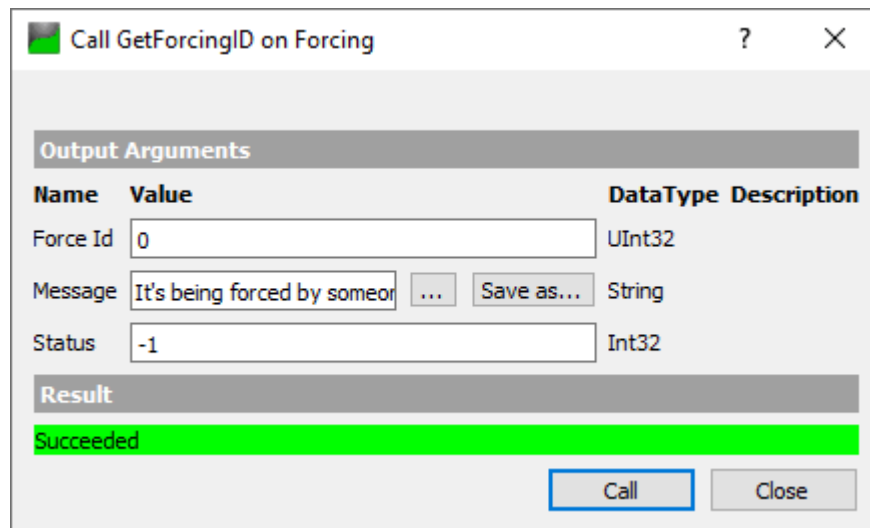


Figure 40: GetForcingID Method: Unsuccessful

4. In the OPC UA client, drag the “AssignedForceID” node into the **Data Access View** window so that the AssignedForceID is read regularly
 - ⇒ Regular reading of the AssignedForceID triggers the watchdog timer and keeps the Force function enabled.

10.3.4.1.10.4 Simulating Digital Inputs

Requirements

- You must have an OPC UA client.
- You must know the username and password, and this user must have permission to execute methods.
- You must have already established a connection to the I/O module.
- The Force function must be enabled, i.e. you must know the Force ID.
- The pin must be configured as a digital input.

Step-by-Step Instructions

1. In the **Address Space** window, open the context menu: Root > Objects > DeviceSet > [device name] > Forcing > InputSimulationPin4
2. In the context menu, select **[Call]**.
 - ⇒ The **Call InputSimulationPin4 on Forcing** window appears.

Figure 41: InputSimulationPin4 Method

3. Enter the **Force ID**, the **Force Mask** and the **Force Data** (the input arguments are described below, including an example).
4. Click **[Call]**.
 - ⇒ If the method call was successful, the input data is transmitted to the controller.
 - ⇒ If the method call was unsuccessful, then “-1” appears under Status.

Description of the Input Arguments

Table 79: Input Arguments of the InputSimulationPin Method

Input Arguments	Description
Force ID	Here the OPC UA client must use the Force ID that the OPC UA client had received after the GetForcingID method was called.
Force Mask	Ports for which simulation should be enabled. Bit mask and port assignment: Bit 0: port X01, Bit 1: port X02, Bit 2: port X03, ... Bit value 0: Simulation disabled for this port. Bit value 1: Simulation enabled for this port. Example 1: A value of 4 enables simulation for port X03. Example 2: A value of 7 enables simulation for ports X01, X02 and X03.

Input Arguments	Description
Force Data	Input value Bit mask and port assignment: Bit 0: port X01, Bit 1: port X02, Bit 2: port X03, ... Bit value 0: The pin has an input value of 0. Bit value 1: The pin has an input value of 1. Example 1 (Force Mask has a value of 4): A value of 0 sets the input value of port X03 to 0. A value of 4 sets the input value of port X03 to 1. Example 2 (Force Mask has a value of 7): A value of 0 sets the input value of ports X01, X02 and X03 to 0. A value of 5 sets the input value of port X02 to 0 and the input value of ports X01 and X03 to 1.

Description of the Output Arguments

Table 80: Output Arguments of the InputSimulationPin Method

Output Arguments	Description
Status and Message	0: Forcing digital outputs successful -1: Forcing digital outputs failed

The InputSimulationPin2 method simulates the input value of pin 2 of one or more ports. The InputSimulationPin4 method simulates the input value of pin 4 of one or more ports.

10.3.4.1.10.5 Forcing Digital Outputs

The OutputPin2 method sets the output value of pin 2 of one or more ports. The OutputPin4 method sets the output value of pin 4 of one or more ports.

Requirements

- You must have an OPC UA client.
- You must know the username and password, and this user must have permission to execute methods.
- You must have already established a connection to the I/O module.
- The Force function must be enabled, i.e. you must know the Force ID.
- The pin must be configured as a digital output.

Step-by-Step Instructions

1. In the **Address Space** window, open the context menu: Root > Objects > DeviceSet > [device name] > Forcing > OutputPin4
2. In the context menu, select **Call**.
⇒ The **Call OutputPin4 on Forcing** window appears.
3. Enter the **Force ID**, the **Force Mask** and the **Force Data** (the input arguments are described below, including an example).

Call OutputPin4 on Forcing

Input Arguments

Name	Value	DataType	Description
Force Id		UInt32	
Force Mask		Byte	
Force Data		Byte	

Output Arguments

Name	Value	DataType	Description
Message	... Save as...	String	
Status		Int32	

Result

Figure 42: OutputPin4 Method

4. Click **[Call]**.

- ⇒ If the method call was successful, then the output data on the module is forced.
- ⇒ If the method call was unsuccessful, then “-1” appears under Status.

Description of the Input Arguments

Table 81: Input Arguments of the OutputPin Method

Input Arguments	Description
Force ID	Here the OPC UA client must use the Force ID that the OPC UA client had received after the GetForcingID method was called.
Force Mask	Ports for which forcing should be enabled. Bit mask and port assignment: Bit 0: port X01, Bit 1: port X02, Bit 2: port X03, ... Bit value 0: Forcing disabled for this port. Bit value 1: Forcing enabled for this port. Example 1: A value of 4 enables the Force function for port X03. Example 2: A value of 7 enables the Force function for ports X01, X02 and X03.
Force Data	Input value Bit mask and port assignment: Bit 0: port X01, Bit 1: port X02, Bit 2: port X03, ... Bit value 0: The pin has an input value of 0. Bit value 1: The pin has an input value of 1.

Input Arguments	Description
	Example 1 (Force Mask has a value of 4): A value of 0 sets the output value of port X03 to 0. A value of 4 sets the output value of port X03 to 1. Example 2 (Force Mask has a value of 7): A value of 0 sets the output value of ports X01, X02 and X03 to 0. A value of 5 sets the output value of port X02 to 0 and the output value of ports X01 and X03 to 1.

Description of the Output Arguments

Table 82: Output Arguments of the OutputPin Method

Output Arguments	Description
Status and Message	0: Forcing digital outputs successful
	-1: Forcing digital outputs failed

10.3.4.1.10.6 Simulating IO-Link Input Data

The "IoLinkInputSimulation" method simulates the IO-Link input data of a port.

Requirements

- You must have an OPC UA client.
- You must know the username and password, and this user must have permission to execute methods.
- You must have already established a connection to the I/O module.
- The Force function must be enabled, i.e. you must know the Force ID.
- The port must be configured as an IO-Link with input data.

Step-by-Step Instructions

1. In the **Address Space** window, open the context menu and select the port: Root > Objects > DeviceSet > [device name] > Forcing > PortX > IoLinkInputSimulation.
2. In the context menu, select **Call**.
⇒ The **Call IoLinkInputSimulation on PortX** window appears

Figure 43: IoLinkInputSimulation Method

3. Enter the **Force ID**, check **Force Enable**, and enter the **Force Data** (the input arguments are described below).
4. Click **[Call]**.
 - ⇒ If the method call was successful, then the IO-Link input data is transmitted to the controller.
 - ⇒ If the method call was unsuccessful, then “-1” appears under Status.

Description of the Input Arguments

Table 83: Input Arguments of the IoLinkInputSimulation Method

Input Arguments	Description
Force ID	Here the OPC UA client must use the Force ID that the OPC UA client had received after the GetForcingId method was called.
Force Enable	False: simulation disabled for this port. True: simulation enabled for this port.
Force Data	IO-Link input data 1 to 32 bytes Example for 32 bytes: 0102030405060708090A0B0C0D0E0F10 1112131415161718191A1B1C1D1E1F20

Description of the Output Arguments

Table 84: Output Arguments of the IoLinkInputSimulation Method

Output Arguments	Description
Status and message	0: Forcing IO-Link successful -1: Forcing IO-Link failed

10.3.4.1.10.7 Forcing IO-Link Output Data

The IoLinkOutput method sets the IO-Link output data of a port.

Requirements

- You must have an OPC UA client.
- You must know the username and password, and this user must have permission to execute methods.
- You must have already established a connection to the I/O module.
- The Force function must be enabled, i.e. you must know the Force ID.
- The port must be configured as an IO-Link with output data.

Step-by-Step Instructions

1. In the **Address Space** window, open the context menu and select the port: Root > Objects > DeviceSet > [device name] > Forcing > PortX > IoLinkOutput.
2. In the context menu, select **Call**.
⇒ The **Call IoLinkOutput on PortX** window appears.

Input Arguments			
Name	Value	DataType	Description
Force Id		UInt32	
Force Enable	☐	Boolean	
Force Data (32 Bytes)	... Load file...	ByteString	

Output Arguments			
Name	Value	DataType	Description
Message	... Save as...	String	
Status		Int32	

Result	

Figure 44: IoLinkOutput Method

3. Enter the **Force ID**, check **Force Enable**, and enter the **Force Data** (the input arguments are described below).
4. Click **[Call]**.
⇒ If the method call was successful, then the IO-Link output data on the module is forced.
⇒ If the method call was unsuccessful, then “-1” appears under Status.

Description of the Input Arguments

Table 85: Input Arguments of the IoLinkOutput Method

Input Arguments	Description
Force ID	Here the OPC UA client must use the Force ID that the OPC UA client had received after the GetForcingID method was called.
Force Mask	False: simulation disabled for this port. True: simulation enabled for this port.
Force Data	IO-Link output data 1 to 32 bytes Example for 32 bytes: 0102030405060708090A0B0C0D0E0F10 1112131415161718191A1B1C1D1E1F20

Description of the Output Arguments

Table 86: Output Arguments of the IoLinkOutput Method

Output Arguments	Description
Status and message	0: Forcing IO-Link successful -1: Forcing IO-Link failed

10.3.4.1.10.8 Disabling Forcing

Requirements

- You must have an OPC UA client.
- You must know the username and password, and this user must have permission to execute methods.
- You must have already established a connection to the I/O module.
- You must have already enabled the Force function and know the Force ID.

Step-by-Step Instructions

1. In the **Address Space** window, open the context menu: `Root > Objects > DeviceSet > [module name] > Forcing > DisableForcing`.
2. In the context menu, select **Call**.
⇒ The **Call DisableForcing on Forcing** window appears.
3. Enter the **Force ID**.
4. Click **[Call]**.
⇒ If the method call was successful, then "0" appears under Status, the Force function is disabled, and the FLD LED on the module switches to the off state.

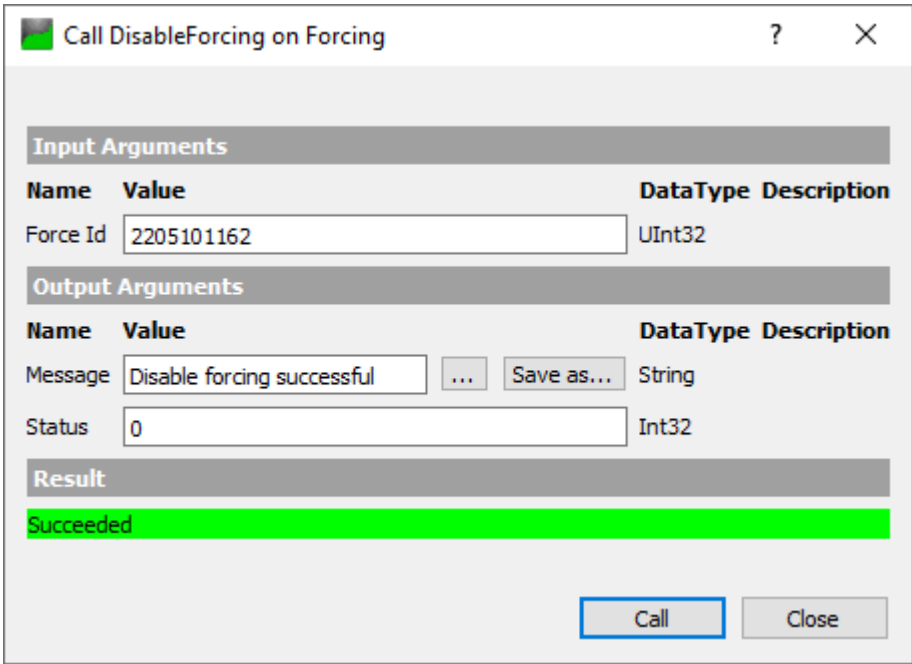


Figure 45: DisableForcing Method

⇒ If the method call was unsuccessful, then “-1” appears under Status.

Description of the Input Arguments

Table 87: Input Arguments of the DisableForcing Method

Input Arguments	Description
Force ID	Here the OPC UA client must use the Force ID that the OPC UA client had received after the GetForcingID method was called.

Description of the Output Arguments

Table 88: Output Arguments of the DisableForcing Method

Output Arguments	Description
Status and Message	0: Forcing IO-Link successful
	-1: Forcing IO-Link failed

10.3.4.2 Reading and Writing Parameters of an IO-Link Device

The module provides services for the EtherNet/P scanner to read or write parameters of an IO-Link device. For this purpose, an acyclic EtherNet/IP service is mapped onto the ISDU service of the IO-Link communication. The IO-Link master can read or write parameters of the IO-Link device by means of the ISDU (Indexed Service Data Unit) service.

IO-Link parameter object 131 (0x83) maps CIP services to ISDU services of the IO-Link communication. The object and the structures of the read and write services are described in [🔗 IO-Link Device Parameters – Object 131 \(0x83\) \[▶ 156\]](#).

Reading Parameters of an IO-Link Device

The Ethernet/IP scanner reads the IO-Link device parameter object with the read ISDU service. In the request, the service contains the values for the port (to which the IO-Link device is connected), object index and object subindex of the IO-Link parameter. In the

positive case, the response to the EtherNet/IP scanner contains the value of the parameter that has been read. In the negative case, the response contains information about the error.

Writing Parameters of an IO-Link Device

The Ethernet/IP scanner writes to the IO-Link device parameter object with the ISDU write service. In the request, the service contains the values for the port (to which the IO-Link device is connected), the object index, the object subindex of the IO-Link parameter and the value of the parameter that is to be written. In the positive case, the response to the EtherNet/IP scanner contains the CIP status with the value 0. In the negative case, the response contains information about the error.

10.3.4.3 Setting the Module Time

The module has an integrated clock that retrieves the time from an NTP server via NTP (Network Time Protocol). To do so, the module needs the IP address of the NTP server.

An OPC UA client is necessary in order to set the IP address of the NTP server.

The nodes of the OPC UA server for configuring the NTP client are described in [🔗 NTP Client Configuration \[▶ 119\]](#).

Diagnostics

11.1 Diagnostics via Indicators

Power Supply Status

The 1L and 2L LEDs indicate the status of the supply voltages.

Table 89: Supply Voltage Status, 1L and 2L

LED	Color	State	Description
1L	Duo LED, red/green		
	Green	On	1L supply voltage OK
	Red	On	1L undervoltage (voltage between 11 V and 18 V)
	Red	Flashing	1L overvoltage (voltage above 30 V)
	Off	Off	No 1L supply voltage
2L	Duo LED, red/green		
	Green	On	2L supply voltage OK
	Off	Off	No 2L supply voltage

System Status

The SYS LED indicates the status of the system (product).

Table 90: System Status

LED	Color	State	Description
SYS (system status)	Duo LED, yellow/green		
	Green	On	System status: OK Firmware is being executed.
	Yellow/green	Flashing 4 Hz, alternating colors	Firmware update active
	Yellow	On	During the firmware update, an error was detected, e.g., a checksum error.
	Off	Off	No power supply

Status of the Field-Side Functions

The FLD LED indicates the status of the field-side functions.

Table 91: Field LED

LED	Color	State	Description
FLD	Duo LED, green/yellow (yellow = simultaneously red and green)		
	Green	On	Normal operating state
	Green	Flashing (1 Hz)	Force mode is active
	Green	Flashing (4 Hz)	WAGO IO-Link Configurator is connected to the module
	Yellow	On	Configuration error
	Off	Off	Non-operational; no voltage

Application Status

The APL LED indicates the status of the application.

Table 92: APL LED

LED	Color	State	Description
APL	Duo LED, red/green/yellow (yellow = simultaneously red and green)		
	Off	Off	LED without function

EtherNet/IP Adapter Status

The MS and NS LEDs indicate the status of the EtherNet/IP module.

The LNK and ACT LEDs indicate the Ethernet status.

Table 93: Status of the EtherNet/IP module

LED	Color	State	Description
MS (module status)	Duo LED, red/green		
	Green	On	Module in operation: The module is in operation and working correctly.
	Green	Flashing (1 Hz)	Standby: The module has not been configured.
	Green/red/green	Rapid flashing: green/red/green	Self test: The module runs through a self test after it is switched on. The following sequence occurs during the self test: • NS LED off • MS LED lights up green for about 250 ms, turns red for about 250 ms and then lights up green again (and continues to do so until the test is completed). • NS LED lights up green for about 250 ms, turns red for about 250 ms and then goes out (and remains off until the test is completed).
	Red/green/off	Flashing sequence: red/green/off	Flashing sequence: The flashing sequence identifies the adapter visually. The scanner can start the flashing sequence in identity object 1 of the adapter. The MS LED and NS LED go through the flashing sequence simultaneously.
	Red	Flashing (1 Hz)	Serious recoverable error: The module has identified an error that is serious but can be fixed – for example, an incorrect or inconsistent configuration may be classified as a serious recoverable error.
	Red	On	Serious unrecoverable error: The module has identified an error that is serious and cannot be fixed.
	Off	Off	Switched off: The module is switched off.
NS (Network status)	Duo LED, red/green		
	Green	On	Connected: An IP address is configured, at least one CIP connection (of any transport class) has been established, and, for an Exclusive Owner connection, the time limit has not been exceeded.
	Green	Flashing (1 Hz)	No connection: An IP address has been configured, but no CIP connections have been established, and, for an Exclusive Owner connection, the time limit has not been exceeded.

LED	Color	State	Description
	Green/red/off	Rapid flashing: green/red/off	Self test: The module runs through a self test after it is switched on. See the description of the "MS" LED and the description of the "Self test" status.
	Red/green/off	Flashing sequence: red/green/off	Flashing sequence: The flashing sequence identifies the adapter visually. The scanner can start the flashing sequence in identity object 1 of the adapter. The MS LED and NS LED go through the flashing sequence simultaneously.
	Red	Flashing (1 Hz)	Connection timeout: An IP address is configured, and, for an Exclusive Owner connection for which this module is the destination, the time limit has been exceeded. The NS LED is not permanently reset to green until all Exclusive Owner connections whose time limits were exceeded are reestablished.
	Red	On	Duplicate IP: The module has detected that its IP address is already being used.
	Off	Off	Switched off, no IP address: The module has no IP address or is switched off.

Table 94: EtherNet/IP Module LED States

LED State	Definition
Flashing (1 Hz)	The LED switches on and off in phases at a frequency of about 1 Hz: on for 500 ms and then off for 500 ms.
Rapid flashing green/red/green	The MS LED or NS LED lights up green for 250 ms, then red for 250 ms, then green again (until the test is completed).
Flashing sequence red/green/off	The MS LED and NS LED both light up red for 500 ms, then light up green for 500 ms, then go out for 500 ms. The flashing sequence repeats at least six times.

Table 95: Ethernet Status

LED	Color	State	Description
LNK (Link)	LED green		
	Green	On	The module is connected to the Ethernet.
	Off	Off	The module is not connected to the Ethernet.
ACT (Activity)	LED yellow		
	Yellow	Flickering (load-dependent)	The module is sending/receiving Ethernet frames.
	Off	Off	The module is not sending/receiving Ethernet frames.

Table 96: LED States – Ethernet

LED State	Definition
Flickering (load-dependent)	The LED indicates high ETHERNET activity by switching on and off at a frequency of 10 Hz: "On" for 50 ms and then "Off" for 50 ms. The LED indicates low ETHERNET activity by switching on and off at irregular intervals.

Bluetooth Status

The Bluetooth® LED is integrated into the Bluetooth® antenna and indicates the connection status.

Table 97: LED States ®

LED	Color	State	Description
BT	Duo LED, blue/red		
	Blue	On	Bluetooth® connection established
	Off	Off	Bluetooth® inactive

IO-Link Port Status

LEDs 0 (port X01), 2 (port X02), 4 (port X03), ..., 14 (port X08) indicate the status of the IO-Link Master or digital input/output channel A.

LEDs 1 (port X01), 3 (port X02), 5 (port X03), ..., 15 (port X08) indicate the status of the digital input/output channel B.

Table 98: IO-Link Port Status (Class A)

LED	Color	State	Description
0, 2, 4, ... IO-Link Port Channel A (pin 4)	Duo LED, yellow/red/green (yellow = simultaneously red and green)		
	yellow	On	Status of digital input/output channel A: 1
	Off	Off	Status of digital input/output channel A: 0
	green	On	IO-Link communication active
	green	Flashing 1 Hz	No IO-Link communication or incorrect IO-Link device
	red	On	Overload, short circuit (pin 4 and pin 3)
	red	Flashing 1 Hz	Overload, sensor supply short circuit (pin 1 and pin 3)
1, 3, 5, ... IO-Link Port Channel B (pin 2)	Duo LED, yellow/red (yellow = simultaneously red and green)		
	yellow	On	Status of digital input/output channel B: 1
	Off	Off	Status of digital input/output channel B: 0
	red	On	Overload, short circuit (pin 2 and pin 3)
	red	Flashing 1 Hz	Overload, sensor supply short circuit (pin 1 and pin 3)

11.2 Diagnostics via EtherNet/IP

The module contains the event log object with information on IO-Link events. The controller can read the attributes of the event log object in order to get the “Event Qualifier” and “Event Code” of an IO-Link event. A CIP instance is assigned to each IO-Link port.

The object's attributes are described in  **Event Log Object 65 (0x41) [► 149]**.

11.2.1 Error Codes (CIP Status)

Table 99: Error Codes (CIP Status)

CIP Status	Description
0 (0x00)	Success The addressed object has executed the service successfully.

CIP Status	Description
1 (0x01)	Connection error A connection-specific service has failed. The error may have occurred anywhere along the connection path.
2 (0x02)	Resource not available Some resources the object needs in order to execute the service are unavailable.
3 (0x03)	Invalid parameter value See CIP status 32 (0x20).
4 (0x04)	Path segment error A path segment error has occurred. The path information could not be evaluated.
5 (0x05)	Path destination unknown The addressed CIP class or CIP instance is unknown.
6 (0x06)	Partial transfer Only part of the data could be transferred.
7 (0x07)	Connection lost The connection for message transmission has been lost.
8 (0x08)	Service not supported The required service for this object class / object instance is undefined or has not been implemented.
9 (0x09)	Invalid attribute value Invalid attribute data detected.
10 (0x0A)	Attribute list error An attribute in the "Get_Attribute_List" or "Set_Attribute_List" response has a status not equal to 0.
11 (0x0B)	Already in requested mode/state The object is already in the mode or state requested by the service.
12 (0x0C)	Object status conflict The object cannot execute the requested service in the current mode or state.
13 (0x0D)	Object already exists An attempt was made to create an instance of an existing object.
14 (0x0E)	Attribute cannot be adjusted An attempt was made to modify a fixed attribute.
15 (0x0F)	Rights violation The rights or permissions check failed.
16 (0x10)	Device status conflict The current mode or state of the device prevents the requested service from being executed.
17 (0x11)	Response data too big The data to be transferred required more space than the assigned response buffer has.
18 (0x12)	Fragmentation of a primitive value The service defines a function that will fragment a data value primitive, e.g., halving a REAL data type, so it cannot be executed.
19 (0x13)	Too little data The service supplied too little data to execute the specified task.
20 (0x14)	Attribute not supported The addressed attribute in the request is not supported.

CIP Status	Description
21 (0x15)	Too much data The service supplied more data than expected.
22 (0x16)	Object does not exist The specified objects does not exist on the device.
23 (0x17)	Service fragmentation order inactive The fragmentation order is currently inactive for this service and this data.
24 (0x18)	No saved attribute data The attribute data for this object was not saved before the service was requested.
25 (0x19)	Save attempt failed The object's attribute data could not be saved because an error occurred during a save attempt.
26 (0x1A)	Routing error: request packet too large The routing device had to terminate the service because this service's request packet was too large for transfer on the network on the path to the destination.
27 (0x1B)	Routing error: response packet too large The routing device had to terminate the service because this service's response packet was too large for transfer on the network on the path to the destination.
28 (0x1C)	Missing entry data in attribute list The service could not supply an attribute of an attribute list which it needs in order to execute the requested behavior.
29 (0x1D)	Invalid attribute value list The service returns a attribute list containing the status message "invalid attribute."
30 (0x1E)	An embedded service caused an error If the embedded service is an IO-Link service: The IO-Link-specific error codes within the CIP data provide more information of the IO-Link master or IO-Link device.
31 (0x1F)	Manufacturer-specific error A manufacturer-specific error occurred. This manufacturer-specific error appears if none of the general error codes can be used.
32 (0x20)	Invalid parameter A parameter in the request is invalid because it does not meet the requirements of the CIP specification and/or an application object's specification.
33 (0x21)	Write-once value or medium already written to An attempt was made to modify the values of a medium although these values were already written and cannot be written a second time.
34 (0x22)	Invalid response received An invalid response was received, for example because a response service code does not match the request service code, or because the response is shorter than the expected minimum length.
35 (0x23)	Reserved
– 36 (0x24)	Reserved for future extensions of the CIP standard.
37 (0x25)	Errors in the key segment The key segment (the first in the path) does not match the target module. For more information on which part of the key check failed, see the object status.
38 (0x26)	Invalid path size Due to lack of information or an excess of routing data, the path to an object cannot be routed.

CIP Status	Description
39 (0x27)	Unexpected attribute in the list An attempt was made to set an attribute that is not allowed to be set in the current situation.
40 (0x28)	Invalid element ID The member ID in the request is not present in the class/instance attribute.
41 (0x29)	Element cannot be modified A request occurred to modify an element that cannot be modified.
42 (0x2A)	General error in the "Only-Group-2 Server" This DeviceNet-specific error cannot occur in Ethernet/IP.
43 (0x2B)	Reserved
– 207 (0xCF)	Reserved for future extensions of the CIP standard.
208 (0xD0)	Reserved for object classes and service errors
– 255 (0xFF)	An-object-class-specific error has occurred.

11.3 Diagnostics via IO-Link

An IO-Link event contains an "Event Qualifier" and an "Event Code". The "Event Qualifier" indicates whether the IO-Link event came from the master or the device.

Event Qualifier

The event qualifier provides bit-coded information on the event.



Figure 46: Event qualifier

Table 100: Event Qualifier

Bit	Name	Description
Bits 6–7	Mode	0: reserved 1: single event 2: event disappears 3: event appears
Bits 4–5	Type	0: reserved 1: notification 2: warning 3: error
Bit 3	Source	0: device (remote) 1: master/port
Bits 0–2	Instance	0: unknown 1–3: reserved 4: application 5–7: reserved

IO-Link Master Event Codes

Table 101: IO-Link Master Event Codes

Event Code	Description	Type	Corrective Action
0x0000	No malfunction	Notification	No need for action
0x1800	No IO-Link device (communication); communication with IO-Link device lost	Error	Check of whether IO-Link device is connected
0x1801	Startup parameterization error	Error	Check parameters
0x1802	Discrepancy during validation: incorrect VendorID	Error	Use correct IO-Link device type
0x1803	Discrepancy during validation: incorrect DeviceID	Error	Use correct IO-Link device type
0x1804	Short circuit on pin C/Q (pin 4)	Error	Check installation
0x1805	Overtemperature (on the port)	Error	Check temperature and load
0x1806	Short circuit on pin 1 (1L+ power supply)	Error	Check installation
0x1807	Overcurrent on pin 1 (1L+ power supply)	Error	Check power supply
0x1808	IO-Link device event overrun	Error	Check IO-Link device
0x1809	Backup inconsistency: insufficient memory (2048 octets)	Error	Delete data storage by reconfiguring the port
0x180A	Backup inconsistency: identity error	Error	Delete data storage by reconfiguring the port
0x180B	Backup inconsistency: data storage, unspecified error	Error	Delete data storage by reconfiguring the port
0x180C	Backup inconsistency: upload error	Error	Check IO-Link master, check connection to IO-Link device
0x180D	Parameter inconsistency: download error	Error	Check IO-Link device, check connection to IO-Link master
0x180E	Class B: undervoltage on pin 2 (2L+ power supply)	Error	Check power supply
0x180F	Class B: short circuit on pin 2 (2L+ power supply)	Error	Check installation and load
0x1810	Short circuit on pin 2 (DIO)	Error	Check installation and load
0x1811	Short circuit on pin 4 (DIO)	Error	Check installation and load
0x1812	Overcurrent on pin 2 (DIO)	Error	Check load and installation
0x1813	Overcurrent on pin 4 (DIO)	Error	Check load and installation

IO-Link Device Event Codes (General)

The following table lists standard IO-Link-Device event codes. For device-specific event codes or corrective action, consult the manual of the IO-Link device used.

Table 102: IO-Link Device Event Codes (General)

Event Code	Description	Type	Corrective Action
0x0000	No malfunction	Notification	No need for action
0x1000	General malfunction (unknown error)	Error	See the manual of the IO-Link device used
0x1800 – 0x18FF	Manufacturer-specific	–	See the manual of the IO-Link device used
0x4000	Temperature error – overload	Error	Check temperature, determine cause of overload
0x4210	IO-Link device: overtemperature	Warning	Eliminate cause of heat

Event Code	Description	Type	Corrective Action
0x4220	IO-Link device: undertemperature	Warning	Insulate IO-Link device
0x5000	IO-Link device: hardware error	Error	Replace IO-Link device
0x5010	Component: malfunction	Error	Repair or replace
0x5011	Loss of non-volatile memory	Error	Check batteries
0x5012	Batteries weak	Warning	Replace batteries
0x5013	HMI button pressed	Notification	-
0x5100	General power supply error	Error	Check power supply
0x5101	Fuse blown/open	Error	Replace fuse
0x5110	Primary power supply: overvoltage	Warning	Check the tolerance of the 1L+ voltage
0x5111	Primary power supply: undervoltage	Warning	Check the tolerance of the 1L+ voltage
0x5112	Secondary supply voltage: error (port class B)	Warning	Check the tolerance of the 2L+ voltage
0x6000	IO-Link device: software error	Error	Check firmware version
0x6320	Parameter error	Error	Check data sheet and values
0x6321	Parameter missing	Error	Use data sheet for check
0x6350	Parameters modified	Error	Check configuration
0x7700	Lower-level IO device: wire break	Error	Check installation
0x7701 – 0x770F	Lower-level IO device 1 ... 15: wire break	Error	Check installation
0x7710	Short circuit	Error	Check installation
0x7711	Reference potential: error	Error	Check installation
0x8C00	Technology-specific application error	Error	Reset IO-Link device
0x8C01	Simulation active	Warning	Check operating mode
0x8C10	Process variable: range overrun – process data indeterminate	Warning	Check IO-Link device configuration
0x8C20	Measurement range overrun	Error	Check application
0x8C30	Process variable: range underrun – process data indeterminate	Warning	Check IO-Link device configuration
0x8C40	Maintenance required	Warning	Clean
0x8C41	Maintenance required	Warning	Refill
0x8C42	Maintenance required	Warning	Replace wear parts
0x8CA0 – 0x8DFF	Manufacturer-specific	–	See the manual of the IO-Link device used
0xB000 – 0xB0FF	Safety extensions	–	See the manual of the IO-Link device used
0xB100 – 0xBFFF	Profile-specific	–	See the manual of the IO-Link device used
0xFF91	Internal data storage upload request	(Individual) notification	See the manual of the IO-Link device used
0xFFB9	Error during retry	Error	See the manual of the IO-Link device used
Every other code	Reserved	–	See the manual of the IO-Link device used

Service

12.1 Resetting to Factory Settings

The device can be reset to the factory settings. Use the WAGO I/O Field Webserver for this purpose.

You can find information on the procedure in  [Resetsetting the Module to the Factory Settings \[► 103\]](#).

12.2 Updating Firmware

The firmware of the module can be updated. Use the WAGO I/O Field Webserver for this purpose.

You need the firmware file corresponding to the module type. The name of the firmware file is always `FWUPDATE.zip`; you can store it in a folder with the name of the module (e.g., “765-4101”).

You can find information on performing firmware updates in  [Updating Firmware \[► 101\]](#).

Decommissioning

13.1 Disposal and Recycling

Table 103: WEEE Mark

Logo	Description
	Electrical and electronic equipment may not be disposed of with household waste. This also applies to products without this mark.

Electrical and electronic equipment contain materials and substances that can be harmful to the environment and health. Electrical and electronic equipment must be disposed of properly after use. Environmentally friendly disposal benefits health, protects the environment from harmful substances in electrical and electronic equipment and enables sustainable and efficient use of resources.

- Observe the national and local regulations for the disposal of electrical and electronic equipment, lithium-ion batteries, lead–acid batteries and packaging.
- Clear any data stored on electrical and electronic equipment.
- Remove lithium-ion batteries, lead–acid batteries or memory cards that are added to the electrical and electronic equipment.
- Wear appropriate personal protective equipment when removing the lithium-ion batteries and lead–acid batteries.
- Dispose of all types of packaging to ensure a high level of recovery, reuse and recycling.
- Have electrical and electronic equipment sent to a local collection point.
- Throughout Europe, Directives 2006/66/EC, 94/62/EC and 2012/19/EU (WEEE) apply. National directives and laws may differ.

Appendix

14.1 Objects

14.1.1 Event Log Object 65 (0x41)

The event log object contains information on IO-Link events. A CIP instance is assigned to each IO-Link port.

Instance 0 (Class Attribute)

Table 104: Event Log Object 65 (0x41) Class Attributes

At-tribute	Name	n/a	Access	Data Type	Description	Default
1	Revision	n/a	Get	UINT	Version of this object	1
2	Max. instance	n/a	Get	UINT	Number of IO-Link ports	1–8
32	Time format	n/a	Get	USINT	Data type identifier of the time format Only the STIME data type is supported.	204 (0xCC) = STIME
33	Present time	n/a	Get	USINT	Default for time value Applies to all instances.	0

Instances 100, 101, ... (Instance Attribute)

The following table shows the assignment of CIP instances to IO-Link ports.

Table 105: Mapping CIP Instances to IO-Link Ports

IO-Link Port	CIP Instance
1	100
2	101
3	102
...	...

The following table describes the attributes of instances 100, 101 etc.

Table 106: Instance Attributes of Event Log Object 65 (0x41)

At-tribute	Name	n/a	Access	Data Type	Description	Default
2	State	V	Get	USINT	Status of this instance 0: does not exist 1: stopped 2: empty 3: present 4: full/overwrite 5: full/stop 6–255: reserved	-
9	Logged data configuration	n/a	Get, set	BYTE	Determines what data is saved in the event log. Bit 0 = 0: enter log event without time value Bit 0 = 1: enter log event with time value Bits 1–7: reserved (always 0)	0

Attribute	Name	n/a	Access	Data Type	Description	Default
10	Log full action	n/a	Get, set	USINT	Determines what to do when a new event is detected and the log is full. 0: stop 1: scroll 2–255: reserved	1
11	Duplicate event action	n/a	Get, set	USINT	Determines what to do if a duplicate event is detected. 0: ignore 1: add 2–255: reserved	1
12	Event/data log maximum size	V	Get	UDINT	Max. number of entries in the event log.	8
13	Event/data log size	V	Get	UDINT	The current number of entries in the event log. Values: 0 to maximum (= value of attribute 12).	0
14	Event/data log	V	Get Get member Remove member	ARRAY of STRUCT	List of all logged events. An entry contains the IO-Link event qualifier (USINT) and the IO-Link event code (UINT). Attribute 9 determines whether a timestamp (STIME) is stored in addition. The structure of an entry is described below.	0
19	Log full	V	Get	BOOL	Log full? False: log is not full True: log is full	False
20	Log contains entries	V	Get	BOOL	Does the log contain entries? False: log is empty True: log contains events	False
21	Log overrun	V	Get	BOOL	Log overrun? False: no log overrun True: log overrun	False
22	Sequential event/data access	V	Get	STRUCT	Simple read access to event entries If there are one or more entries in the event log, Get_Attribute_Single reads the first entry, which is then removed from the event log. If there are no entries in the event log, Get_Attribute_Single supplies no data.	–
24	Event identifier format	n/a	Get, set	USINT	Format of a log entry 0–3: reserved 4: 24 bits in the format USINT + UINT 5–255: reserved	4

Attribute 14: Structure of an Entry

The value of attribute 9 determines the structure of an entry.

Table 107: Structure of a Log Entry

Structure of an Entry	Description
USINT	IO-Link event qualifier, always present.
UINT	IO-Link event code, always present.
STIME	System time The system time is only present if attribute 9 bit 0 = 1.

Services

Table 108: Event log object 65 (0x41) services

Service Code	Service Name	Class Level	Instance Level	Description
0x05	Reset	–	Yes	Reset
0x0E	Get attribute single	Yes	Yes	Read one attribute
0x10	Set attribute single	–	Yes	Write one attribute
0x18	Get member	–	Yes	Read entry
0x1B	Remove member	–	Yes	Delete entry

14.1.2 IO-Link Port Configuration – Object 128 (0x80)

The IO-Link port configuration object contains the configuration of an IO-Link port. Each IO-Link port is assigned to one object instance.

Instance 0 (Class Attribute)

Table 109: IO-Link Port Configuration Class Attributes – Object 128 (0x80)

Attribute	Name	n/a	Access	Data Type	Description	Default
1 (0x01)	Revision	n/a	Get	UINT	Version of this object	1
2 (0x02)	Max. instance	n/a	Get	UINT	Number of IO-Link ports	Number of IO-Link ports available

Instances 1, 2, ... (Instance Attribute)

The following table shows the assignment of CIP instances to IO-Link ports.

Table 110: Assignment of CIP Instances to IO-Link Ports

IO-Link Port	CIP Instance
1 (0x01)	1 (0x01)
2 (0x02)	2 (0x02)
3 (0x03)	3 (0x03)
...	...

The following table describes the attributes of instances 1, 2 etc.

Table 111: IO-Link Port Configuration Instance Attributes – Object 128 (0x80)

Attribute	Name	n/a	Access	Data Type	Description	Default
1 (0x01)	Port mode	n/a	Get/set	USINT	Port operating mode (configuration of pin 4) 0: The port is disabled. L+ is switched off. The process data (input and output) is set to 0. The I/O module for this port no longer performs actions. 1: The port is used as an IO-Link port with manual (user-defined) configuration. The manufacturer ID, device ID and version ID are validated. 2: The port is used as an IO-Link port with automatic start. IO-Link device configuration and validation do not occur. 3: digital input 4: digital output	2
2 (0x02)	Validation and backup	n/a	Get/set	USINT	Validation and backup settings for identifying the IO-Link device if it is replaced. 0: no identification of IO-Link device 1: Per IO-Link specification 1.0, the IO-Link device is identified and checked for type compatibility. 2: Per IO-Link specification 1.1, the IO-Link device is identified and checked for type compatibility. 3: Per IO-Link specification 1.1, the IO-Link device is identified and checked for type compatibility (with backup and restore functionality) 4: Per IO-Link specification 1.1, the IO-Link device is identified and checked for type compatibility (with restore functionality)	0
3 (0x03)	IQ behavior	n/a	Get/set	USINT	IQ behavior of the port (configuration of pin 2) 0: Pin 2 cannot be used. 1: digital input 2: digital output 3–4: reserved 5: power supply 2L (only for IO-Link Class B) – this option is only intended for IO-Link Class B devices. Do not select this option for IO-Link class A devices!	0
4 (0x04)	Port cycle time	n/a	Get/set	USINT	Cycle time of the port For the description of the values, see table “Port Cycle Time” in “Port Cycle Time” Parameter [p. 67].	0
5 (0x05)	Vendor ID	n/a	Get/set	UINT	Manufacturer ID 0 ... 65535 The manufacturer ID is used to check whether an IO-Link device from the right manufacturer is connected. For the value of the manufacturer ID, see the documentation of the IO-Link device used. If the value is 0, no check is performed.	0

Attribute	Name	n/a	Access	Data Type	Description	Default
6 (0x06)	Device ID	n/a	Get/set	UDINT	Device ID 0 ... 4294967295 The device ID is used to check whether the right IO-Link device is connected. For the value of the device ID, see the documentation of the IO-Link device used. If the value is 0, no check is performed.	0

Services

Table 112: IO-Link Port Configuration Services – Object 128 (0x80)

Service Code	Service Name	Class Level	Instance Level	Description
14 (0x0E)	Get attribute single	Yes	Yes	Read one attribute
16 (0x10)	Set attribute single	-	Yes	Write one attribute
1 (0x01)	Get attributes all	-	Yes	Read all attributes
2 (0x02)	Set attributes all	-	Yes	Write all attributes

14.1.3 IO-Link Port Configuration – Object 129 (0x81)

The IO-Link port status object contains status information on the IO-Link master port. Each IO-Link port is assigned to one object instance.

Instance 0 (Class Attribute)

Table 113: IO-Link Port Configuration Class Attributes – Object 128 (0x80)

Attribute	Name	n/a	Access	Data Type	Description	Default
1 (0x01)	Revision	n/a	Get	UINT	Version of this object	1
2 (0x02)	Max. instance	n/a	Get	UINT	Number of IO-Link ports	Number of IO-Link ports available

Instances 1, 2, ... (Instance Attribute)

The following table shows the assignment of CIP instances to IO-Link ports.

Table 114: Assignment of CIP Instances to IO-Link Ports

IO-Link Port	CIP Instance
1 (0x01)	1 (0x01)
2 (0x02)	2 (0x02)
3 (0x03)	3 (0x03)
...	...

The following table describes the attributes of instances 1, 2 etc.

Table 115: IO-Link Port Status Instance Attributes – Object 129 (0x81)

Attribute	Name	n/a	Access	Data Type	Description	Default
1 (0x01)	Port state info	V	Get	USINT	Current port status information of the IO-Link port 0: no IO-Link device – no IO-Link device is connected to the port, or there is no communication with the connected IO-Link device. 1: disabled – the port is disabled. 2: wrong device – the version or compatibility check revealed that the wrong IO-Link device is connected. 3: preoperate – the IO-Link device is ready for communication. 4: operate – the IO-link device is communicating. 5: DI CQ – the port is in the Digital Input operating mode. 6: DO CQ – the port is in the Digital Output operating mode. 7–8: reserved 9: incorrect cycle time – the cycle time according to the configuration does not match the connected IO-Link device. 254: port power off – the port voltage is switched off. 255: not available – the port is not available.	0
2 (0x02)	Port quality info	V	Get	USINT	Information on the port quality and validity of the process data for the input and output. The content is bit-coded. Bit 0: 0: input process data valid 1: input process data invalid Bit 1: 0: output process data valid 1: output process data invalid Bits 2–7: reserved	0
3 (0x03)	Revision	V	Get	USINT	Version ID of the connected IO-Link device 0: no IO-Link device connected. All other values: version ID of the connected IO-Link device	0
4 (0x04)	Transmission rate	V	Get	USINT	Data transmission rate 0: no IO-Link device connected. 1: 4.8 kbit/s (COM1) 2: 38.4 kbit/s (COM2) 3: 230.4 kbit/s (COM3) 4–255: reserved	0
5 (0x05)	Master cycle time	V	Get	USINT	Communication cycle time in the “Operate” operating mode	0
6 (0x06)	Input data length	V	Get	USINT	Input data length of the connected IO-Link device in bytes: 0 ... 32	0

Attribute	Name	n/a	Access	Data Type	Description	Default
7 (0x07)	Output data length	V	Get	USINT	Output data length of the connected IO-Link device in bytes: 0 ... 32	0
8 (0x08)	Vendor ID	V	Get	UINT	Manufacturer ID of the attached IO-Link device	0
9 (0x09)	Device ID	V	Get	UDINT	Device ID of the attached IO-Link device	0

Services

Table 116: IO-Link Port Status Services – Object 129 (0x81)

Service Code	Service Name	Class Level	Instance Level	Description
14 (0x0E)	Get attribute single	Yes	Yes	Read one attribute
1 (0x01)	Get attributes all	-	Yes	Read all attributes

14.1.4 IO-Link Port Identification – Object 130 (0x82)

The IO-Link port identifier object contains information about IO-Link port types. Each IO-Link port is assigned to one object instance.

Instance 0 (Class Attribute)

Table 117: IO-Link Port Configuration Class Attributes – Object 128 (0x80)

Attribute	Name	n/a	Access	Data Type	Description	Default
1 (0x01)	Revision	n/a	Get	UINT	Version of this object	1
2 (0x02)	Max. instance	n/a	Get	UINT	Number of IO-Link ports	Number of IO-Link ports available

Instances 1, 2, ... (Instance Attribute)

The following table shows the assignment of CIP instances to IO-Link ports.

Table 118: Assignment of CIP Instances to IO-Link Ports

IO-Link Port	CIP Instance
1 (0x01)	1 (0x01)
2 (0x02)	2 (0x02)
3 (0x03)	3 (0x03)
...	...

The following table describes the attributes of instances 1, 2 etc.

Table 119: IO-Link Port Identification Instance Attributes – Object 130 (0x82)

Attribute	Name	n/a	Access	Data Type	Description	Default
1	Port type	V	Get	USINT	Port type 0: class A 1: class A with port supply voltage on/off support 2: class B 3–255: reserved	-

Services

Table 120: IO-Link Port Identification Services – Object 130 (0x82)

Service Code	Service Name	Class Level	Instance Level	Description
14 (0x0E)	Get attribute single	Yes	Yes	Read one attribute

14.1.5 IO-Link Device Parameters – Object 131 (0x83)

This object enables reading and writing of the parameters of an IO-Link device. The IO-Link service ISDU (Indexed Service Data Unit) is used for this purpose. This object maps CIP services to IO-Link services. An object instance addresses the IO-Link port to which the IO-Link device is connected.

Instance 0 (Class Attribute)

Table 121: IO-Link Port Configuration Class Attributes – Object 128 (0x80)

Attribute	Name	n/a	Access	Data Type	Description	Default
1 (0x01)	Revision	n/a	Get	UINT	Version of this object	1
2 (0x02)	Max. instance	n/a	Get	UINT	Number of IO-Link ports	Number of IO-Link ports available

Instances 1, 2, ... (Instance Attribute)

The following table shows the assignment of CIP instances to IO-Link ports.

Table 122: Assignment of CIP Instances to IO-Link Ports

IO-Link Port	CIP Instance
1 (0x01)	1 (0x01)
2 (0x02)	2 (0x02)
3 (0x03)	3 (0x03)
...	...

The instances have no attributes.

Services

Table 123: IO-Link Device Parameter Services – Object 131 (0x83)

Service Code	Service Name	Class Level	Instance Level	Description
14 (0x0E)	Get attribute single	Yes	-	Read one attribute
75 (0x4B)	Read ISDU (indexed service data unit)	-	Yes	Read data from IO-Link device
76 (0x4C)	Write ISDU (indexed service data unit)	-	Yes	Write data to IO-Link device

ISDU Read Service (Request)

This service reads the parameters of an IO-Link device that is connected to an IO-Link port. The CIP instance addresses the IO-Link port.

A CIP attribute does not need to be addressed. If the request contains a CIP attribute, it is not used.

The CIP data contains the value of the object index and object subindex. These values address the object in the IO-Link device.

Table 124: Request data of the ISDU read service

Field	Type	Value	Description
CIP service	-	75 (0x4B)	ISDU read service
CIP class	-	131 (0x83)	IO-Link device parameter object
CIP Instance	-	1 (0x01), 2 (0x02), ...	Addresses the IO-Link port to which the IO-Link device is connected
CIP data	UINT	Index	Object index of the IO-Link device
	USINT	Subindex	Object subindex of the IO-Link device

ISDU Read Service (Response)

The value of the CIP status in the response is 0 if the request was able to be executed successfully. The CIP data contains the data that was read from the object of the IO-Link device.

Table 125: Response Data of the ISDU Read Service (Positive)

Field	Type	Value	Description
CIP service	-	75 (0x4B)	ISDU read service
CIP class	-	131 (0x83)	IO-Link device parameter object
CIP Instance	-	1 (0x01), 2 (0x02), ...	Addresses the IO-Link port to which the IO-Link device is connected
CIP data	ARRAY of BYTE	ISDU data	IO-Link object data of the IO-Link device that has been read Length 0 ... 232 bytes.

The value of the CIP status in the response is not equal to 0 if the request was not able to be executed successfully. The CIP data contains error codes.

Table 126: Response Data of the ISDU Read Service (Negative)

Field	Type	Value	Description
CIP service	-	75 (0x4B)	ISDU read service
CIP class	-	131 (0x83)	IO-Link device parameter object
CIP Instance	-	1 (0x01), 2 (0x02), ...	Addresses the IO-Link port to which the IO-Link device is connected
CIP data	UINT	Error code	IO-Link master: error code You can find a cross-reference to the list of error codes at the end of this section.
	USINT	Error code	IO-Link device: error code You can find a cross-reference to the list of error codes at the end of this section.

Field	Type	Value	Description
	USINT	Error code	IO-Link device: additional error code You can find a cross-reference to the list of error codes at the end of this section.

ISDU Write Service (Request)

This service writes the parameters of an IO-Link device that is connected to an IO-Link port. The CIP instance addresses the IO-Link port.

A CIP attribute does not need to be addressed. If the request contains a CIP attribute, it is not used.

The CIP data contains the value of the object index and object subindex. These values address the object in the IO-Link device. The CIP data also contains the data to be written to the object of the IO-Link device.

Table 127: Request Data from the ISDU Write Service

Field	Type	Value	Description
CIP service	-	76 (0x4C)	ISDU write service
CIP class	-	131 (0x83)	IO-Link device parameter object
CIP Instance	-	1 (0x01), 2 (0x02), ...	Addresses the IO-Link port to which the IO-Link device is connected
CIP data	UINT	Index	IO-Link object index
	USINT	Subindex	IO-Link object subindex
	ARRAY of BYTE	ISDU data	Data to be written to the object of the IO-Link device. Length: 0 ... 232 bytes.

ISDU Write Service (Response)

The value of the CIP status in the response is 0 if the request was able to be executed successfully.

Table 128: Response Data from the ISDU Write Service (Positive)

Field	Type	Value	Description
CIP service	-	76 (0x4C)	ISDU write service
CIP class	-	131 (0x83)	IO-Link device parameter object
CIP Instance	-	1 (0x01), 2 (0x02), ...	Addresses the IO-Link port to which the IO-Link device is connected.

The value of the CIP status in the response is not equal to 0 if the request was not able to be executed successfully. The CIP data contains error codes.

Table 129: Response Data from the ISDU Write Service (Negative)

Field	Type	Value	Description
CIP service	-	76 (0x4C)	ISDU write service

Field	Type	Value	Description
CIP class	-	131 (0x83)	IO-Link device parameter object
CIP Instance	-	1 (0x01), 2 (0x02), ...	Addresses the IO-Link port to which the IO-Link device is connected.
CIP data	UINT	Error code	IO-Link master: error code You can find a cross-reference to the list of error codes at the end of this section.
	USINT	Error code	IO-Link device: error code You can find a cross-reference to the list of error codes at the end of this section.
	USINT	Error code	IO-Link device: additional error code You can find a cross-reference to the list of error codes at the end of this section.

Error Codes

- For CIP status error codes, see [🔗 Error Codes \(CIP Status\) \[► 141\]](#).
- For IO-Link master error codes, see “IO-Link Master Event Codes” in [🔗 Diagnostics via IO-Link \[► 144\]](#).
- For IO-Link device error codes, see “IO-Link Device Event Codes” in [🔗 Diagnostics via IO-Link \[► 144\]](#).

14.2 Installation Regulations Specified by Approvals

Because the following information refers to language-specific regulations, standards or certifications applicable to the specific installation and operation location, it is presented in the respective original language.

EU Declaration of Conformity

Hereby, WAGO GmbH & Co. KG declares that the radio equipment type 765-4501/100-000 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

[🌐 www.wago.com /765-4501/100-000](https://www.wago.com/765-4501/100-000).

FCC/ISED

Legal information:

Radiofrequency radiation exposure Information: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

NOTICE: This device complies with Part 15 of the FCC Rules and contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications made to this equipment not expressly approved by WAGO GmbH & Co. KG may void the FCC authorization to operate this equipment.

14.3 Operational Description


Product Description

The product 765-4501/100-000 is used to capture field signals on sensors, actuators and hubs which have been sent or received by a higher-level controller and output them via IO-Link.

Description of operation (FCC)

The product, a fieldbus module in the IP67 housing, serves the acquisition and output of data via sensors and actuators for the industrial control technology. The integrated Bluetooth® interface of the product allows the parameterization, operation, diagnosis, and monitoring using a mobile device and the WAGO App I/O Field.

The following figure shows the block diagram of the module.

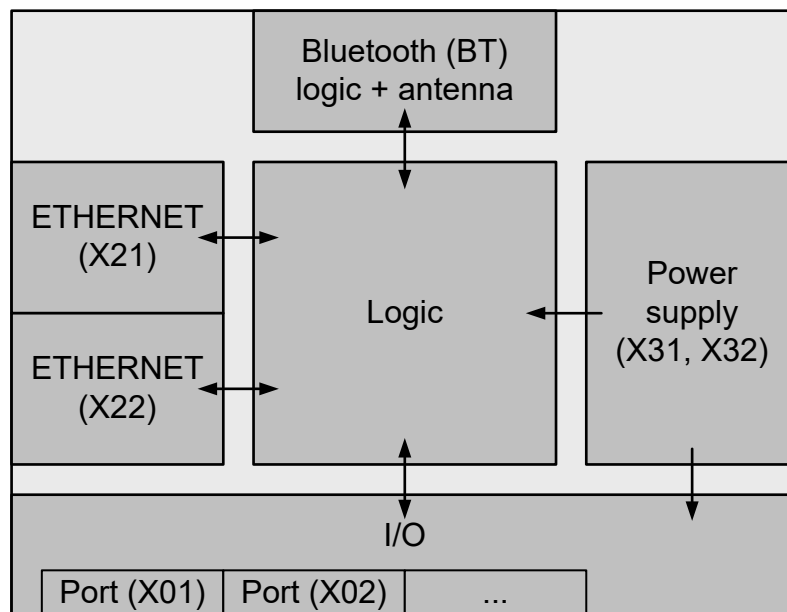

Bluetooth® Transmitter

Table 130: Bluetooth® Transmitter

Technology used	Bluetooth® Low Energy
Modulation	GFSK
Data rate	1 Mbit/s
Work frequency	2402 ... 2480 MHz
Maximum power including tune up tolerance	Output power: +8 dBm Tolerance: +2 dBm / -3 dBm
Antenna type	PCB monopole
Maximum antenna gain	1.25 dBi

We declare that we meet the EN 62479 standard with respect to the limiting value for low powers less than 20 mW. Therefore, the product fundamentally corresponds to the European limiting values for high-frequency radiation.

Product Designs

SlimLine (W × H × D)	35 × 30 × 210 mm
WideLine (W × H × D)	60 × 30 × 210 mm

Temperature Ranges

Table 131: Temperature Ranges

Ambient temperature (operation)	-25 °C ... +70 °C
Ambient temperature (storage)	-40 °C ... +80 °C
Maximum temperature change	3 K/min

Voltage Ranges

Table 132: Voltage Ranges

Power source	24 VDC PELV (Protective Extra Low Voltage) or SELV (Safety Extra Low Voltage)
--------------	---

Voltage 1L	24 VDC, -25 %/+30 % (18 VDC ... 31.2 VDC)
Voltage 2L	
Digital output	Output voltage: 24 VDC, 1L powered
Actuator/sensor power supply	Output voltage: 24 VDC, 1L powered and 2L powered
Overvoltage category	II (EN 60664-1)

14.4 Protected Rights

- Adobe® and Acrobat® are registered trademarks of Adobe Systems Inc.
- Android™ is a trademark of Google LLC.
- Apple, the Apple logo, iPhone, iPad and iPod touch are registered trademarks of Apple Inc. registered in the USA and other countries. “App Store” is a service mark of Apple Inc.
- AS-Interface® is a registered trademark of the AS-International Association e.V.
- BACnet® is a registered trademark of the American Society of Heating, Refrigerating and Air Conditioning Engineers, Inc. (ASHRAE).
- *Bluetooth*® is a registered trademark of Bluetooth SIG, Inc.
- CiA® and CANopen® are registered trademarks of CAN in AUTOMATION – International Users and Manufacturers Group e.V.
- CODESYS is a registered trademark of CODESYS Development GmbH.
- DALI is a registered trademark of the Digital Illumination Interface Alliance (DiiA).
- EtherCAT® is a registered trademark and patented technology licensed by Beckhoff Automation GmbH, Germany.
- ETHERNET/IP™ is a registered trademark of the Open DeviceNet Vendor Association, Inc (ODVA).
- EnOcean® is a registered trademark of EnOcean GmbH.
- Google Play™ is a registered trademark of Google Inc.
- IO-Link is a registered trademark of PROFIBUS Nutzerorganisation e.V.
- KNX® is a registered trademark of the KNX Association cvba.
- Linux® is a registered trademark of Linus Torvalds.
- LON® is a registered trademark of the Echelon Corporation.
- Modbus® is a registered trademark of Schneider Electric, licensed for Modbus Organization, Inc.
- OPC UA is a registered trademark of the OPC Foundation.
- PROFIBUS® is a registered trademark of the PROFIBUS Nutzerorganisation e.V. (PNO).
- PROFINET® is a registered trademark of the PROFIBUS Nutzerorganisation e.V. (PNO).
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Subversion® is a trademark of the Apache Software Foundation.
- Windows® is a registered trademark of Microsoft Corporation.

List of Tables

Table 1	Legend for “View” Figure	14
Table 2	Supply Voltage.....	16
Table 3	IO-Link (class A)	16
Table 4	ETHERNET Interfaces.....	16
Table 5	Product.....	17
Table 6	Mechanical Data	17
Table 7	Connection technology	18
Table 8	IO-Link Port (Class A).....	18
Table 9	Total Load	19
Table 10	Power Supply.....	19
Table 11	Electrical Safety	20
Table 12	Environmental Requirements.....	20
Table 13	Communication	21
Table 14	Communication – EtherNet/IP device	21
Table 15	OPC UA Server.....	22
Table 16	Communication – Bluetooth® transmitter	22
Table 17	Standards and Regulations.....	24
Table 18	Input Process Data – Connections 1 to 4	25
Table 19	Process Data of the Digital Inputs (Port-Based Assignment)	28
Table 20	Process Data of the Digital Inputs (Pin-Based Assignment).....	28
Table 21	Input Process Data – Connections 5 to 8	28
Table 22	Process Data of the Digital Inputs (Port-Based Assignment)	31
Table 23	Process Data of the Digital Inputs (Pin-Based Assignment).....	31
Table 24	Input Process Data – Connections 9 to 12	31
Table 25	Process Data of the Digital Inputs (Port-Based Assignment)	34
Table 26	Process Data of the Digital Inputs (Pin-Based Assignment).....	34
Table 27	Output Process Data (Connections 1 and 2)	34
Table 28	Process Data of the Digital Outputs (Port-Based Assignment).....	37
Table 29	Process Data of the Digital Outputs (Pin-Based Assignment)	38
Table 30	Output Process Data (Connections 5 and 6)	38
Table 31	Process Data of the Digital Outputs (Port-Based Assignment).....	41
Table 32	Process Data of the Digital Outputs (Pin-Based Assignment)	41
Table 33	Output Process Data – Connections 9 and 10.....	42
Table 34	Process Data of the Digital Outputs (Port-Based Assignment).....	45
Table 35	Process Data of the Digital Outputs (Pin-Based Assignment)	45
Table 36	Port Qualifier Information	46

Table 37	Overview of Parameterization Tools	48
Table 38	Parameterization Overview	49
Table 39	Function Overview for WAGO I/O Field Webserver and WAGO IO-Link Modules	51
Table 40	Upper Limits for Current on the Individual Pins of the Connections	57
Table 41	Module 765-4501/100-000 – Currents in Supply Cable 1	58
Table 42	Module 765-4501/100-000 – Currents in Supply Cable 2	58
Table 43	Rules for Supply Cables 1 and 2	58
Table 44	IO-Link Master Parameters	64
Table 45	Module Parameters	65
Table 46	Port Parameters	66
Table 47	“Port Cycle Time”	67
Table 48	Connecting an IO-Link Device or Digital Input or Output	79
Table 49	Connections	83
Table 50	Data on the “Dashboard” Page	85
Table 51	Tabs for Port Information and Settings (IO-Link Ports X01, X02 etc.)	87
Table 52	Additional Information on the Products Connected to the Selected Port	88
Table 53	Possible Values of “State” (Port Status Information)	90
Table 54	Meaning of the Individual Bits	90
Table 55	Cycle Time of the Master – Bits 6 ... 7	91
Table 56	Port Configuration Settings for IO-Link Devices	95
Table 57	“Port Mode” Drop-Down Menu: Selecting the Operating Mode for Pin 4 of the Selected IO-Link Port	96
Table 58	IQ Behavior Drop-Down Menu – Configuration of Pin 2 (I/Q) for IO-Link Class A Devices	97
Table 59	Possible Values of the Inspection Level Parameter	97
Table 60	Possible Values of the Backup Level Parameter	98
Table 61	Setting the Inspection Levels and Backup Levels for Device Check during Validation and Backup	98
Table 62	Configuration Control Drop-Down Menu	99
Table 63	Device Configuration Tab – Parameter Overview	99
Table 64	Maintenance Information	100
Table 65	Options for Resetting the Module to the Factory Settings	103
Table 66	Status of the Last Bluetooth® Firmware Update	105
Table 67	Input Options for Forcing for Each Pin of a Port	110
Table 68	Identify Devices	113
Table 69	Device-Specific Configuration Parameters	114
Table 70	Port-Specific Configuration Parameters	115
Table 71	Port-Specific IO-Link Process Data	115
Table 72	Port-Specific Process Data of the Digital Inputs and Outputs	116

Table 73	Device-Specific (Calculated) Measured Current Values	116
Table 74	Device-Specific (Calculated) Measured Temperature Values	116
Table 75	Device-Specific (Calculated) Measured Voltage Values	117
Table 76	Port-Specific Diagnostics	117
Table 77	Port Specific Statistical Information	118
Table 78	NTP Client Configuration	119
Table 79	Input Arguments of the InputSimulationPin Method.....	129
Table 80	Output Arguments of the InputSimulationPin Method	130
Table 81	Input Arguments of the OutputPin Method.....	131
Table 82	Output Arguments of the OutputPin Method.....	132
Table 83	Input Arguments of the IoLinkInputSimulation Method	133
Table 84	Output Arguments of the IoLinkInputSimulation Method	133
Table 85	Input Arguments of the IoLinkOutput Method	135
Table 86	Output Arguments of the IoLinkOutput Method	135
Table 87	Input Arguments of the DisableForcing Method.....	136
Table 88	Output Arguments of the DisableForcing Method.....	136
Table 89	Supply Voltage Status, 1L and 2L.....	138
Table 90	System Status	138
Table 91	Field LED	138
Table 92	APL LED	139
Table 93	Status of the EtherNet/IP module	139
Table 94	EtherNet/IP Module LED States	140
Table 95	Ethernet Status	140
Table 96	LED States – Ethernet	140
Table 97	LED States ®	141
Table 98	IO-Link Port Status (Class A).....	141
Table 99	Error Codes (CIP Status).....	141
Table 100	Event Qualifier	144
Table 101	IO-Link Master Event Codes.....	145
Table 102	IO-Link Device Event Codes (General).....	145
Table 103	WEEE Mark	148
Table 104	Event Log Object 65 (0x41) Class Attributes	149
Table 105	Mapping CIP Instances to IO-Link Ports.....	149
Table 106	Instance Attributes of Event Log Object 65 (0x41)	149
Table 107	Structure of a Log Entry	151
Table 108	Event log object 65 (0x41) services	151
Table 109	IO-Link Port Configuration Class Attributes – Object 128 (0x80).....	151
Table 110	Assignment of CIP Instances to IO-Link Ports.....	151

Table 111	IO-Link Port Configuration Instance Attributes – Object 128 (0x80)	152
Table 112	IO-Link Port Configuration Services – Object 128 (0x80)	153
Table 113	IO-Link Port Configuration Class Attributes – Object 128 (0x80).....	153
Table 114	Assignment of CIP Instances to IO-Link Ports.....	153
Table 115	IO-Link Port Status Instance Attributes – Object 129 (0x81)	154
Table 116	IO-Link Port Status Services – Object 129 (0x81)	155
Table 117	IO-Link Port Configuration Class Attributes – Object 128 (0x80).....	155
Table 118	Assignment of CIP Instances to IO-Link Ports.....	155
Table 119	IO-Link Port Identification Instance Attributes – Object 130 (0x82)	155
Table 120	IO-Link Port Identification Services – Object 130 (0x82)	156
Table 121	IO-Link Port Configuration Class Attributes – Object 128 (0x80).....	156
Table 122	Assignment of CIP Instances to IO-Link Ports.....	156
Table 123	IO-Link Device Parameter Services – Object 131 (0x83)	156
Table 124	Request data of the ISDU read service	157
Table 125	Response Data of the ISDU Read Service (Positive).....	157
Table 126	Response Data of the ISDU Read Service (Negative)	157
Table 127	Request Data from the ISDU Write Service.....	158
Table 128	Response Data from the ISDU Write Service (Positive).....	158
Table 129	Response Data from the ISDU Write Service (Negative)	158
Table 130	Bluetooth® Transmitter	161
Table 131	Temperature Ranges	161
Table 132	Voltage Ranges	161

List of Figures

Figure 1	View	14
Figure 2	Circuit Diagram for Each Port	17
Figure 3	Derating, 765-4501/100-000	23
Figure 4	Derating of a Contact (Pin) of L-Coded Connections X31 and X32 (For Core Cross-Section = 0.25 mm ² /AWG 14)	23
Figure 5	Derating of a Contact (Pin) of the A-Coded Connections Port X01, X02, ... (for Core Cross-Section = 0.34 mm ² /AWG 22)	23
Figure 6	Connection Example for 765-4501/100-000 Module with Individual Power Supply	61
Figure 7	Power Supply Group with 765-4501/100-000 – Connection Example 1	62
Figure 8	Power Supply Group with 765-4501/100-000 – Connection Example 2	63
Figure 9	Example of Feeding in and Passing on the Supply Voltages	74
Figure 10	RJ45 Pin Assignment	76
Figure 11	Network Topology (Module Appearance May Differ)	77
Figure 12	Schematic Circuit Diagram of the Power Supply	78
Figure 13	Dashboard Menu Item, Main Page (Example View)	85
Figure 14	Information Tab, Port X0i Menu Item (Example View)	87
Figure 15	Information Tab, Port X0i Menu Item (Example View)	88
Figure 16	Port X0i Menu Item, Status Tab (Example View)	89
Figure 17	Port X0i Menu Item, Process Data Tab (Example View)	92
Figure 18	Ports X0i – Read Access to IO-Link Device (Example View)	93
Figure 19	Ports X0i – Read Access to IO-Link at Index 43 and Subindex 0 Unsuccessful (Read Failed, Example View)	94
Figure 20	Port X0i Menu Item, Configuration Tab (Example View)	95
Figure 21	Settings Menu Item, Device Configuration Tab (Example View)	99
Figure 22	Settings Menu Item, Maintenance Information Tab (Example View)	100
Figure 23	Settings Menu Item, Firmware Upgrade Tab (Example View)	102
Figure 24	Settings Menu Item, Factory Reset Tab (Example View)	103
Figure 25	Settings Menu Item, Bluetooth® Tab (Example View)	104
Figure 26	Sign in Menu Item – Input Screen for Username and Password (Example View)	107
Figure 27	User Administration Menu Item (Initial State) (Example View)	108
Figure 28	User Administration Menu Item (Example View)	109
Figure 29	DIO Forcing Menu Item, “DIO Forcing” Screen (Example View)	110
Figure 30	IOL Forcing Menu Item, “IOL Forcing” Screen (Example View)	111
Figure 31	OPC UA: Device Information Model	113
Figure 32	Add Server Dialog – Discovery Tab (Default)	121
Figure 33	Add Server Dialog – Advanced Tab	122
Figure 34	NtpClientUpdateConfiguration Node	124

Figure 35	NtpClientUpdateConfiguration Node – Context Menu	124
Figure 36	NTP Client Configuration Dialog	125
Figure 37	NTP Client Configuration Dialog (Succeeded).....	126
Figure 38	GetForcingID Method.....	127
Figure 39	GetForcingID Method: Successful	127
Figure 40	GetForcingID Method: Unsuccessful	128
Figure 41	InputSimulationPin4 Method	129
Figure 42	OutputPin4 Method	131
Figure 43	IoLinkInputSimulation Method.....	133
Figure 44	IoLinkOutput Method.....	134
Figure 45	DisableForcing Method	136
Figure 46	Event qualifier	144

WAGO GmbH & Co. KG

Postfach 2880 · D - 32385 Minden
Hansastraße 27 · D - 32423 Minden

✉ info@wago.com

🌐 www.wago.com

Headquarters
Sales
Order Service
Fax

+49 571/887 – 0
+49 (0) 571/887 – 44 222
+49 (0) 571/887 – 44 333
+49 571/887 – 844169

WAGO is a registered trademark of WAGO Verwaltungsgesellschaft mbH.

Copyright – WAGO GmbH & Co. KG – All rights reserved. The content and structure of the WAGO websites, catalogs, videos and other WAGO media are subject to copyright. Distribution or modification of the contents of these pages and videos is prohibited. Furthermore, the content may neither be copied nor made available to third parties for commercial purposes. Also subject to copyright are the images and videos that were made available to WAGO GmbH & Co. KG by third parties.