TECHDOCS

WAGO Pro 2 Power Supply

1-Phase; 24 VDC; 40 A; 960 W; Redundancy

2787-3448/000-030



Product manual
3583350027 | 3 | en-US | 2025-04-30 12:34

© 2025 WAGO GmbH & Co. KG
All rights reserved.

WAGO GmbH & Co. KG
Hansastraße 27
D - 32423 Minden
Phone: +49 571/887 – 0
Fax: +49 571/887 – 844169
E-Mail: ✉ **info@wago.com**
Internet: **www.wago.com**

Technical Support
Phone: +49 571/887 – 44555
Fax: +49 571/887 – 844555
E-Mail: ✉ **support@wago.com**

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: ✉ **documentation@wago.com**

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally protected by trademark or patent.

WAGO is a registered trademark of WAGO Verwaltungsgesellschaft mbH.

Table of Contents

1 Provisions 6
1.1 Intended Use 6
1.2 Typographical Conventions 7

2 Safety 10
2.1 General Safety Regulations 10
2.2 Electrical Safety 10
2.3 Mechanical Safety 11
2.4 Thermal Safety 11
2.5 Indirect Safety 11

3 Properties 12
3.1 Overview 12
3.2 View 12
3.3 Product Identification 13
3.3.1 Type label 13
3.3.2 Product-specific information 14
3.4 Connections 14
3.4.1 Connectors 14
3.4.1.1 Input 14
3.4.1.2 Output 15
3.4.2 Signal 15
3.5 Indicators 16
3.6 Control Elements 16
3.6.1 Buttons 16
3.7 Communication interface 17
3.8 Technical Data 17
3.8.1 Product 17
3.8.2 Input 18
3.8.3 Output 19
3.8.4 Efficiency/Power Loss 20
3.8.5 Signal 21
3.8.6 Communication 22
3.8.7 MTBF/Lifespan 22
3.8.8 Environmental Conditions 22
3.8.9 Product Protection 22
3.8.10 Security 23
3.9 Guidelines, approvals and standards 23

4 Functions 24
4.1 Overvoltage protection 24

5 Planning 25
5.1 Structure Guidelines 25
5.1.1 Mounting Positions and Clearances 25
5.1.2 EMC Installation 25
5.1.3 Aids 25
5.1.4 Ground Conductor and Protective Ground 26
5.1.5 DIN-Rail Characteristics 26
5.1.6 Parallel Operation 26
5.1.7 Insulation Testing 26

5.2 Inrush Current ... 26
5.3 Derating ... 27
5.3.1 Derating (Temperature-Dependent) ... 27
5.3.2 Derating (Location-Dependent) ... 27
5.4 Short-Circuit and Overload Behavior ... 28
5.4.1 "Constant Current" Mode ... 28
5.4.2 "Constant Current with Latching Shutdown" Mode ... 29
5.4.3 "Hiccup" Mode ... 29
5.4.4 "Electronic Circuit Breaker" Mode ... 30
5.4.5 "Latching Shutdown on Thermal Overload" Mode ... 31
5.4.6 "PowerBoost" Mode ... 31
5.4.7 "TopBoost" Mode ... 31

6 Transport and Storage ... 33

7 Installation and Removal ... 34

8 Connection ... 36
8.1 Connection ... 36
8.2 Connecting Conductors to CAGE CLAMP® ... 36
8.3 Push-In Termination ... 37

9 Operation ... 38
9.1 Operation via Buttons ... 38

10 Diagnostics ... 39
10.1 Diagnostics via Indicators ... 39

11 Configuration ... 40
11.1 Requirements ... 40
11.1.1 System Requirements ... 40
11.1.2 Install WAGO Interface Configuration Software ... 40
11.1.3 Configure Product ... 40
11.2 First Steps ... 41
11.2.1 Starting the Software ... 41
11.3 Overview ... 44
11.3.1 Menu Bar ... 46
11.3.1.1 “Backstage” Tab ... 46
11.3.1.2 “Device” Tab ... 46
11.3.1.2.1 Dialog: Settings ... 46
11.3.1.2.2 Dialog: Simulation ... 56
11.3.2 Main Menu ... 59
11.3.3 Display Section ... 59
11.3.3.1 Display Section: Measurements ... 60
11.3.3.2 Display Section: Measurement Recording ... 62
11.3.3.3 Display Section: Last Error and Warning Messages ... 64
11.3.3.4 Display Section: Information ... 65

12 Notes on Operation ... 66
12.1 Disable/Enable Overvoltage Protection ... 66
12.1.1 Disable/Enable Input-Side Overvoltage Protection ... 66
12.1.2 Disable/Enable Output-Side Overvoltage Protection ... 66
12.2 Parallel Operation ... 66

13 Decommissioning ... 67
13.1 Shut Down ... 67
13.2 Disposal and Recycling ... 67

14 Appendix 68
14.1 Application Notes 68
14.1.1 AC Operation 68
14.2 Accessories 69
14.3 Protected Rights 70

1 Provisions

This document applies to the following product:

2787-3448/000-030 (WAGO Power Supply Pro 2)

Product detail page	www.wago.com/2787-3448/000-030

The applicable guidelines, approvals and standards for the product can be found on the product detail page at: www.wago.com/2787-3448/000-030.

The product must only be installed and operated in accordance with the operating instructions. Knowledge of the operating instructions is required for proper use. You can find all documents and information on the detailed product page.

1.1 Intended Use

The product supplies electrical or electronic devices with DC voltage, such as industrial controllers or display, communication and measurement devices.

- The product is designed for use in dry indoor rooms.
- Operation of the products in industrial area is permitted.
- The product meets the EMC requirements for the residential, office and commercial area as well as small business, if the product used complies with the required emissions of interference (emission limits).
- Operation of the product in other application areas is only permitted when corresponding approvals and labeling are present.

Improper Use

Improper use of the product is not permitted.

Improper use occurs in particular in the following cases:

- Non-observance of the intended use
- Use without protective measures in an environment in which moisture, salt water, salt spray mist, dust, corrosive fumes, gases, direct sunlight or ionizing radiation can occur
- Implementation of a Known Misuse
- Use of the product in areas with special risk that require continuous fault-free operation and in which failure of or operation of the product can result in an imminent risk to life, limb or health or cause serious damage to property or the environment (such as the operation of nuclear power plants, weapons systems, aircraft and motor vehicles)

Warranty and Liability

The provisions of the latest WAGO General Terms and Conditions of Deliveries and Services (GTC) apply as well as the Software License Terms for Standard Software (SW-License) applicable to software products und software embedded in WAGO hardware products, both available at: www.wago.com.

In particular, the warranty is void when:

- The product is improperly used.
- The defect is based on (customer-)specific specifications (hardware and software configurations).

- Modifications of the hardware or software by the user or third parties were made that are not described in this documentation and are at least responsible for the occurrence of the defect.

Individual agreements always take precedence.

Obligations of the installer/operator

Installers and operators bear responsibility for the safety of an installation or a system assembled with the product.

The installer/operator is responsible for the proper installation and the safety of the system. It must comply with the laws, standards, guidelines, local regulations, the state and the rules of technology applicable at the time of installation and must observe the guidelines and instructions described in the operating instructions. The installation requirements of the approvals must also be met.

In the event of non-compliance, operation of product within the scope of the approval is not permitted.

The product is an open type device and is designed for installation in an additional enclosure.

1.2 Typographical Conventions

Number Notation

100	Decimals: Normal notation
0x64	Hexadecimals: C-notation
‘100’	Binary: In single quotation marks
‘0110.0100’	Nibbles separated by a period

Text Markups

italic	Names of paths or files
bold	Menu items, entry or selection fields, emphasis
`Code`	Excerpts from program code
>	Selection of a menu point from a menu
“Value”	Value entries
[F5]	Identification of buttons or keys

Cross References / Links

	Cross references/links to a topic in a document
	Cross references / links to a separate document
	Cross references / links to a website
	Cross references / links to an email address

Sequence of Action

✓ This symbol identifies a precondition.

1. Action step

2. Action step

   ⇨ This symbol identifies an intermediate result.

➡ This symbol identifies the result of an action.

- Individual action step

Lists

- Lists, first level
  – Lists, second level

Figures

Figures in this documentation are for better understanding and may differ from the actual product design.

Warning Messages

⚠ DANGER

Type and source of hazard

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

- Action step to reduce risk

⚠ WARNING

Type and source of hazard

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

- Action step to reduce risk

⚠ CAUTION

Type and source of hazard

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

- Action step to reduce risk

⚠ NOTICE

Type and source of malfunction (property damage only)

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.

- Action step to reduce risk

Information Notices

Note

Information

Indicates information, clarifications, recommendations, referrals, etc.

2 Safety



This section presents hazards that could occur if the product is used. Builders and operators must take all hazards into account when analyzing the risk of their installed systems.
Measures to reduce the risk of hazards that are foreseeable from the manufacturer's point of view (i.e., without knowledge of the specific system built) are explained in the respective sections of this documentation (e.g., in "Planning").
Builders and operators must implement explained risk reduction measures and also take their own measures depending on the residual risk.

2.1 General Safety Regulations

- This documentation is part of the product. Therefore, retain the documentation during the entire service life of the product. Pass on the documentation to any subsequent user of the product. In addition, ensure that any supplement to this documentation is included, if necessary.
- The product must only be installed and put into operation by qualified electrical specialists per EN 50110-1/-2 and IEC 60364.
- Set up permissions management for authorized persons.
  - Physical access may only be made by authorized persons.
  - Digital access may only be made by authorized persons.
- Comply with the laws, standards, guidelines, local regulations and accepted technology standards and practices applicable at the time of installation.

2.2 Electrical Safety

- Hazardous electrical voltage can cause electric shock or burns! Always disconnect all power supplies from the product before mounting, installing, troubleshooting or performing maintenance.
- Make sure the product does not carry any voltage before starting work.

Power Supply

- Connecting impermissible current or frequency values may destroy the product.
- Provide suitable disconnect and overcurrent protection on the system side. The protection device must be located near the product where it can be operated. The **OFF** position must be clearly marked on the protection device.

Grounding/Protection/Fuses

- When handling the product, please ensure that environmental factors (personnel, work space and packaging) are properly equalized. Do not touch any conducting parts.
- Establish sufficient grounding. Make sure there is a flawless electrical connection between the DIN-rail and frame / additional enclosure.
- Protect the product with an appropriate overcurrent protection device.

Cables

- Always design the connection cables for the maximum anticipated current load.

- High currents and the inherent head generated by the product can cause additional heat generation at the clamping point. Plan for a correspondingly higher temperature range for the connecting cables, or reduce inherent heat by selecting larger conductor cross-sections.
- Only clamp one conductor to each connection terminal. If several conductors must be clamped, wire them using an upstream wiring assembly (e.g., WAGO Through Terminal Blocks).

2.3 Mechanical Safety

- Before startup, please check the product for any damage that may have occurred during shipping. Do not put the product into operation in the event of mechanical damage.
- Do not open the product housing.

- Use the cover cap to close the unused interface.
- The product is an open-type device and is designed for installation in an additional enclosure, which supplies the following safety aspects:
  - Restrict access to authorized personnel and may only be opened with tools.
  - Ensure the required pollution degree in the vicinity of the system.
  - Offer adequate protection against direct or indirect contact.
  - Offer adequate protection against UV irradiation.
  - Prevent fire from spreading outside of the enclosure.
  - Guarantee mechanical stability.

2.4 Thermal Safety

- The surface of the housing heats up during operation. Under special conditions (e.g., in the event of a fault or increased surrounding air temperature), touching the product may cause burns. Allow the product to cool down before touching it.
- The temperature inside the additional enclosure must not exceed the ambient temperature permitted for the mounted product.
- Cooling of the product must not be impaired. Ensure that the air circulation is unobstructed.

2.5 Indirect Safety

- Only use a dry or cloth or a clothed dampened with water to clean the product. Do not use cleaning agents, e.g., abrasive cleaners, alcohols or acetone.
- Clean tools and materials are imperative for handling the product.
- The product contains no parts that can be serviced by the user. Always have all service, maintenance and repair work performed by specialists authorized by WAGO.
- Replace any defective or damaged devices.
- Observe possible different technical specifications for mounting that does not correspond to the nominal mounting position.

3 Properties

3.1 Overview

The 2787 Series WAGO Power Supplies Pro 2 Redundancy are compact switched-mode Power supplies with a wide range of uses. The Power supplies can be fitted on a DIN-rail.

The Power supplies can be configured directly via buttons on the product or via the integrated communication interface. For this purpose, the connection is established either via the WAGO USB Communication Cable or via an attached communication module. It is also possible to record and evaluate various output parameters via the WAGO Interface Configuration software, which is available separately.

The pluggable connection technology uses WAGO pluggable connectors. These allow pre-wiring for quicker installation, as well as quicker and easier product replacement.

LEDs indicate various diagnostic messages (see **Indicators [▶ 16]**).

3.2 View



Figure 1: View

1	Ventilation openings	
2	Signal (X3)	**Signal [▶ 15]**
3	Output (X2)	**Connectors [▶ 14]**
4	Screw for overvoltage protection (output)	**Overvoltage protection [▶ 24]**

5	Optical status indication	Indicators [▶ 16]
6	Buttons	Control Elements [▶ 16]
7	Communication interface	Communication interface [▶ 17]
8	Type label	Type label [▶ 13]
9	Marker carrier	Accessories [▶ 69]
10	Screw for overvoltage protection (input)	Overvoltage protection [▶ 24]
11	Input (X1)	Connectors [▶ 14]
12	Latch for mounting to/removal from DIN rail	Installation and Removal [▶ 34]

3.3 Product Identification

3.3.1 Type label

The product's type plate contains the following information:

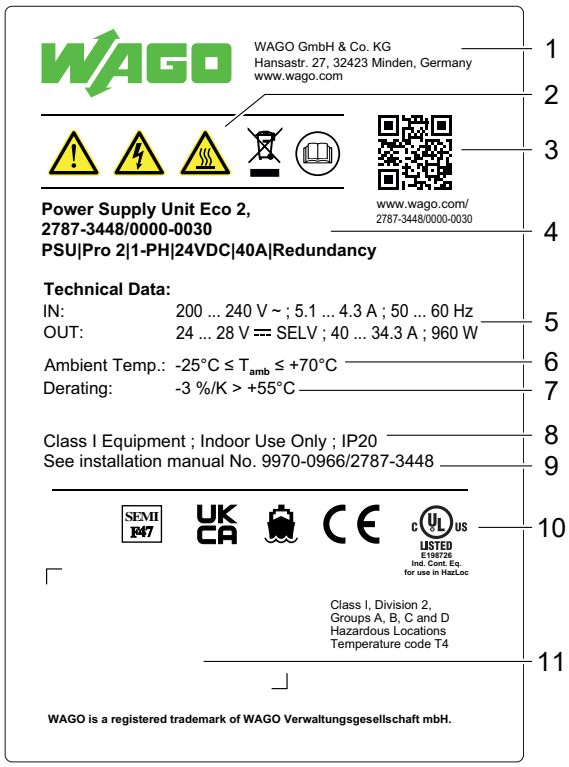


Figure 2: Type Plate

1	Company logo and address	
2	Warning notice symbols	Security [▶ 23]
3	QR link with link to website	
4	Product name and order number	
5	Input and output data	Technical Data [▶ 17]
6	Surrounding air temperature	Environmental Conditions [▶ 22]
7	Derating information	Derating [▶ 27]
8	Additional technical data	Technical Data [▶ 17]
9	Information on the instruction leaflet	
10	Field for guidelines, approvals and standards	Guidelines, approvals and standards [▶ 23]
11	Label with product-specific information	Product-specific information [▶ 14]

3.3.2 Product-specific information

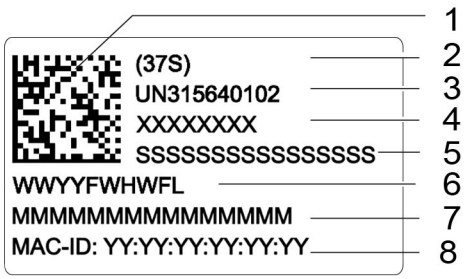


Figure 3: Product-specific information

1	2D data matrix code	Contains the information for positions 2 … 5
2	Key number	Fixed information (37S)
3	ID number per D-U-N-S®	Fixed information (WAGO Minden)
4	WAGO item number or internal SAP number	Product-specific
5	Consecutive number	Product-specific
6	Production date and revision	• Production date • Revision index (FC)
7	Internal manufacturer product number	Product-specific
8	Media Access Control Identifier	Product-specific

Table 1: Revision index structure

Software index	Hardware index	Boot loader index
FW	HW	FL

3.4 Connections

3.4.1 Connectors

Note the maximum permissible connection cross-sections of the power cables (see **Input [▶ 18]**).

Before installing the equipment, check the associated operating voltage (see **Technical Data [▶ 17]** or **Type label [▶ 13]**).

Additional information about the connection technology is provided in **Connection [▶ 36]**.

3.4.1.1 Input

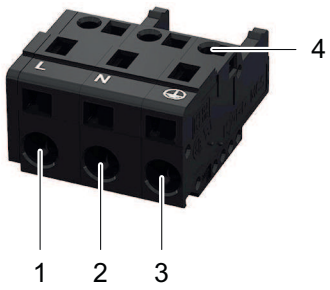


Figure 4: Input X1 Connection

1	Pin 1	Contact “L” for input voltage

2	Pin 2	Contact “N” for input voltage
3	Pin 3	Contact “PE” for input voltage
4	-	Test slot

Table 2: Details – Input Connection

Series	721 Series (see Accessories [▶ 69])
Connection Technology	CAGE CLAMP

3.4.1.2 Output

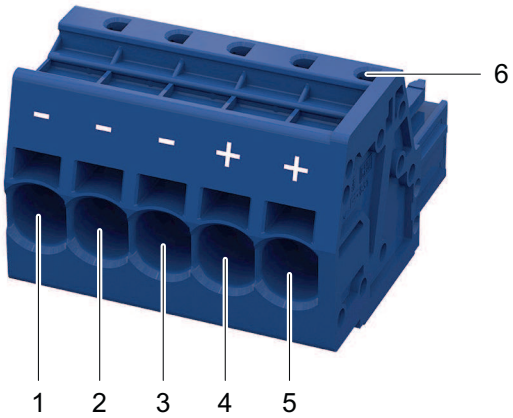


Figure 5: Output X2 Connection

1	Pin 1	Contact “–” for output voltage
2	Pin 2	Contact “–” for output voltage
3	Pin 3	Contact “–” for output voltage
4	Pin 4	Contact “+” for output voltage
5	Pin 5	Contact “+” for output voltage
6	-	Test slot

Table 3: Details – Output Connection

Series	831 Series (see Accessories [▶ 69])
Connection Technology	Push-in CAGE CLAMP

3.4.2 Signal

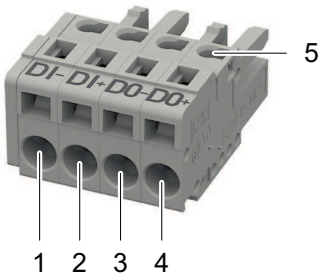


Figure 6: Signal X3 Connection

1	Pin 1	Contact "DI−" for input voltage
2	Pin 2	Contact "DI+" for input voltage
3	Pin 3	Contact "DO−" for output voltage
4	Pin 4	Contact "DO+" for output voltage

5	-	Test slot

Table 4: Details – Signal Connection

Series	721 Series (see Accessories [▶ 69])
Connection Technology	CAGE CLAMP

3.5 Indicators

The product has a visual status indicator. This indicator consists of five LEDs.

These LEDs indicate operating states and diagnostics (see Diagnostics via Indicators [▶ 39]).

Figure 7: Optical Status Indicator

Table 5: Indication of Operating States – General

Indicator		Product is in Standby Mode	Latching Shutdown of Output [1]	Boost Output (Signaled for 5 s)
> 100 %		Off	Flashing (0.5 Hz)	Flashing (2 Hz)
> 75 %		Off	Off	Steady
> 50 %		Off	Off	Steady
> 25 %		Off	Off	Steady
DC OK		Flashing (0.5 Hz)	Off	Steady

[1] In the event of overload or overtemperature, or if electronic circuit breaker trips

Table 6: Indication of Operating States – Output Power

Indicator		DC OK / Output Power < 25 %	Output Power ≥ 25 % … < 50 %	Output Power ≥ 50 % … < 75 %	Output Power ≥ 75 % … < 100 %	Output Power ≥ 100 %
> 100 %		Off	Off	Off	Off	Steady
> 75 %		Off	Off	Off	Steady	Steady
> 50 %		Off	Off	Steady	Steady	Steady
> 25 %		Off	Steady	Steady	Steady	Steady
DC OK		Steady	Steady	Steady	Steady	Steady

3.6 Control Elements

This section describes the control elements.

3.6.1 Buttons

Two buttons are located on the front of the product. These buttons are labeled **+** and **–**. Among other functions, these two buttons are used to set or adjust the output voltage.



Figure 8: Control Elements

See Operation via Buttons [▶ 38] for a detailed description of how you can use these buttons to make settings.

3.7 Communication interface

The communication interface is covered with a cap. Remove this cap to use the communication interface.

You can communicate with the product through the communication interface. The following options are available for this:

- Via the WAGO USB Communication Cable (see Accessories [▶ 69])
- Via an attachable communication modulel (see Accessories [▶ 69])

The WAGO USB Communication Cable is intended exclusively for parameterization and is not designed for continuous communication. Use a corresponding communication module for continuous communication!

To connect to a PC with the WAGO USB Communication Cable, perform the following steps:

1. Remove the cap.
2. Connect the USB connector of the WAGO USB Communication Cable to your PC.
3. Carefully insert the plug for the communication interface straight into the communication interface in such a way that the keying tab fits into the lower recess.
   ⇨ The plug is seated correctly once it has been inserted into the interface up to the stop. However, since the contours of the housing and plug differ, the plug does not sit completely flush with the surface of the housing.

You can now connect to your product with the WAGO Interface Configuration software and configure it (see Configure Product [▶ 40]).

3.8 Technical Data

3.8.1 Product

Table 7: Technical Data – Product

Property	Value
Width	120 mm
Height	130 mm
Depth	130 mm (from upper-edge of 35 rail)
Weight	1950 g
Degree of protection	IP20

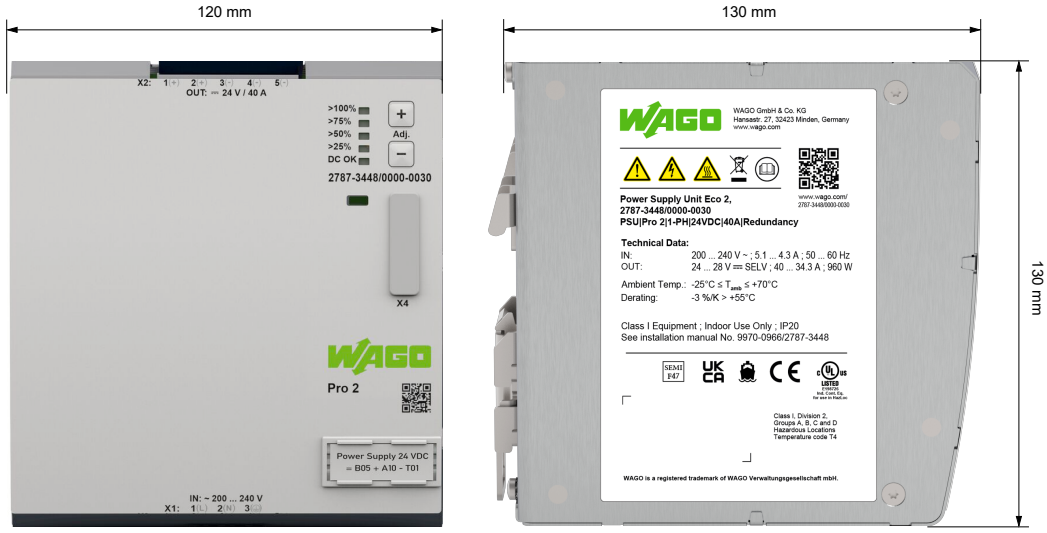


Figure 9: Dimensions

3.8.2 Input

Table 8: Technical Data – AC Input

Property		Value
Number of phases		1
Nominal input voltage		200 … 240 VAC
Input Voltage Range		180 … 264 VAC
		_ [1]
Input frequency		50 … 60 Hz
Grounding systems		TN, TT and IT networks
Input current (typ.) [2]	230 VAC; 40 A; 25 °C	5.1 A
	230 VAC; 30 A; 25 °C	4.5 A
Power factor (typ.) [2]	230 VAC; 40 A; 25 °C	0.98
	230 VAC; 30 A; 25 °C	0.98

[1] For DC operation, external overcurrent protection must be provided!
[2] At nominal load

Table 9: Technical Data – Mains Failure Buffering Time

Property		Value
Mains Failure Buffering Time, typ. [1]	230 VAC; 40 A; 25 °C	25 ms
	230 VAC; 30 A; 25 °C	25 ms
Holding Time, typ. [1]	230 VAC; 40 A; 25 °C	34 ms
	230 VAC; 30 A; 25 °C	34 ms

[1] At nominal load

Table 10: Technical Data – Input Connection

Property		Value
Cross-section	Solid	0.08 … 2.5 mm² / 28 … 12 AWG
	Fine-stranded	0.08 … 2.5 mm² / 28 … 12 AWG
	Insulated Ferrule	0.25 … 1.5 mm² / 20 … 16 AWG
	Uninsulated ferrule	0.25 … 2.5 mm² / 20 … 14 AWG
Strip length		8 … 9 mm / 0.31 … 0.35 inch
Use conductors rated to		≥ +75°C / +167°F (ambient air temperature: ≤ +60°C / 140°F) ≥ +90°C / 194°F (ambient air temperature: > +60°C / 140°F)
Required Tools (Conductor Connection)		Operating tool, with a partially insulated shaft, type 2 (see **Accessories [▶ 69]**)

3.8.3 Output

Table 11: Technical Data – Output

Property		Value
Nominal output voltage		24 VDC SELV [1]
Output voltage range		24 … 28 VDC SELV
Nominal output current		40 A (see **Derating [▶ 27]**)
Output current range		40 … 34.3 A
Output power [2]		960 W
PowerBoost		60 A (5 s)
TopBoost		200 A (15 ms)
Derating of output power		See **Derating [▶ 27]**
Line regulation [2]		< 0.1 %
Load regulation [3]		< 1.0 % (after deactivating the parallel switching mode “Active Droop,” see “Table 44: Dialog: Settings – DC Output”)
Residual ripple/noise [4]		< 70 mV
Overload behavior [5] [6]		“Constant Current” Mode[1] “Constant Current with Latching Shutdown” Mode “Hiccup” Mode “Electronic Circuit Breaker” Mode “Latching Shutdown on Thermal Overload” Mode "PowerBoost" Mode "TopBoost" Mode
Switch-on delay (U_{max}, typ.) [6] [7]	230 VAC; 30 A; 25 °C	1.5 s

[1] Factory setting
[2] Nominal load, in range 180 … 264 VAC
[3] 10 % / 90 % load step
[4] 20 MHz bandwidth
[5] See **Short-Circuit and Overload Behavior [▶ 28]**
[6] Can be set via the WAGO Interface Configuration software
[7] See figure “Switch-on Time”

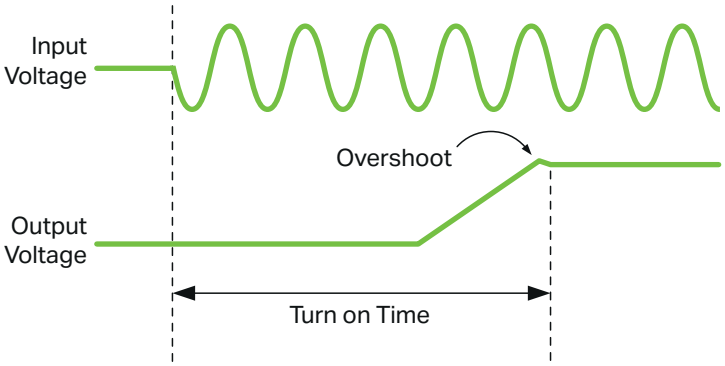


Figure 10: Turn-on time

Table 12: Technical Data – Output Connection

Property		Value
Cross-section	Solid	0.50 … 10 mm² / 20 … 8 AWG
	Fine-stranded	0.50 … 10 mm² / 20 … 8 AWG
	Ferrule with plastic collar	0.50 … 6.0 mm²
	Ferrule without plastic collar	0.50 … 6.0 mm²
Strip length		13 … 15 mm / 0.51 … 0.59 inch
Specifications of the conductors used		≥ +75°C / +167°F (ambient air temperature: ≤ +60°C / 140°F) ≥ +90°C / 194°F (ambient air temperature: > +60°C / 140°F)
Required tools (conductor termination)		Operating tool, with a partially insulated shaft, type 3 (see Accessories [▶ 69])

3.8.4 Efficiency/Power Loss

Table 13: Technical Data – Efficiency/Power Loss

Property		Value
Efficiency, typ. [1]	230 VAC; 40 A; 25 °C	96 %
	230 VAC; 30 A; 25 °C	96.3 %
Power loss, typ.	200 … 240 VAC	; ≤ 40 W

[1] At nominal load.

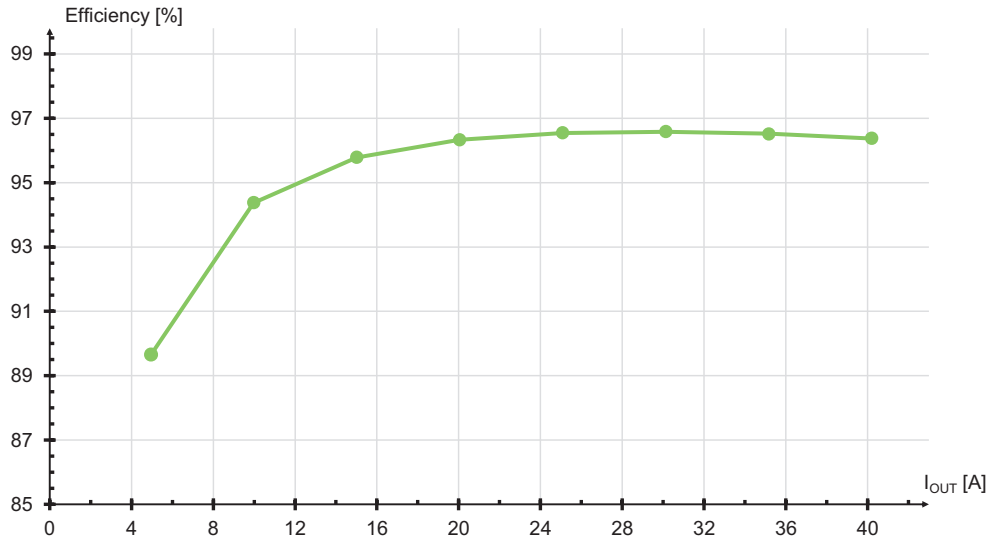


Figure 11: Efficiency (typ.) at 230 VAC

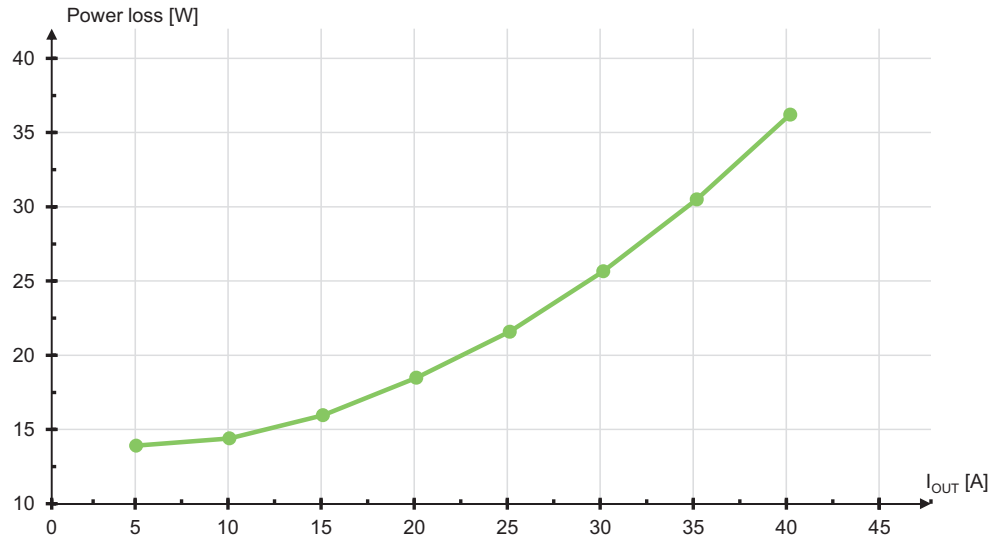


Figure 12: Power Loss (typ.) at 230 VAC

3.8.5 Signal

Table 14: Technical Data – Signal (Input DI)

Property	Value
Signal type	24 VDC
Voltage range for signal (0)	−3 … +5 VDC
Voltage range for signal (1)	15 … 30 VDC
Input Current for signall (1) [1)]	4.5 mA
Isolationsspannung	see Security [▶ 23]

[1)]at 24 VDC

Table 15: Technical Data – Signal (Output DO)

Property	Value
Switch-on threshold, typ.	UOUT > USET × 0.93
Switch-off threshold, typ.	UOUT < USET × 0.87
Contact load, max.	50 mA
Voltage drop, typ.	< 100 mV (at 50 mA)
Contact voltage, max.	31.2 VDC
Polarity	Freely selectable
Series operation	Yes; a series connection of up to 10 signal contacts is permitted.
Implementation type	PhotoMOS
Isolation voltage	see Security [▶ 23]

Table 16: Technical Data – Signal Connection

Property		Value
Cross-section	Eindrähtig	0.08 … 2.5 mm² / 28 … 12 AWG
	Feindrähtig	0.08 … 2.5 mm² / 28 … 12 AWG
	Aderendhülse mit Kunststoffkragen	0.25 … 1.5 mm² / 20 … 16 AWG
	Aderendhülse ohne Kunststoffkragen	0.25 … 2.5 mm² / 20 … 14 AWG
Strip length		8 … 9 mm / 0.31 … 0.35 inch

Property	Value
Specifications of the conductors used	≥ +75°C / +167°F (ambient air temperature: ≤ +60°C / 140°F) ≥ +90°C / 194°F (ambient air temperature: > +60°C / 140°F)
Required tools (conductor termination)	Operating tool, with a partially insulated shaft, type 2 (see Accessories [▶ 69])

3.8.6 Communication

Table 17: Technical Data – Communication

Property	Value
Data timeliness of the communication interface	200 ms

3.8.7 MTBF/Lifespan

Table 18: Technical Data – MTBF/Lifespan

Property	At	Load	T_{amb}	Value
MTBF, typ. (SN 29500) (IEC 61709)	24 VDC SELV	100 %	25 °C	905000 h
	24 VDC SELV	100 %	40 °C	539000 h

3.8.8 Environmental Conditions

Table 19: Technical Data – Environmental Conditions

Property	Value
Ambient temperature, operation	−25 … +70 °C
Ambient temperature, restricted operation[1)]	−40 … −25 °C
Ambient temperature, storage	−40 … +85 °C
Derating (temperature-dependent) [2)]	−3 %/K (> +55 °C)
Derating (location-dependent) [2)]	−8.9 %/1000 m (> +50 °C; 3600 m or higher) −8.6 %/1000 m (> +55 °C; 2100 m or higher)
Relative humidity	5 … 96 % (no condensation permissible)
Elevation above sea level, max.	5000 m
Overvoltage category	III (≤ 2000 m) II (> 2000 m)
Vibration according to IEC 60068-2-6	5 … 150 Hz / 1g
Shock according to IEC 60068-2-27	15 g / 11 ms
Pollution degree according to IEC/EN 60664-1	2

[1)] Without mechanical actuation of buttons, female connectors, etc.
[2)] See Derating [▶ 27]

3.8.9 Product Protection

Table 20: Technical Data – Product Protection

Property	Value
Internal input fuse[1]	T 10 A / 250 VAC
Transient suppression at input	Yes, varistor
Overload protection at output	Electronic
Overvoltage protection at output, max.[2]	32 VDC
Feedback voltage, max.[3]	Yes, max. < 35 V
Protection type	IP20
Ingress protection against foreign objects	> 4 mm

Property	Value
Overtemperature protection[4]	Yes
Circuit breaker of the nominal current circuit[5]	16 A (for USA/Canada: 15 A)

[1] Only serves as an AC fuse. An external DC fuse must be used if DC power is supplied.
[2] Internal limitation via a second control loop, deactivation of power supply, automatic restart
[3] Power feedback must not be permitted to exceed this voltage.
[4] Configurable; see "Latching Shutdown on Thermal Overload" Mode [▶ 31].
[5] The circuit breaker can be used for activation during installation. In this case, the circuit breaker must meet all the requirements on this shutdown device. If an additional switch is used, it must have the same electrical load capacity as the circuit breaker.

3.8.10 Security

Table 21: Technical Data – Safety

Property	Value
Input and output insulation, according to EN 61010-1; EN 61010-2-201	SELV/PELV
Protection class, with protective wire connection	I
Isolation voltage (input – output), ref. A [1)]	3,51 kVAC
Isolation voltage (input – ground), ref. B [1)]	2,2 kVAC
Isolation voltage (input – ground), ref. C [1)]	500 VAC
Isolation voltage (output – digital input / output – digital output), ref. D [1)]	500 VAC

[1)] Type test (rise 5 s – stay 2 s – fall 5 s); see figure “Dielectric Strength”

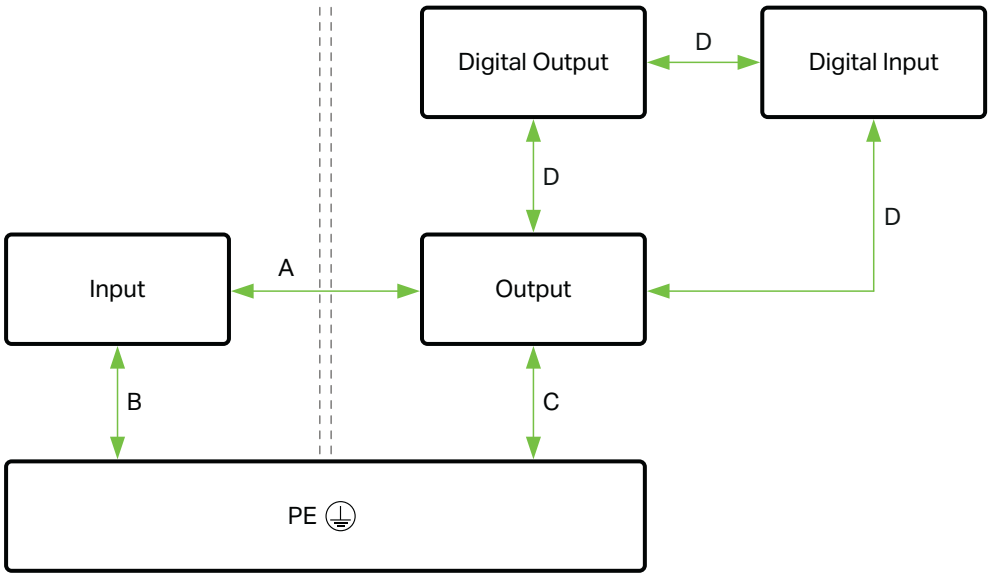


Figure 13: Dielectric Strength

3.9 Guidelines, approvals and standards

The applicable guidelines, approvals and standards for the product can be found on the product detail page at: www.wago.com/2787-3448/000-030.

4 Functions

The product has the following integrated functions:

Table 22: Functions

Function	Description
Redundancy	1 + 1 Redundancy without redundancy module; two power supplies with each are connected in parallel on the output side and supply a load of . n + 1 Redundancy increases utilization of the individual devices; three power supplies with each are connected in parallel at the output side and supply a load of 21 A. The integrated MOSFET functionality guarantees a simple design of a redundant power supply system.
TopBoost	Supplies up to 500 % more output current for 15 ms.
PowerBoost	Supplies up to 150 % of the output current for 5 s.
Recording and displaying measured values	Details see **Display Section: Measurements [▶ 60]**.
Recording and displaying time series of measured values	Details see **Display Section: Measurement Recording [▶ 62]**.
Configurable overload behavior	Details see **Dialog: Settings [▶ 46]**.
Configurable DI/DO interface	Details see **Dialog: Settings [▶ 46]**.
Configurable load management	Details see **Dialog: Settings [▶ 46]**.
Communication interdace	Allows connection via a WAGO USB Communication Cable (see **Communication interface [▶ 17]**) or via a communication module that is available as an option. The communication modules allow configuration and monitoring of the product via fieldbus systems.

4.1 Overvoltage protection

The product is protected against overvoltage. For insulation testing on your electrical equipment, this protection can be suspended. To enable or disable the overvoltage protection, see **Disable/Enable Overvoltage Protection [▶ 66]**.

The following test voltages apply:

Table 23: Test voltages at input

Overvoltage protection	Test voltage
Input	> 600 VDC
	> 420 VAC

Table 24: Output-Side Test Voltages

Overvoltage Protection	Test Voltage
Output	> 225 VDC
	> 175 VAC

For explicit information on maximum insulation voltages, see **Security [▶ 23]**.

5 Planning

5.1 Structure Guidelines

5.1.1 Mounting Positions and Clearances

Maintain at least the following clearances to adjacent components, cable ducts and the sides of enclosures and frames for the entire node structure.

Mounting Positions

- Nominal mounting position: front, legible marking, ventilation openings at the top and bottom.
- The product must not be operated directly in series!

Table 25: Clearances

Installation distances		Distance
Passive neighbor	top/bottom	50 mm
(neighboring product does not generate heat)	left/right	6 mm
Active neighbor	top/bottom	50 mm
(adjacent product generates additional heat; equivalent product under full load)	left/right	12 mm

DIN-35 rail

The DIN-rail is centered on the product (see Sprungziel: Technische Daten – Eingang).

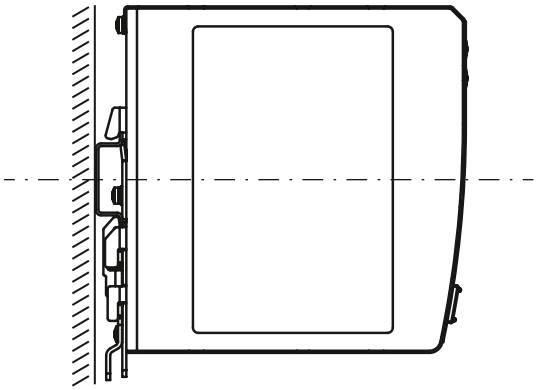


Figure 14: Position of the DIN-rail

The distances from the central axis of the DIN-rail upwards and downwards are 65 mm each.

5.1.2 EMC Installation

- **Compliance with EMC regulations**
  To meet the standards of the EMC Directive, the cable length of the DC output must not exceed 30 m.

5.1.3 Aids

You can obtain the WAGO Interface Configuration Software G2 FULL from **www.wago.com**.

5.1.4 Ground Conductor and Protective Ground

The product must be grounded. The following options are available for this:
- Grounding screw
- CAGE CLAMP® connection

Do not operate the product without an appropriate ground conductor installed.

5.1.5 DIN-Rail Characteristics

- The material must have high corrosion resistance.
- The DIN-rail geometry must not be altered.
- Prevent bending and twisting (torsion) e.g., by using sufficient attachment points.
- Use countersink-head screws, blind rivets, etc., to countersink the attachment points beneath the node structure.
- The component DIN-rail contact (CuSn6) must not form a galvanic element with the DIN-rail that is capable of generating a differential voltage of more than 0.5 V (saline solution of 0.3% at 20°C/68°F).

5.1.6 Parallel Operation

For parallel operation, set the output voltage of the products connected in parallel to the same value. The resistance of the conductors between the products and the load must be nearly identical. Only products of the same type may be connected in parallel.

Use external rail-mounted terminal strips for parallel connection. A parallel connection directly to the secondary-side connections of the product is not permitted.

The use of diodes in the positive path is recommended to decouple the outputs in parallel operation. These diodes must be rated for the maximum output current of the product.

For active load distribution, the “Active Droop” setting is enabled by default. This reduces the output voltage at a load (by 300 mV from 0 A to the nominal current). This smooth characteristic curve ensures better current distribution in parallel operation.

5.1.7 Insulation Testing

Before the electrical system is put into operation, insulation testing must be performed. You can find more detailed information in the following standards, for example:
- DIN VDE 0100-600 VDE 0100-600:2017-06 “Low-voltage electrical installations – Part 6: Verification”
- IEC 60364-6:2016 “Low voltage electrical installations – Part 6: Verification”

To protect the product against damage during this testing, it is necessary to disable the overvoltage protection. You can find additional information at **Disable/Enable Overvoltage Protection [▶ 66]**.

5.2 Inrush Current

High inrush currents can occur if multiple products are powered through the same circuit on the input side. In this case, it is advisable to switch the product on with a delay. The WAGO Interface Configuration software can be used to configure the corresponding switch-on delay in the **Dialog: Settings [▶ 46]** in the “System” section.

The maximum number of products that can be operated in parallel on one circuit is given by the sum of the leakage currents. According to EN 62368-1, this sum is not permitted to exceed the maximum value of 3.5 mA.

5.3 Derating

The maximum load is a function of the ambient temperature and the installation altitude.

Table 26: Nominal values per UL

Property	Nominal values per UL
Input	200 … 240 VAC; 5.1 … 4.3 A; 50 … 60 Hz
Output	24 … 28 VDC SELV; 40 A; 960 W
Ambient temperature	−25 … +70 °C

Different mounting positions may affect the permissible ambient temperature for operation. Please note this **Installation and Removal [▶ 34]**.

5.3.1 Derating (Temperature-Dependent)

Depending on the ambient temperature, it may be necessary to reduce the load.

Table 27: Derating (Temperature-Dependent)

Ambient Temperature	Derating
> +55 °C	−3 %/K (> +55 °C)

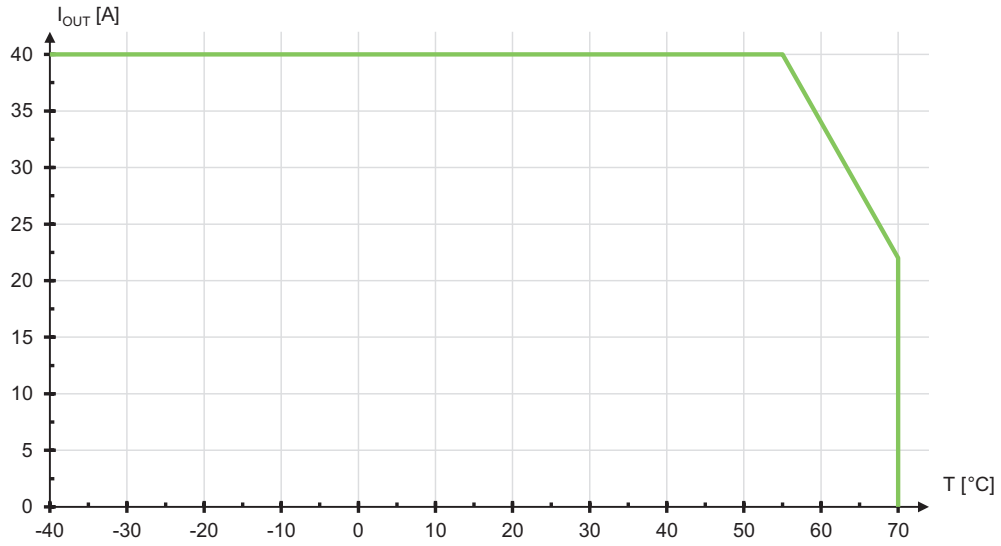


Figure 15: Derating (Temperature-Dependent)

5.3.2 Derating (Location-Dependent)

Table 28: Derating (Location-Dependent)

Ambient Temperature	Derating
> +50 °C	−8.9 %/1000 m (> +50 °C; 3600 m or higher)
> +55 °C	−8.6 %/1000 m (> +55 °C; 2100 m or higher)

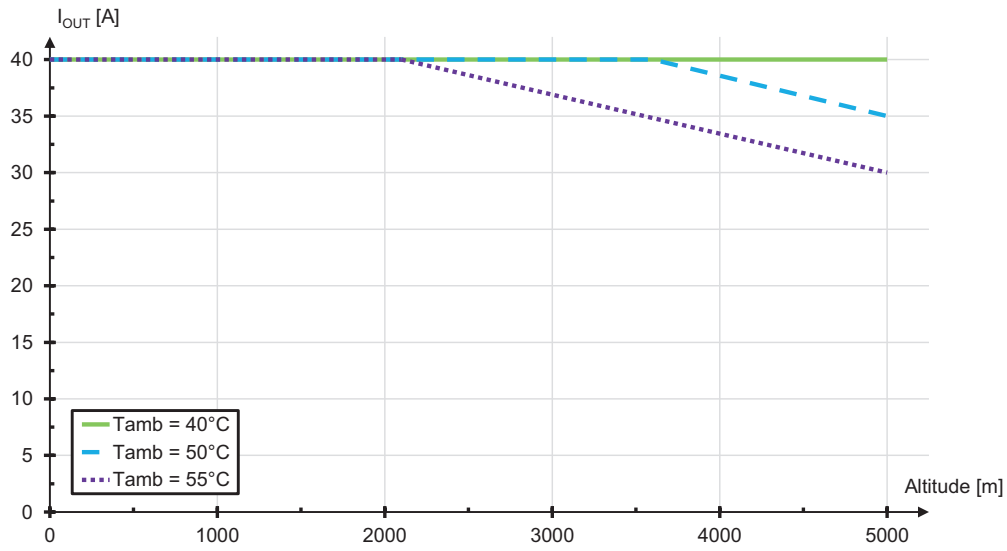


Figure 16: Derating (Location-Dependent)

5.4 Short-Circuit and Overload Behavior

The product's output is electronically protected against overload and short circuits.

The following values apply to the description below:

- U_{OUT}: output voltage
- I_{OUT}: output current
- I_N: nominal output current
- I_{ECB}: trip current of the electronic circuit breaker
- t_{ECB}: trip delay of the electronic circuit breaker

You can find more information on the individual values in **Technical Data [▶ 17]**.

5.4.1 "Constant Current" Mode

In this mode, the load current on the output is limited if the nominal output current is exceeded by a significant amount. The load current is limited to about 110 % of the nominal output current. This occurs for 20 seconds.

If the overload lasts longer, a 15-second pause occurs, during which the output voltage is switched off. The output voltage is then switched back on. If the overload is still present, the process starts again.

This mode is set by default.

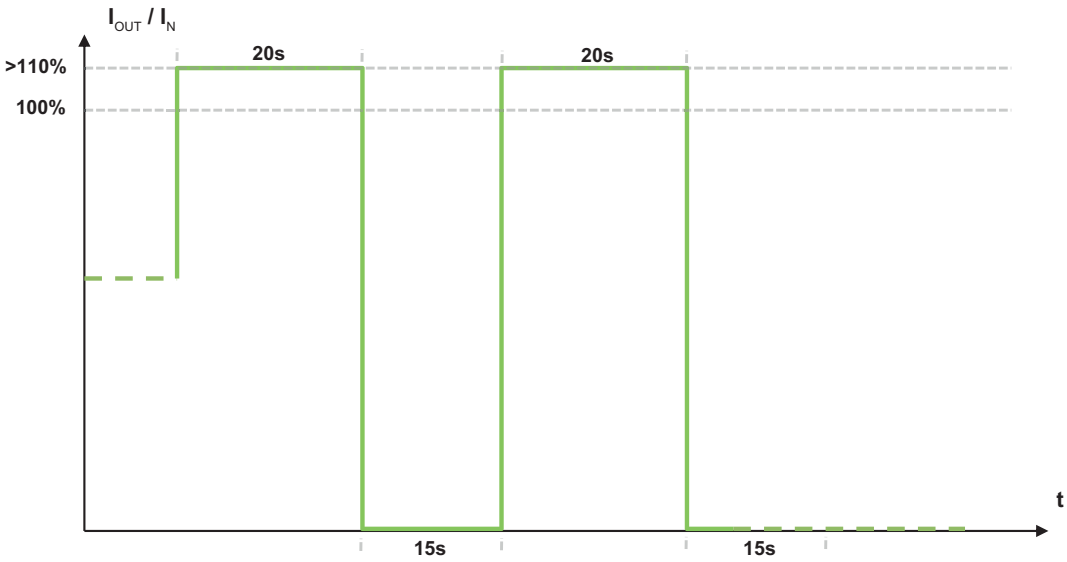


Figure 17: "Constant Current" Mode

5.4.2 "Constant Current with Latching Shutdown" Mode

In this mode, the load current on the output is limited if the nominal output current is exceeded by a significant amount. The load current is limited to about 110 % of the nominal output current. This occurs for 20 seconds.

If the overload lasts longer, the output is switched off. To switch the output back on, manual intervention is necessary. The following options are available for this:

- Communication interface
- Buttons
- Digital input

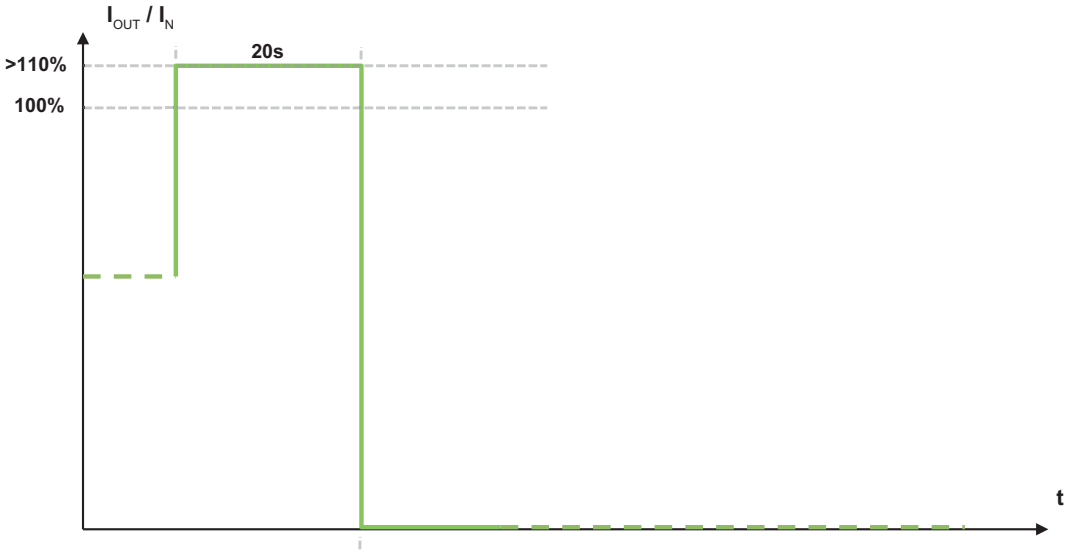


Figure 18: "Constant Current with Latching Shutdown" Mode

5.4.3 "Hiccup" Mode

In this mode, the output voltage is switched off if the nominal output current is exceeded by a significant amount. After a few milliseconds, the output voltage is switched back on to check whether the overload is still present. If the overload is still present, the output voltage is switched back off. This process repeats until the overload has been eliminated.

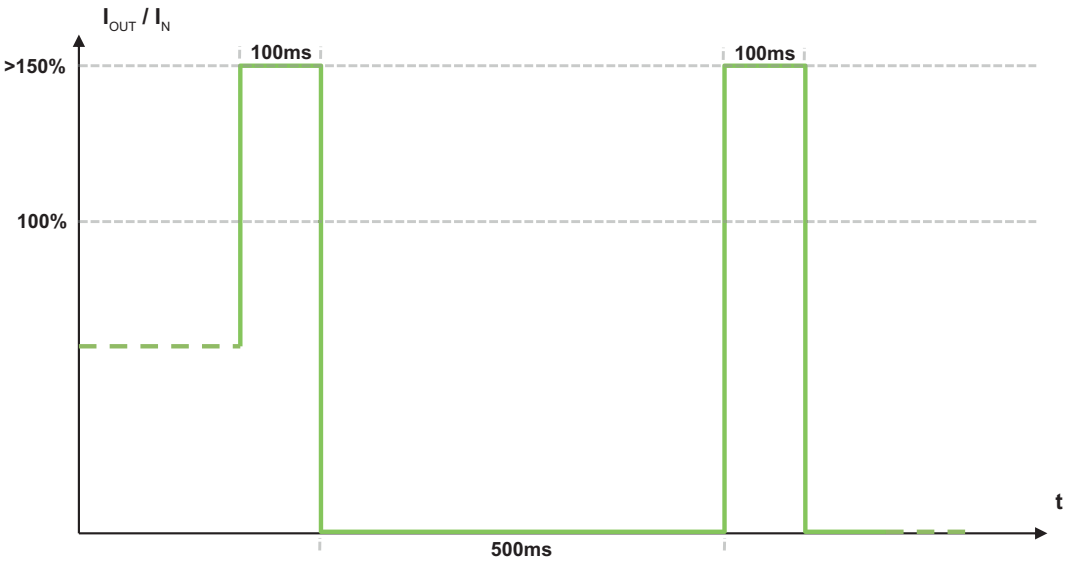


Figure 19: "Hiccup" Mode

5.4.4 "Electronic Circuit Breaker" Mode

In this mode, a specified current and a trip delay can be set via the WAGO Interface Configuration software (see **Install WAGO Interface Configuration Software [▶ 40]**) or a connected communication module (see **Accessories [▶ 69]**). If the output current exceeds the trip current setting, a specified amount of time elapses. If the output still exceeds the trip current setting after the trip delay, the output is switched off. To switch the output back on, manual intervention is necessary. The following options are available for this:

- Communication interface
- Buttons
- Digital input

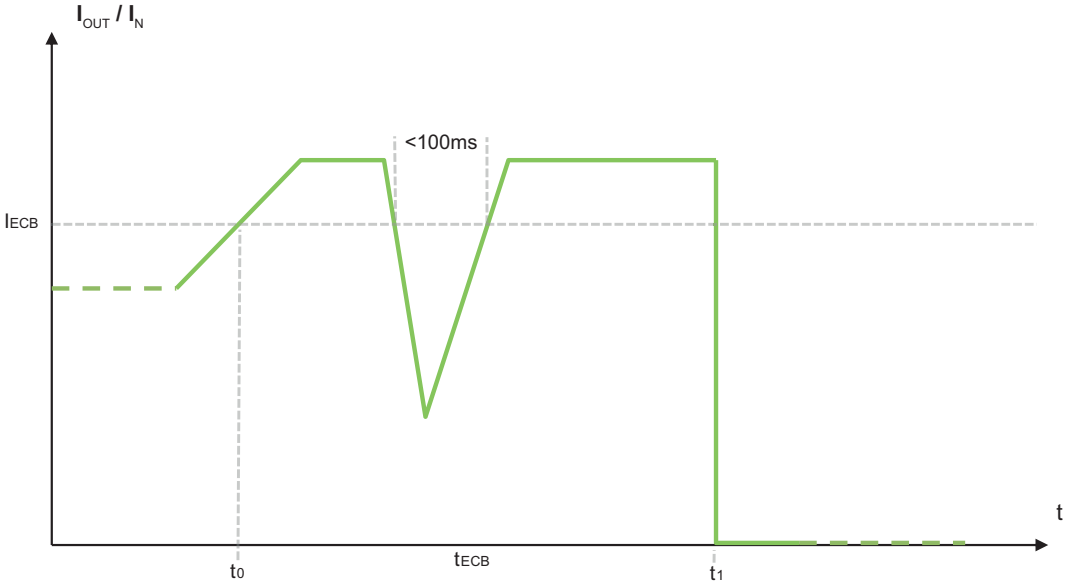


Figure 20: “Electronic Circuit Breaker” Mode

5.4.5 "Latching Shutdown on Thermal Overload" Mode

In this mode, the output voltage is switched off in the event of excessive internal device temperature. A corresponding “High Device Temperature” warning can, for example, be transmitted via the WAGO Interface Configuration software (see **Install WAGO Interface Configuration Software [▶ 40]**) or passed to a higher-level controller via a connected communication module (see **Accessories [▶ 69]**). To switch the output back on, manual intervention is necessary. The following options are available for this:

- Communication interface
- Buttons
- Digital input

5.4.6 "PowerBoost" Mode

This mode can be used in combination with the following modes:

- **"Constant Current" Mode [▶ 28]**
- **"Constant Current with Latching Shutdown" Mode [▶ 29]**
- **"Electronic Circuit Breaker" Mode [▶ 30]**

In this mode, output current equal to 150 % of the nominal output current is permitted for five seconds. The output then switches off. After that, the output switches on automatically.

In combination with the “Constant Current” mode, the “PowerBoost” mode is output again after each pause:

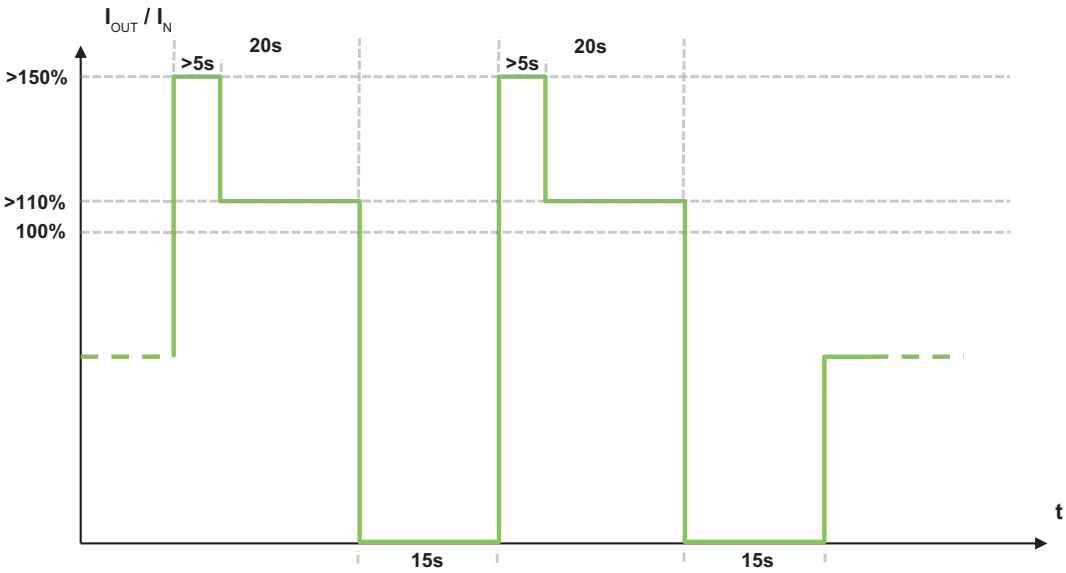


Figure 21: “PowerBoost” Mode in Combination with “Constant Current” Mode

5.4.7 "TopBoost" Mode

In this mode, a current pulse of up to 600 % is output for up to 15 ms if the current output current exceeds the nominal output current by a significant amount. This overcurrent can be caused by a short circuit or a large overload in the secondary circuit, for example.

In some cases, the current pulse can trip an overcurrent protection device that is present in the connected circuit, such as a circuit breaker. This quickly ends the short circuit or high overload.

In selecting an appropriate overcurrent protection device, it is essential to pay attention to the following technical data to ensure reliable tripping:

- Trip characteristics
- Nominal value
- Safety factor for DC tripping

In addition, calculate the error loop impedance. The maximum current that can flow through the error loop (due to the impedance) must not be lower than trip current of the overcurrent protection device necessary to reliably trip it.

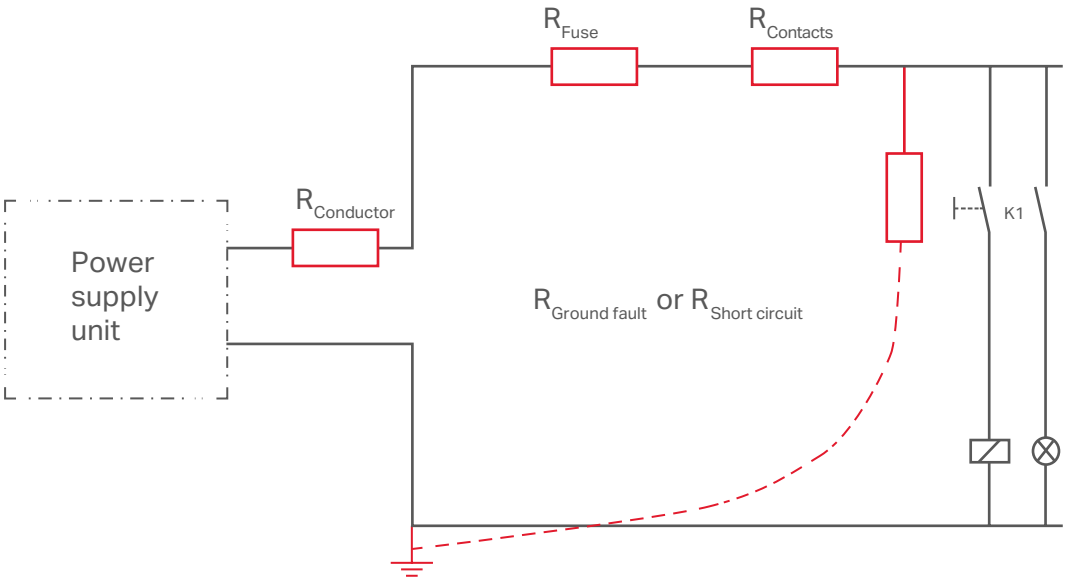


Figure 22: Loop Impedance

Note

Using the "PowerBoost" and "TopBoost" modes together

With firmware version 01.04.xx or higher, the "PowerBoost" and "TopBoost" modes can be used together. You can get a current firmware update from WAGO Technical Support.

6 Transport and Storage

The original packaging offers optimal protection during transport and storage.

- Store the product in suitable packaging, preferably the original packaging.
- Only transport the product in suitable containers/packaging.
- Make sure the product contacts are not contaminated or damaged during packing or unpacking.
- Observe the specified ambient climatic conditions for transport and storage.

7 Installation and Removal

NOTICE

Do not cover the ventilation openings!

Covered ventilation openings can lead to overheating of the product.

- Keep all ventilation openings clear!

NOTICE

Avoid electrostatic discharge!

The products are equipped with electronic components that you may destroy by electrostatic discharge when you touch.

1. Please observe the safety precautions against electrostatic discharge in accordance with EN 61340-5-1/-3.
2. Pay attention while handling the products to good grounding of the environment (persons, workplace and packaging).

The numbers given in the parentheses refer to the positions in the figure “View” under Sprungziel: Ansicht.

Mounting per DNV GL

The following instructions apply for installation per DNV GL:

- Mount the product on a DIN-rail (Item No. 210-197 or 210-118).
- Place end stops on the left and right of the product (Item No. 249-117).

Mounting on the DIN-Rail

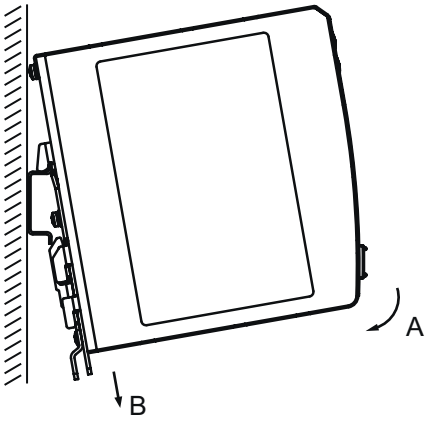


Figure 23: Mounting

Install the product as per EN 60715 by snapping it onto the DIN-35 rail (see figure “Mounting”):

1. Place the product, with the DIN-rail guide, on the top edge of the DIN-rail.
2. Press the product in the direction of the DIN-rail [A] and snap the product onto [B] while pulling on the latch (12).

3. To ensure secure fastening on the DIN-rail, fit end stops on either side of the product.

Removal from the DIN-Rail

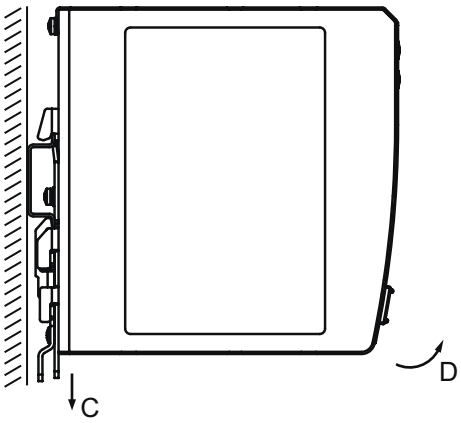


Figure 24: Removal

1. To remove (see figure “Removal”), pull down the latch (12) [C]. Use a screwdriver or an operating tool.
2. Pivot the product to remove it from the DIN-rail [D].

8 Connection

8.1 Connection

Observe the maximum permissible cross-sections of the supply cables (see Technical Data [▶ 17]).

Check the associated operating voltage before connecting the equipment (see Type label [▶ 13]).

Connect per UL Hazardous Location

⚠ WARNING

Explosion hazard!

Do not disconnect equipment unless power has been switched off or the area is free of ignitable concentrations.

⚠ WARNING

Explosion hazard!

Substitution of components may impair suitability for Class I, Division 2.

This product is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

⚠ DANGER

Do not work on products while energized!

Hazardous electrical voltage can cause electric shock or burns!

- Always disconnect all power supplies from the product before mounting, installing, troubleshooting or performing maintenance.

8.2 Connecting Conductors to CAGE CLAMP®

ⓘ Note

Only connect one conductor to each CAGE CLAMP® connection!

Each CAGE CLAMP® connection only permits connection of one conductor. Do not connect more than one conductor on a single connection.

If more than one conductor needs to be routed to one connection, connect them in an upcircuit wiring assembly – for example, using WAGO through terminal blocks.

To connect the conductor, an operating tool must be used to open the CAGE CLAMP®.

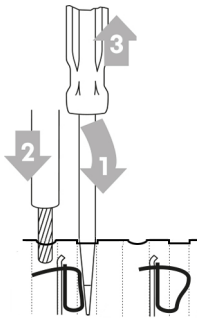


Figure 25: Connecting a Conductor to a CAGE CLAMP®

To connect a conductor, proceed as follows:

✓ You need an operating tool.

1. Insert the operating tool straight into the rectangular opening above the connection to open the CAGE CLAMP®.
2. Insert the conductor into the corresponding connection opening (round housing opening).
3. Remove the operating tool again to close CAGE CLAMP®.

➡ The conductor is now securely clamped.

Removing Conductor

✓ You need an operating tool.

1. Insert the operating tool into the rectangular opening above the connection to open the CAGE CLAMP®.
2. Remove the conductor.
3. Remove the operating tool again to close CAGE CLAMP®.

➡ The conductor is now detached.

8.3 Push-In Termination

The connection for the output (see **Output [▶ 19]**) can also be wired directly. You do not need any tools for this.

The following conductors can be inserted directly:

- Fine-stranded conductors with ferrules and plastic collars for all permissible cross-sections
- Fine-stranded conductors with ferrules without plastic collars with a cross-section > 0.5 mm²/AWG 20
- Solid conductors with a cross-section > 0.5 mm²/AWG 20

9 Operation

9.1 Operation via Buttons

Using the **+** und **−** buttons on the front of the product, you can make the following settings:

Table 29: Operation via Buttons

Button [+]	Button [−]	Function
Switch product on or off		
Hold down simultaneously for 3 seconds		The product is switched on or off.
Set output voltage		
Press once	-	The output voltage increases in steps.
Press and hold	-	The output voltage increases continuously.
-	Press once	The output voltage is reduced in steps.
-	Press and hold	The output voltage is reduced continuously.
Reset product to factory settings		
Hold down simultaneously for 10 seconds		The product is reset to the factory settings.

During ongoing operation, you can set the output voltage and reset the product to the factory settings. These settings can be saved and then remain available when the product is switched off and back on.

10 Diagnostics

10.1 Diagnostics via Indicators

The product has a visual status indicator. This indicator consists of five LEDs.

These LEDs indicate operating states and diagnostics (see Indicators [▶ 16]).

Table 30: Display of Diagnostics – Warnings

Indicator		Output Voltage Too Low	Output Voltage Too High	Overload Threshold or Tripping Current of Electronic Circuit Breaker Exceeded
> 100 %		Flashing (2 Hz)	Flashing (2 Hz)	Flashing (2 Hz)
> 75 %		Off	Flashing (2 Hz)	Signaling of regular utilization
> 50 %		Off	Off	
> 25 %		Off	Off	
DC OK		Flashing (2 Hz)	Off	

Table 31: Diagnostic Indicators – Errors

Indicator		Short Circuit at Output	Overtemperature Shutdown [1]	Internal Product Fault	Communication interface
> 100 %		Flashing (8 Hz)	Flashing (8 Hz)	Flashing (8 Hz)	Flashing (8 Hz)
> 75 %		Off	Steady	Flashing (8 Hz)	Off
> 50 %		Off	Off	Flashing (8 Hz)	Off
> 25 %		Off	Off	Flashing (8 Hz)	Off
DC OK		Off	Off	Flashing (8 Hz)	Steady

[1] Automatic restart (factory setting)

11 Configuration

11.1 Requirements

11.1.1 System Requirements

The following system requirements must be met for the WAGO Interface Configuration software to be installed:

Minimum System Requirements

Table 32: Minimum System Requirements

Components	Requirements
Operating system	• Windows 7 (32- and 64-bit) • Windows 8 (32- and 64-bit) • Windows 8.1 (32- and 64-bit) • Windows 10 (32- and 64-bit)
Memory	2 GB
Free hard disk space	150 MB
Processor	1 GHz or higher, 32-bit (x86) or 64-bit (x64)
Screen resolution	800 × 600 pixels

Recommended System Requirements

Table 33: Recommended System Requirements

Components	Requirements
Operating system	Windows 10 (64-bit)
Memory	8 GB
Free hard disk space	250 MB
Processor	1 GHz or higher, 64-bit (x64)
Screen resolution	1920 × 1080 pixels

11.1.2 Install WAGO Interface Configuration Software

1. Open the **WAGO website**.
2. Download the **WAGO Interface Configuration software G2**.
3. Start the installation process by double-clicking the installation file. This requires administrator rights.
4. Choose whether to create a desktop icon and whether you want to launch the software immediately.
5. Click **[Finish]** to complete installation.

11.1.3 Configure Product

Configuring the product requires the WAGO Interface Configuration software to be installed (see **Install WAGO Interface Configuration Software [▶ 40]**).

You can use the software to configure the product either online or offline (see also: **Dialog: Settings [▶ 46]**).

The following requirements must be met before you can work online with the WAGO Interface Configuration software:

- The product must be connected to the computer on which the WAGO Interface Configuration software is installed.
- The product must be supplied with power.

The following description relates to the example of connecting the product to a computer via a WAGO USB communication cable.

11.2 First Steps

The following steps are based on the WAGO G2 Interface Configuration software, Version 1.0.12.11. If you use other versions, individual settings and functions may differ slightly from those illustrated or may not be available.

11.2.1 Starting the Software

The following steps are based on the WAGO G2 Interface Configuration software, Version 1.0.12.11. If you use other versions, individual settings and functions may differ slightly from those illustrated or may not be available.

To start the software, click the corresponding icon on your desktop or open the software from the Windows Start menu.

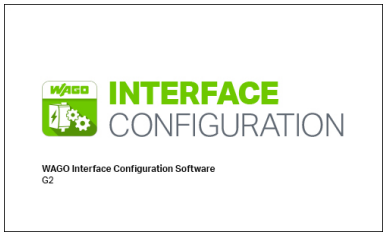


Figure 26: Software Start

After the software starts, a window opens showing the menu bar.

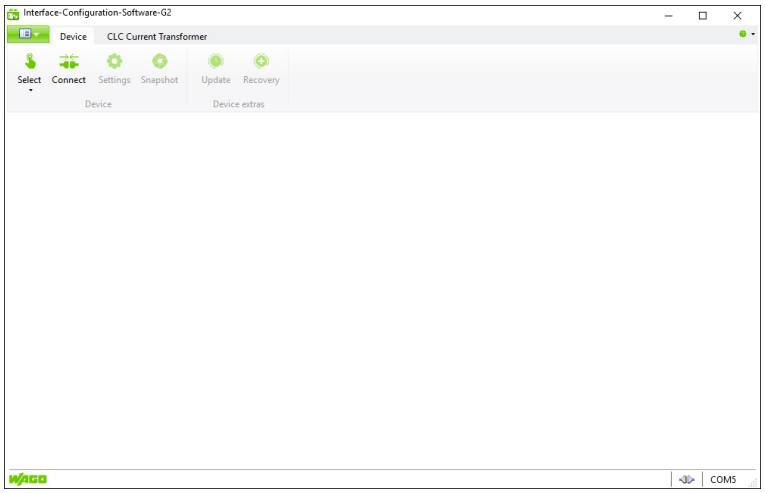


Figure 27: Start View

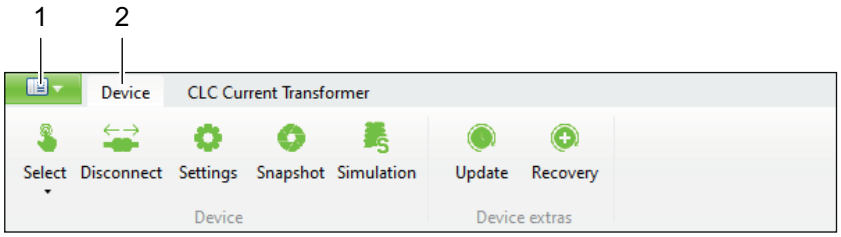


Figure 28: Start View – Tabs

Pos.	Tab
1	Backstage
2	Device

To set up the product in the software for the first time, carry out the following steps on both tabs:

“Backstage” Tab


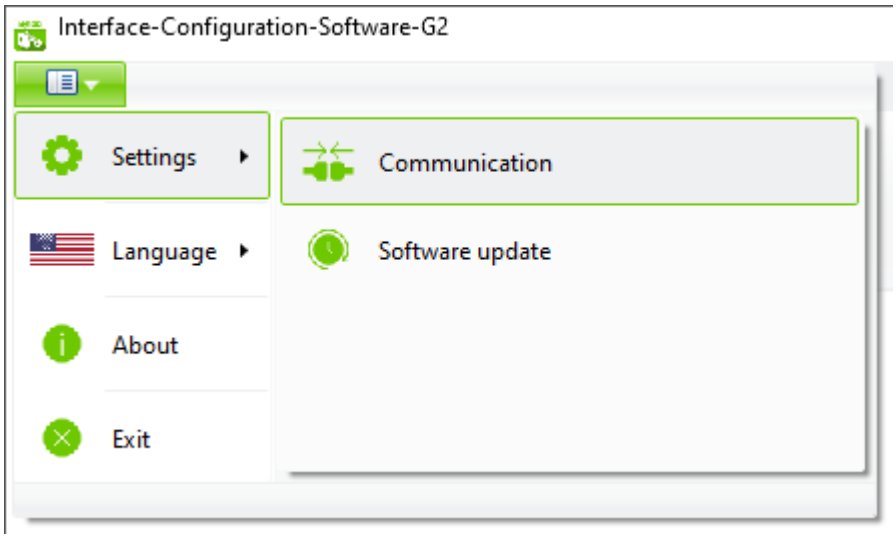


Table 34: “Backstage” Tab

Menu Item	Description
Settings	**Communication:** selects the connection between the product and the software. **Software update:** specifies whether automatic updates are permitted.
Language	Selects the display language for the software.
About	Displays information about the software (e.g., version).
Exit	Closes the software and the dialog.

On this tab, you can make the following settings:

1. Select the **Communication** menu item.
2. In the “Communication Settings” dialog, under **COM Port**, select the corresponding entry for your connection between the computer and the product (example: **WAGO USB service cable**).

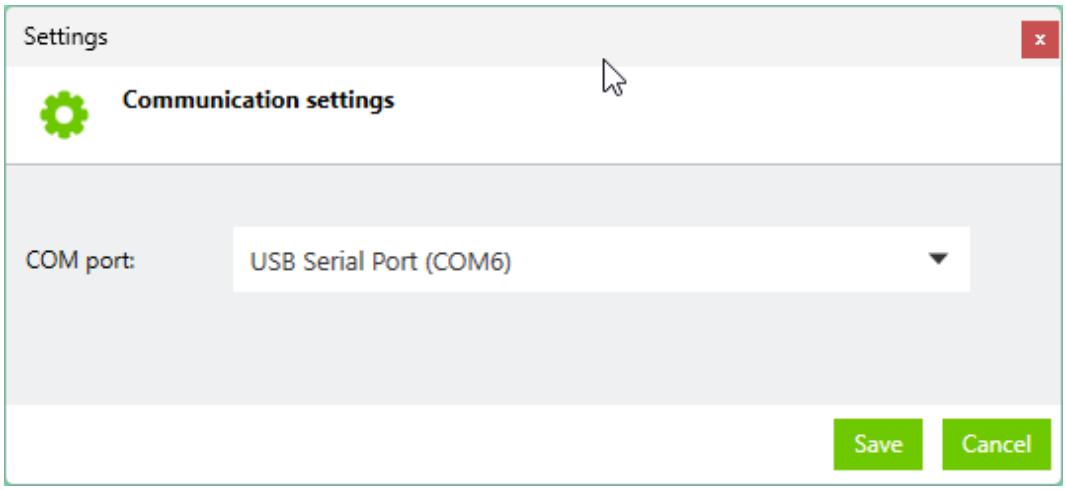

3. Click **[Save]**.

“Device” Tab

Two menu items are available on this tab:

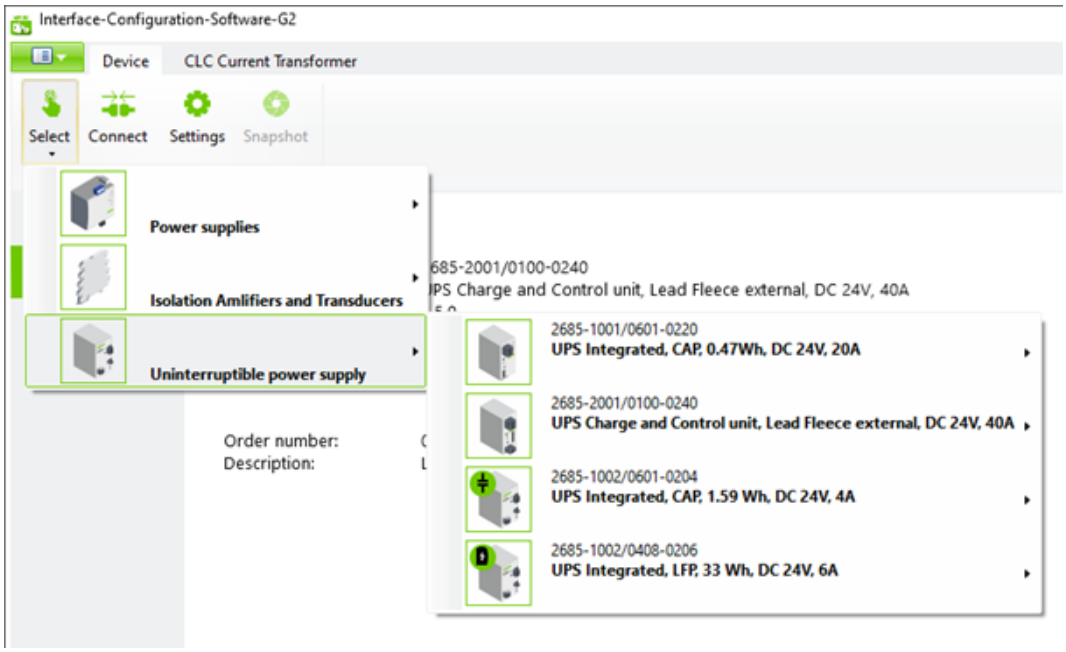


Table 35: “Device” Tab

Menu Item	Description
Selection	Selects the product to connect to the software.
Connect	Connects the selected product to the software.

The other menu items are not available until you have established the connection between your product and the software (see Main Menu [▶ 59]). The **Settings** menu item is an exception; this menu item is available as soon as a product has been manually selected or automatically detected by the software (see the following steps).

The settings you have to make on this tab depend on whether you are configuring your product offline or online:

Offline Configuration

For offline configuration, make the following settings:

1. Select the **Select** menu item.
2. Select the product you are using.
   ⇨ Your product has been set up in the software.

You can now use the software to configure your product offline (see **Dialog: Settings [▶ 46]**).

Online Configuration

If your product is already connected to the computer online, you can immediately select the **Connect** menu item. The software automatically detects which product is connected.

Your product is connected to the software. You can now use the software to address, configure and evaluate your product.

11.3 Overview

The Display section differs according to the menu item selected in the main menu.

Once the connection has been successfully established between the product and the software, additional sections appear in the software window.

The following figure provides an overview of all the sections:

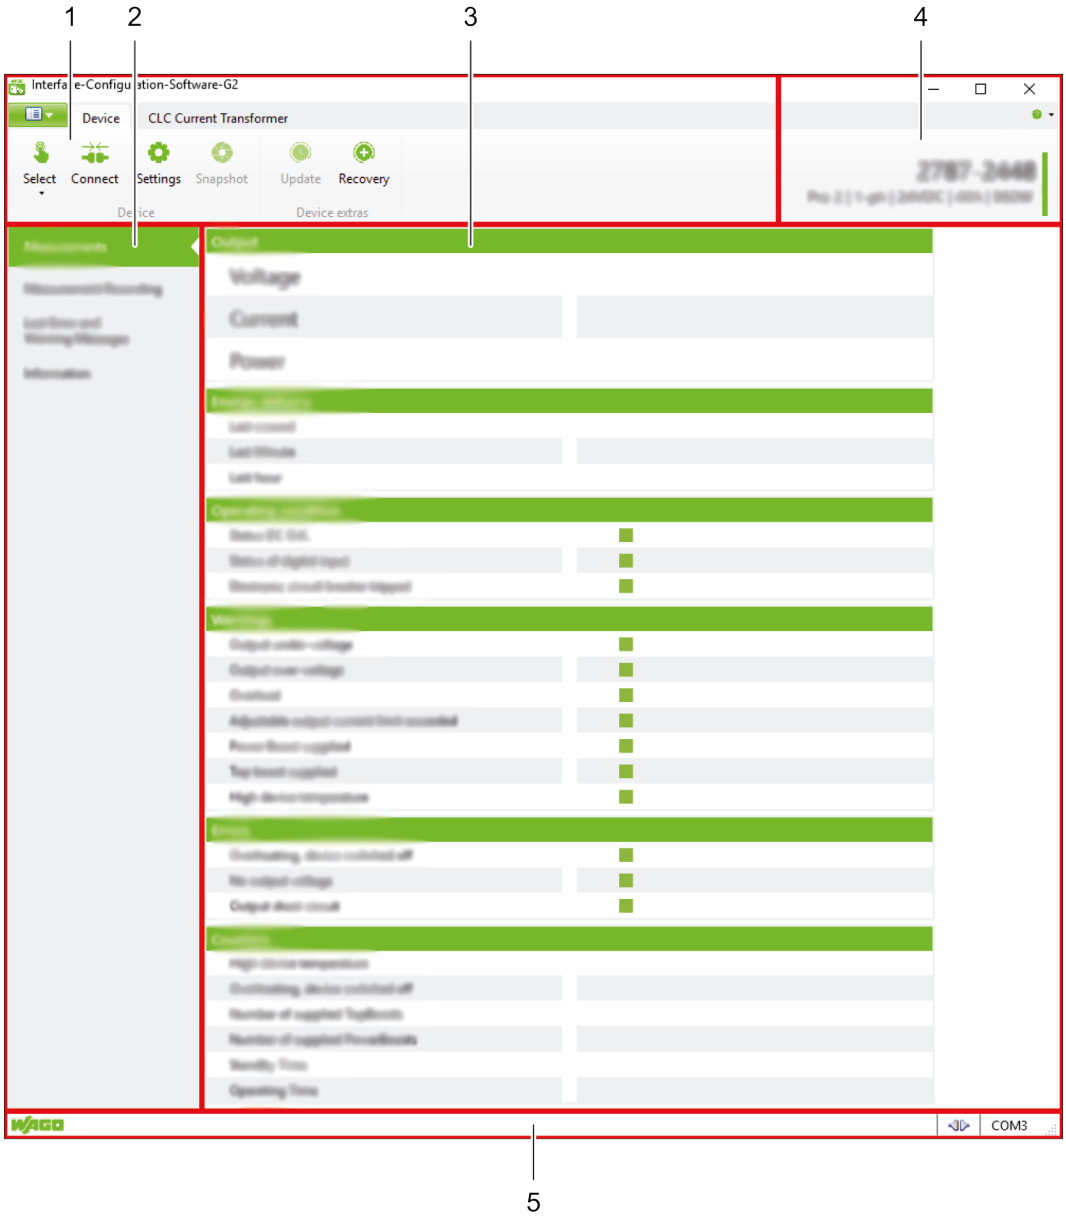


Table 36: Legend for the “Graphical User Interface” Overview

Pos.	Section	Description
1	Menu bar	The menu bar contains general software settings options.
2	Main menu	The main menu offers individual tabs that contain different display sections.
3	Display section	The Display section shows parameter settings and recorded time series in graphical form.
4	Product information	This section contains information on the connected product.
5	Footer	The footer indicates the status and interface of the active connection.

See also

- Menu Bar [▶ 46]
- Display Section [▶ 59]
- Main Menu [▶ 59]

11.3.1 Menu Bar

The menu bar is divided into the “Backstage” and “Device” tabs (see also: **Starting the Software [▶ 41]**).

11.3.1.1 “Backstage” Tab

For information on the settings options on the “Backstage” tab, see **Starting the Software [▶ 41]**.

11.3.1.2 “Device” Tab

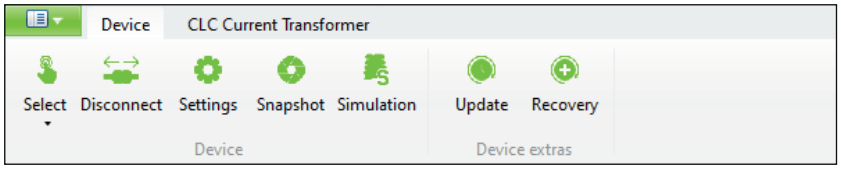


Table 37: “Device” Tab

Menu Item	Description
Selection	Opens the product selection for selecting a new product (see **Starting the Software [▶ 41]**).
Connect **Disconnect**	Connects/disconnects the connected product to/from the software.
Settings	Opens the “Settings” dialog. You can find more information at: **Dialog: Settings [▶ 46]**.
Snapshot	Creates a snapshot of all parameters and measured values; this can be stored as a CSV file.
Simulation	Opens the “Simulation” dialog. You can find more information at: **Dialog: Simulation [▶ 56]**.
Update	Performs a firmware update on the product. You can get the current firmware update and corresponding compatibility information from WAGO Technical Support.
Restore	Restores any firmware version. This may be necessary if a current firmware update has failed and a connection to the connected product cannot be established.

See also

- Starting the Software [▶ 44]
- Dialog: Settings [▶ 46]
- Dialog: Simulation [▶ 59]

11.3.1.2.1 Dialog: Settings

In this dialog, you can modify settings for the product. Two options are available:

- Online: With this option, the **[Save to Device]** button writes the settings directly to the product.
- Offline: With this option, the settings must be saved externally using the **[Export]** button. If a product is connected to the software later on, you can import these settings into the software with the **[Import]** button and then write them directly to the product with the **[Save to Device]** button.

The settings can be made in the following sections:

- **DC Output** (see Dialog: Settings [▶ 46])
- **Signaling** (see Dialog: Settings [▶ 46])
- **System** (see Dialog: Settings [▶ 46])
- **Password** (see Dialog: Settings [▶ 46])
- **Modbus** (see Dialog: Settings [▶ 46])

The buttons apply generally and are identical in all sections.

Buttons



Changes that have been made but not yet saved are marked with the pencil symbol.

Table 38: Dialog: Settings – Buttons

Button	Description
[Import]	Imports previously saved settings, e.g., when a product is replaced or configuration is performed offline.
[Export]	Saves the new settings externally. The saved settings can be imported into a product that is configured offline, a replacement product or a product used in a similar way, for example.
[Factory Settings]	Resets all settings to the factory defaults.
[Read from Device]	Reads all saved settings from the connected product.
[Save to Device]	Writes all the settings that have been made to the connected product.
[Close]	Closes the dialog. Any settings that have not been saved are lost.

The individual sections of the dialog are described below.

DC Output

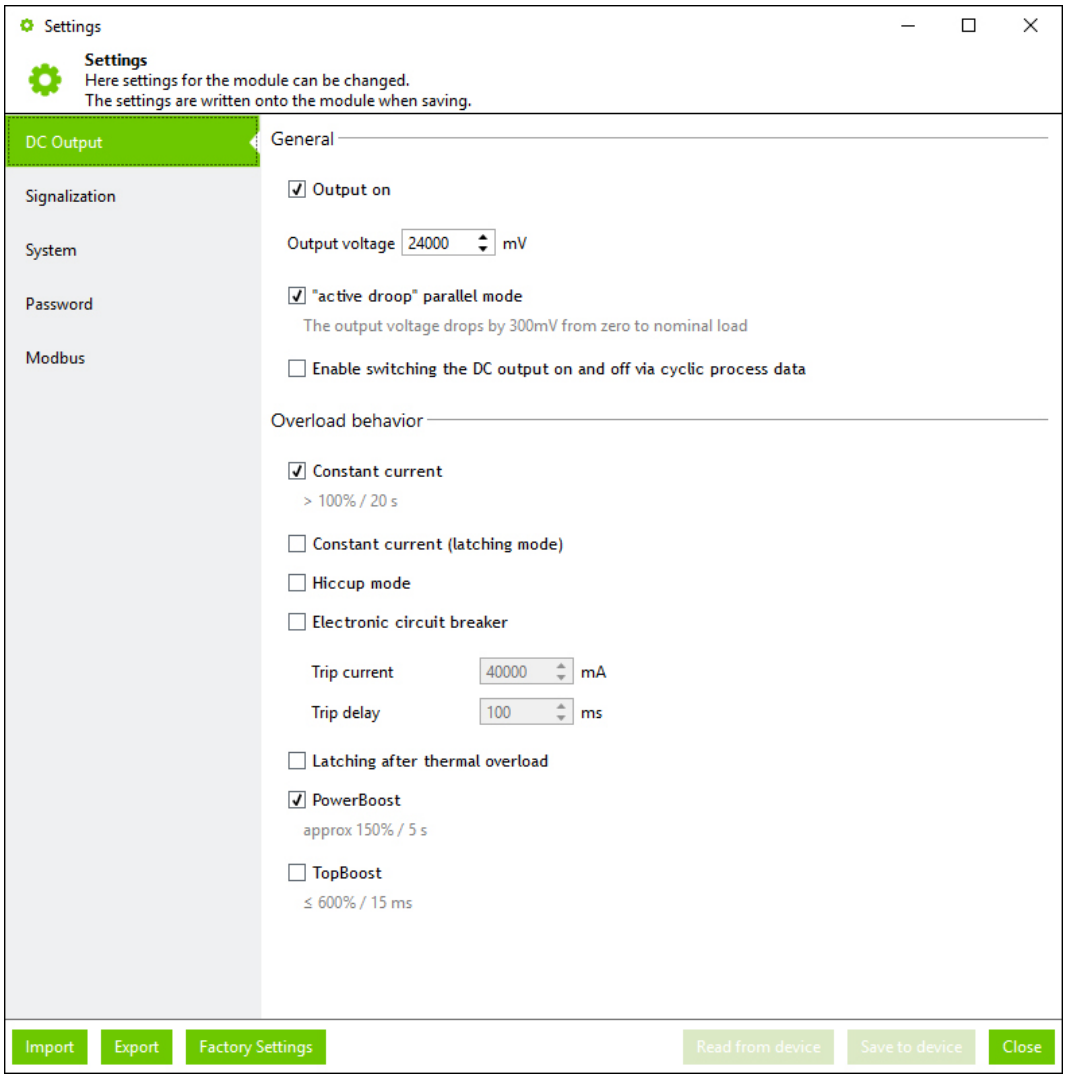


Figure 29: Dialog: Settings – DC Output

Table 39: Dialog: Settings – DC Output

Section	Parameters	Description
General Information	**Switch Output On**	If this box is checked, the DC output is enabled.
	Output Voltage	Here you can enter the output voltage (unit: mV) that is present when the output is active.
	“Active Droop” Parallel Switching Mode	If this box is checked, the “Active Droop” parallel switching mode is active. In this mode, a smooth characteristic ensures better current sharing for parallel operation of power supplies.
	Enable Switch-On and Switch-Off of DC Output via Cyclic Process Data	If this box is checked, the DC output can be switched on and off via cyclic process data.
Overload Behavior	**Constant Current**	If this box is checked, the “Constant Current” overload behavior is enabled. You can find more information at: **"Constant Current" Mode [▶ 28]**.
	Constant Current with Latching Shutdown	If this box is checked, the “Constant Current with Latching Shutdown” overload behavior is enabled. You can find more information at: **"Constant Current with Latching Shutdown" Mode [▶ 29]**.

Section	Parameters	Description
	Hiccup Mode	If this box is checked, the “Hiccup Mode” overload behavior is enabled. You can find more information at: **"Hiccup" Mode [▶ 29]**.
	Electronic Circuit Breaker	If this box is checked, the “Electronic Circuit Breaker” overload behavior is enabled. In the event of overload, the product works like an electronic circuit breaker and switches the energy off with a time delay. You can find more information at: **"Electronic Circuit Breaker" Mode [▶ 30]**.
	Trip Current	Here you can enter the trip current (unit: mA) for the “Electronic Circuit Breaker” overload behavior.
	Trip Delay	Here you can enter the trip delay (unit: ms) for the “Electronic Circuit Breaker” overload behavior.
	Latching Shutdown on Thermal Overload	If this box is checked, the “Latching Shutdown on Thermal Overload” behavior is enabled. After an overtemperature event, the product no longer automatically switches the output back on as soon as it has cooled off. To switch the output back on, manual intervention is necessary. The following options are available for this: • Communication interface • Buttons • Digital input You can find more information at: **"Latching Shutdown on Thermal Overload" Mode [▶ 31]**.
	PowerBoost	If this box is checked, the “PowerBoost” overload behavior is enabled. The product offers up to 150 % of the output power for 5 s. For more information, see **"PowerBoost" Mode [▶ 31]**.
	TopBoost	If this box is checked, the “TopBoost” overload behavior is enabled. The product provides up to 500 % additional output current for 15 ms. For more information, see **"TopBoost" Mode [▶ 31]**.

Signalization

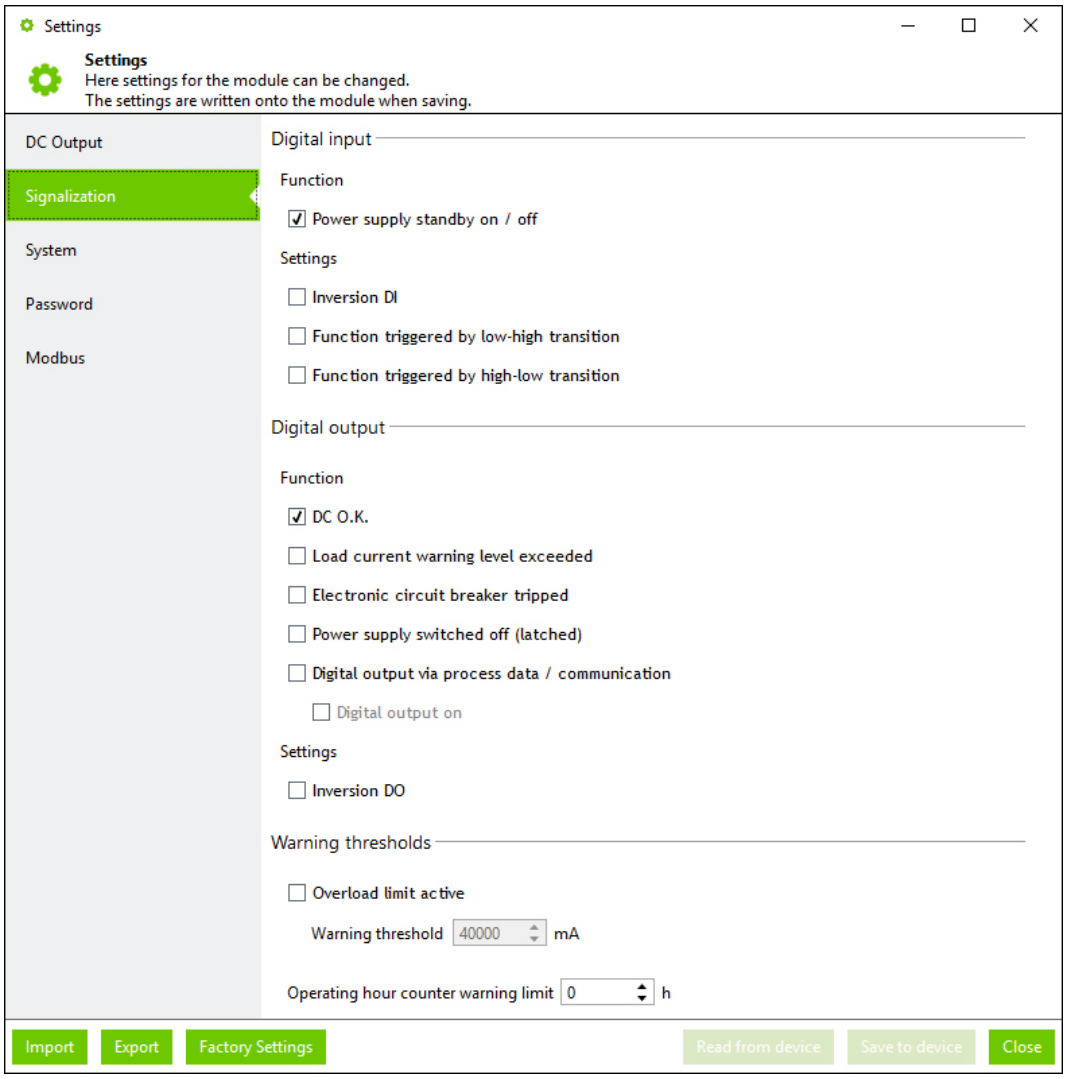


Figure 30: Dialog: Settings – Signalization

Table 40: Dialog: Settings – Signalization

Section	Parameters	Description
Digital input	**Power supply standby on/off**	If this checkbox is selected, the product can be switched on and off via the digital input.
	Inversion DI	If this checkbox is selected, the digital input is inverted.
	Function triggered by low-high transition	If this checkbox is selected, the digital input is activated in the event of an edge change from 0 to 1.
	Function triggered by high-low transition	If this checkbox is selected, the digital input is activated in the event of an edge change from 1 to 0.
Digital output	**DC O.K.** [1)]	If this checkbox is selected, the digital output is set if the DC output voltage is OK.
	Load current warning level exceeded [1)]	If this checkbox is selected, the digital output is set if the overload warning threshold is exceeded.
	Electronic circuit breaker tripped [1)]	If this checkbox is selected, the digital output is set if the electronic circuit breaker has tripped.
	Power supply switched off (latched) [1)]	If this checkbox is selected, the digital output is set if latching shutdown occurs.
	Digital output via process data/communication [1)]	If this checkbox is selected, the digital output can be controlled via the process data.

Section	Parameters	Description
	Digital output on	If this checkbox is selected, the digital output is switched on.
	Inversion DO	If this checkbox is selected, the digital output is inverted.
Warning thresholds	**Overload limit active**	If this checkbox is selected, a warning is triggered if the overload warning threshold is exceeded.
	Warning threshold	Here you can enter the value for current (unit: mA) at or above which a warning message is generated.
	Operating hour counter warning limit	You can enter after how many operating hours (unit: h) after which a warning message is generated.

[1] These parameters are not mutually exclusive and can also be selected simultaneously.

System

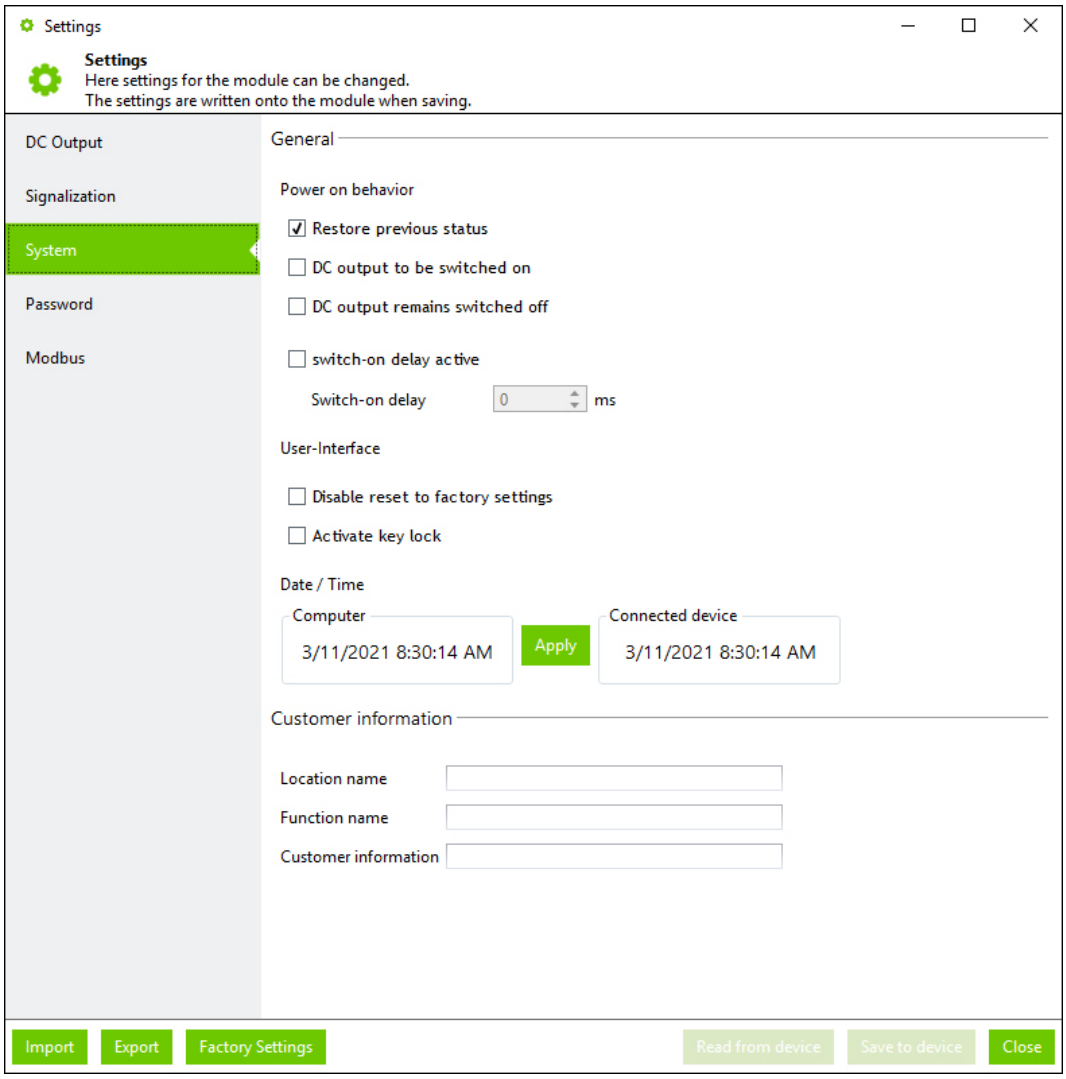


Figure 31: Dialog: Settings – System

Table 41: Dialog: Settings – System

Section	Parameters	Description
General Information	**Restore Previous State**[1]	If this box is checked, the previous state of the product is restored in the event of connection to the grid.
	DC Output Switches On[1]	If this box is checked, the DC output is switched on in the event of connection to the grid.
	DC Output Remains Switched Off[1]	If this box is checked, the DC output remains switched off in the event of connection to the grid.
	Switch-On Delay Enabled	If this box is checked, an additional switch-on delay is enabled in the event of connection to the grid.
	Switch-On Delay	Here you can enter the switch-on delay (unit: ms).
	Inhibit Restoring to Factory Settings	If this box is checked, it is not longer possible to reset the product to the factory settings using the buttons.
	Activate Button Lock	If this box is checked, a button lock feature is activated. No functions can be performed with the buttons. However, it is still possible to reset the product to the factory settings.
	[Apply]	Here you can synchronize the internal time of the connected product with the system time of the PC.

Section	Parameters	Description
Customer Information	**Site Name**	Here you can enter additional information on the product used. All the input fields can be freely edited. You can enter up to 32 characters in each input field.
	Function Name	
	Customer Information	

[1] These parameters are mutually exclusive, and only one can be selected at a time.

Password

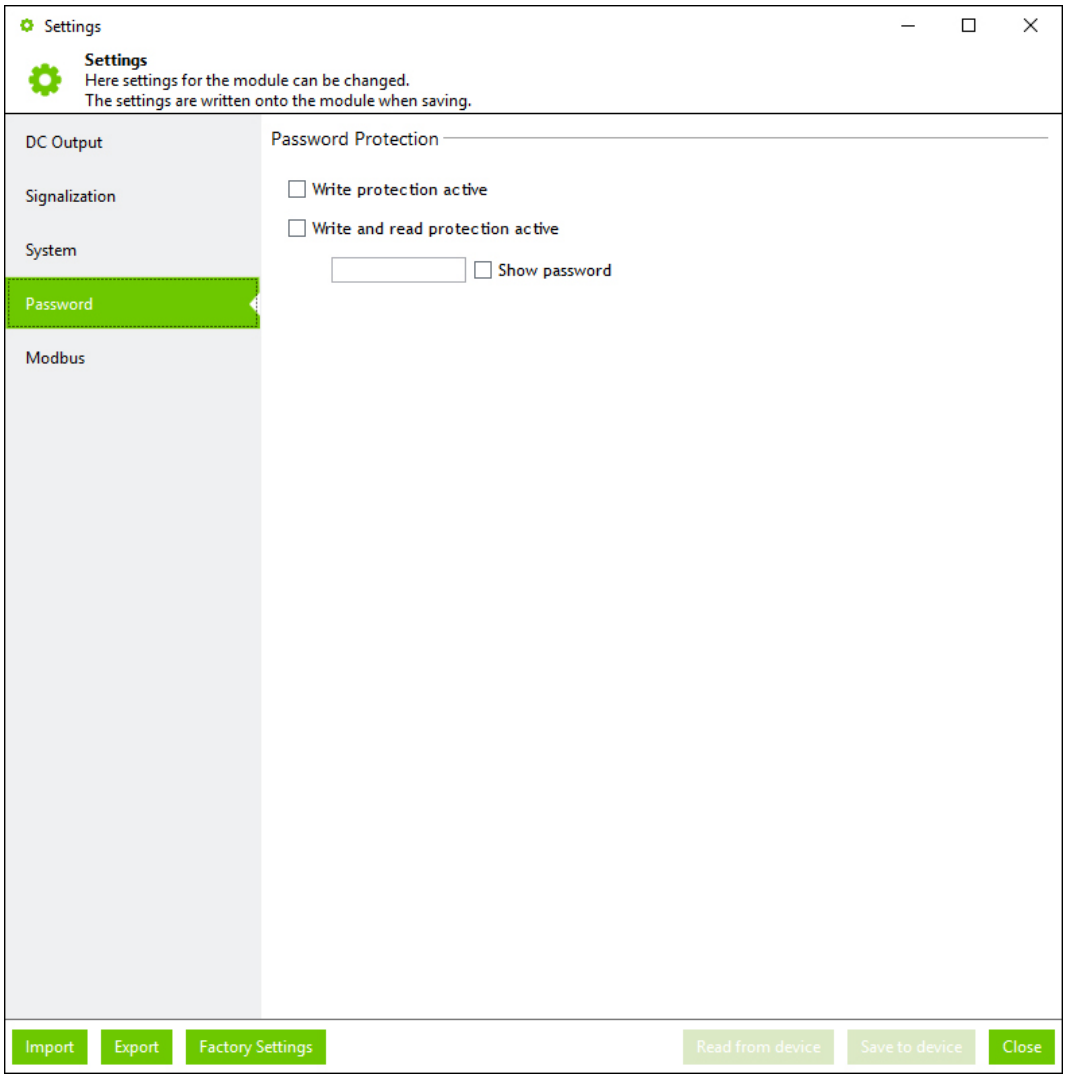


Figure 32: Dialog: Settings – Password

Table 42: Dialog: Settings – Password

Section	Parameters	Description
Password Protection	**Write protection active**	If this checkbox is selected, no parameters can be written to the product.
	Write and read protection active	If this checkbox is selected, no parameters can be written to the product or read from the product.
	Input field	You can enter the password here. The password can consist of at most eight characters (from the ASCII character set).
	Show password	If this checkbox is selected, the password entered is shown without encryption.

Modbus

This section contains specific parameters for the product.

The configured parameters are first transferred to the product. As soon as the Modbus RTU Communication Module is attached, the parameters are used here accordingly.

For more information on the Modbus RTU Communication Module, see the corresponding 🕮 **Product Manual** as well as **Accessories [▶ 69]**.

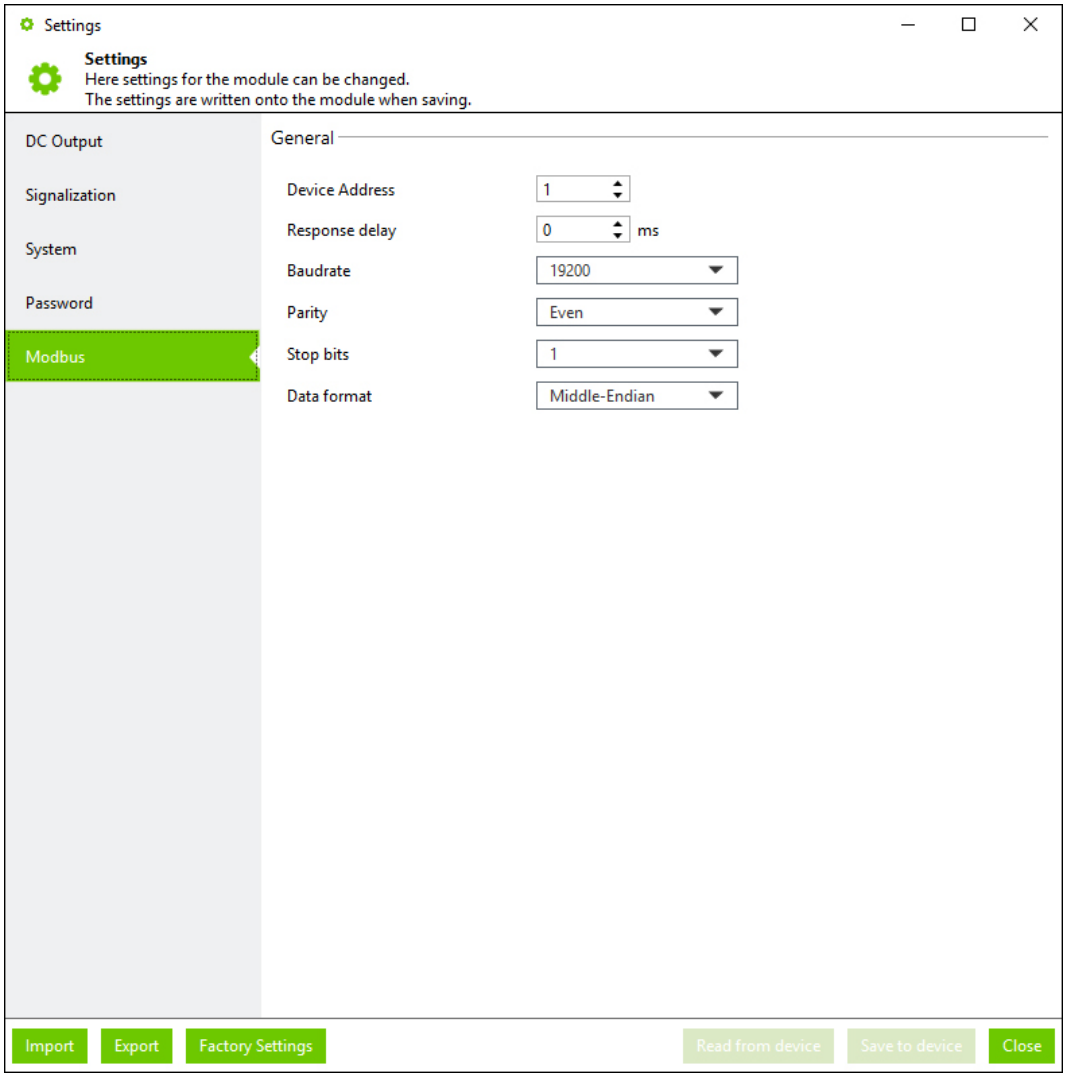


Figure 33: Dialog: Settings – Modbus

Table 43: Dialog: Settings – Modbus

Section	Parameters	Description
General Information	**Device Address**	Here you can enter the device address.
	Response Delay	Here you can enter the response delay (unit: ms).
	Baud Rate	Here you can select the baud rate.
	Parity	Here you can select the parity.
	Stop Bits	Here you can select the number of stop bits.
	Data Format	Here you can select the data format.

11.3.1.2.2 Dialog: Simulation

In this dialog, you can adjust the individual setting options of the product on the software side. This does not require the presence of a product. The individual setting options are exclusively for simulation and test purposes and are not transferred to a connected product.

The simulation has the following advantages:

- **Getting to know the full range of functions:**
  All existing operating states can be simulated.
- **Visual display of operating states, warnings and errors:**
  All operating states, warnings and errors can be displayed visually.
- **Identifying the optimal setting options:**
  Optimal setting options for a specific load behavior can be identified.
- **Viewing the tabs of communication modules:**
  The specific tabs and corresponding content of all Communication Modules that are present can be viewed.

The dialog consists of individual sections (“operation panels”) with different functions. The operation panels themselves have a function-specific structure and can be arranged as desired, highlighted in detail and hidden or unhidden.

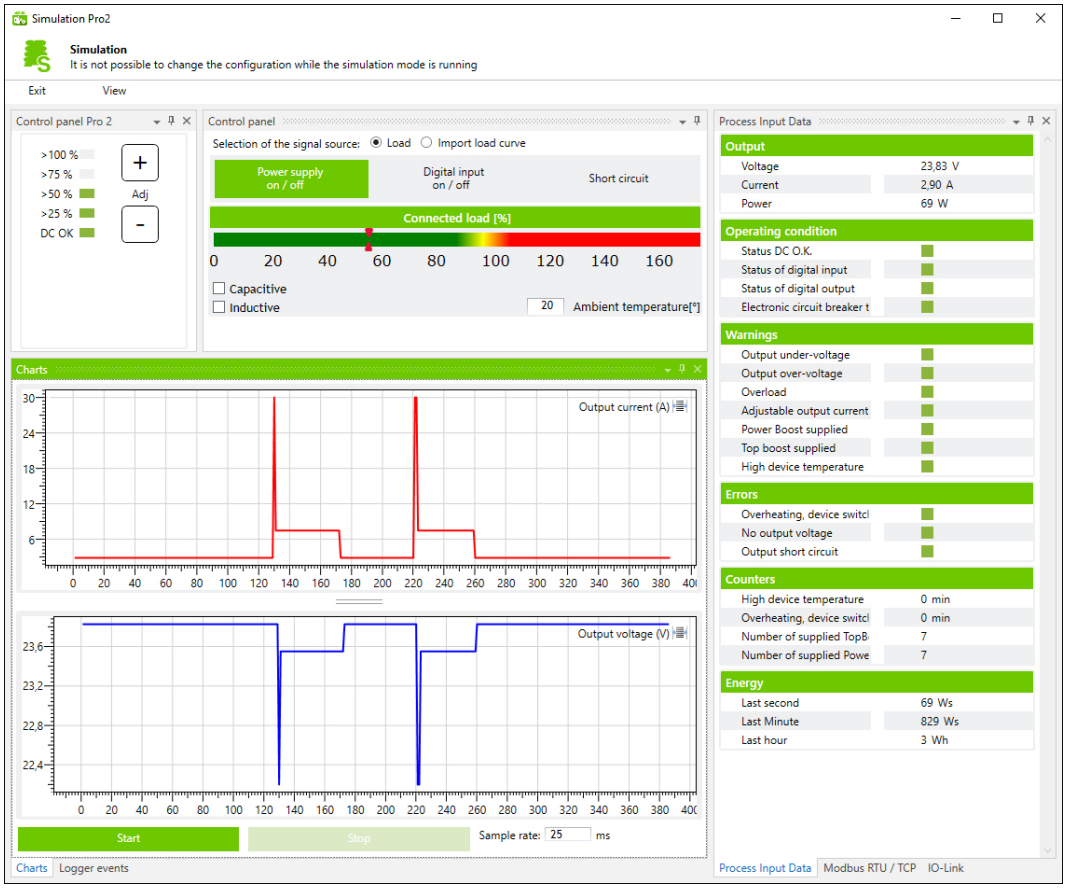
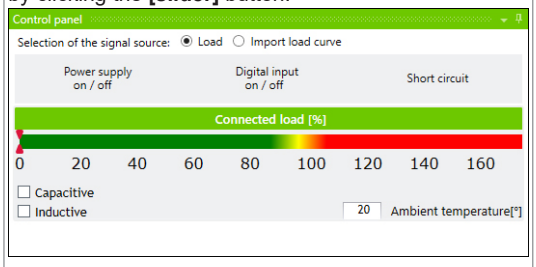
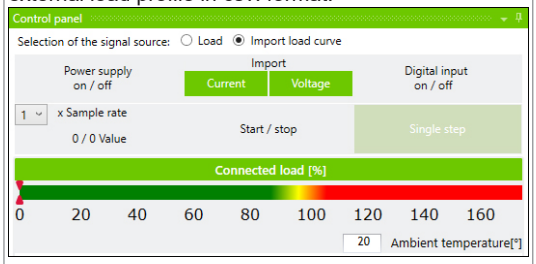


Table 44: Dialog: Simulation

Section	Settings Option	Description
General Settings Options	**[Exit]**	Closes the dialog.
	[View]	Opens a dialog. Here you can select the individual operation panels to display in the dialog.

Section	Settings Option	Description
Operation Panel Settings Options		Arranges the selected operation panel according to the settings in the dialog.
		Hides the selected operation panel and anchors the operation panel as a tab on the outer edge of the dialog.
		Closes the selected operation panel.
Pro 2 Operation Panel	**Optical Status Indicator**	Indicates the connected load [unit: %]. You can set the percentage by clicking the **[slider]** button in the operation panel.
	[Buttons]	These can be used to set the output voltage. **[+]**: increases the output voltage **[−]**: decreases the output voltage You can enable the function by clicking the **[Power Supply On/Off]** button in the operation panel.
Operation Panel	The operation panel has two different views: • **“Load” view:** This view appears if the “Load” setting has been enabled in the **Signal Source Selection** operation panel. • **“Import Load Profile” view:** This view appears if the “Import Load Profile“ setting has been enabled in the **Signal Source Selection** operation panel. The different views are interlocked so only one can be selected at a time. Some settings options are also available in both views. These settings options are described in advance.	
	[Power SupplyOn/Off]	Switches the power supply on or off.
	[Digital InputOn/Off]	Sets the digital input to “1” or resets the digital input to “0.”
	[Slider]	Sets the load percentage.
	Ambient Temperature	Here you can enter the ambient temperature. This function can be used to illustrate how the temperature-dependent load derating works. **Example:** The yellow and red ranges in the load display shift to the left if an ambient temperature in the range +55… +70 ° C is entered. This provides a visualization of the temperature-dependent derating as function of the ambient temperature in the load display.
	“Load” View	
	Signal Source Selection: Load	If the box is checked, you can set the load percentage by clicking the **[slider]** button. 
	The following specific settings options are available:	
	[Short Circuit]	Generates a short circuit.
	Capacitive	If this box is checked, the load has a capacitive component.

Section	Settings Option	Description
	Inductive	If this box is checked, the load has an inductive component.
	“Import Load Profile” View	
	Signal Source Selection: Import Load Profile	If the box is checked, you can import the load as an external load profile in csv. format. 
	The following specific settings options are available:	
	[Current]	Here you can import an existing load profile (current).
	[Voltage]	Here you can import an existing load profile (voltage).
	Sampling Rate	Here you can select the frequency with which the imported load profile should be scanned.
	[Start/Stop]	Starts and stops the imported load profile.
	[Single Step]	Samples the imported load profile in single steps. This allows individual points to be examined more closely.
“Process Output Data” Operation Panel	–	Shows operating states, warnings and errors. For general information on operating states, warnings and errors, see **Display Section: Measurements [▶ 60]**.
“Modbus RTU/TCP” Operation Panel	–	Shows events and measured values from an attached Modbus RTU Communication Module or a Modbus TCP Communication Module.
“IO-Link” Operation Panel	–	Shows events and measured values from an attached IO-Link Communication Module.
“Diagrams” Operation Panel		Shows times series for the output voltage and current. For general information on time series of measured values, see **Display Section: Measurement Recording [▶ 62]**.
	[Start]	Starts recording.
	[Stop]	Stops recording.
	Sampling Rate	Here you can enter the recording cycle for the measured values (unit: ms).
“Logger Events” Operation Panel	–	Shows the most recent accumulated error messages and warnings. For general information on accumulated error messages and warnings, see **Display Section: Last Error and Warning Messages [▶ 64]**.

11.3.2 Main Menu

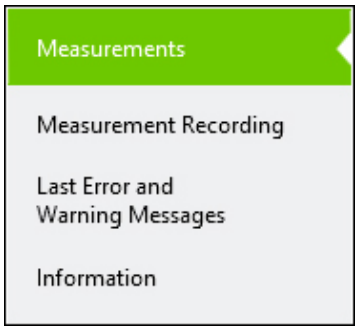


Figure 34: Main Menu

Menu Item	Description
Measured Values	Shows the current measured values and diagnostic messages. You can find the description in **Display Section: Measurements [▶ 60]**.
Measurement Recording	Shows a time sequence of up to three measured values. You can find the description in **Display Section: Measurement Recording [▶ 62]**.
Last Error Messages and Warnings	Shows the last accumulated error messages and warnings. You can find the description in **Display Section: Last Error and Warning Messages [▶ 64]**.
Information	Shows information about the connected product. You can find the description in **Display Section: Information [▶ 65]**.

11.3.3 Display Section

The Display section differs according to the menu item selected in the main menu.

11.3.3.1 Display Section: Measurements

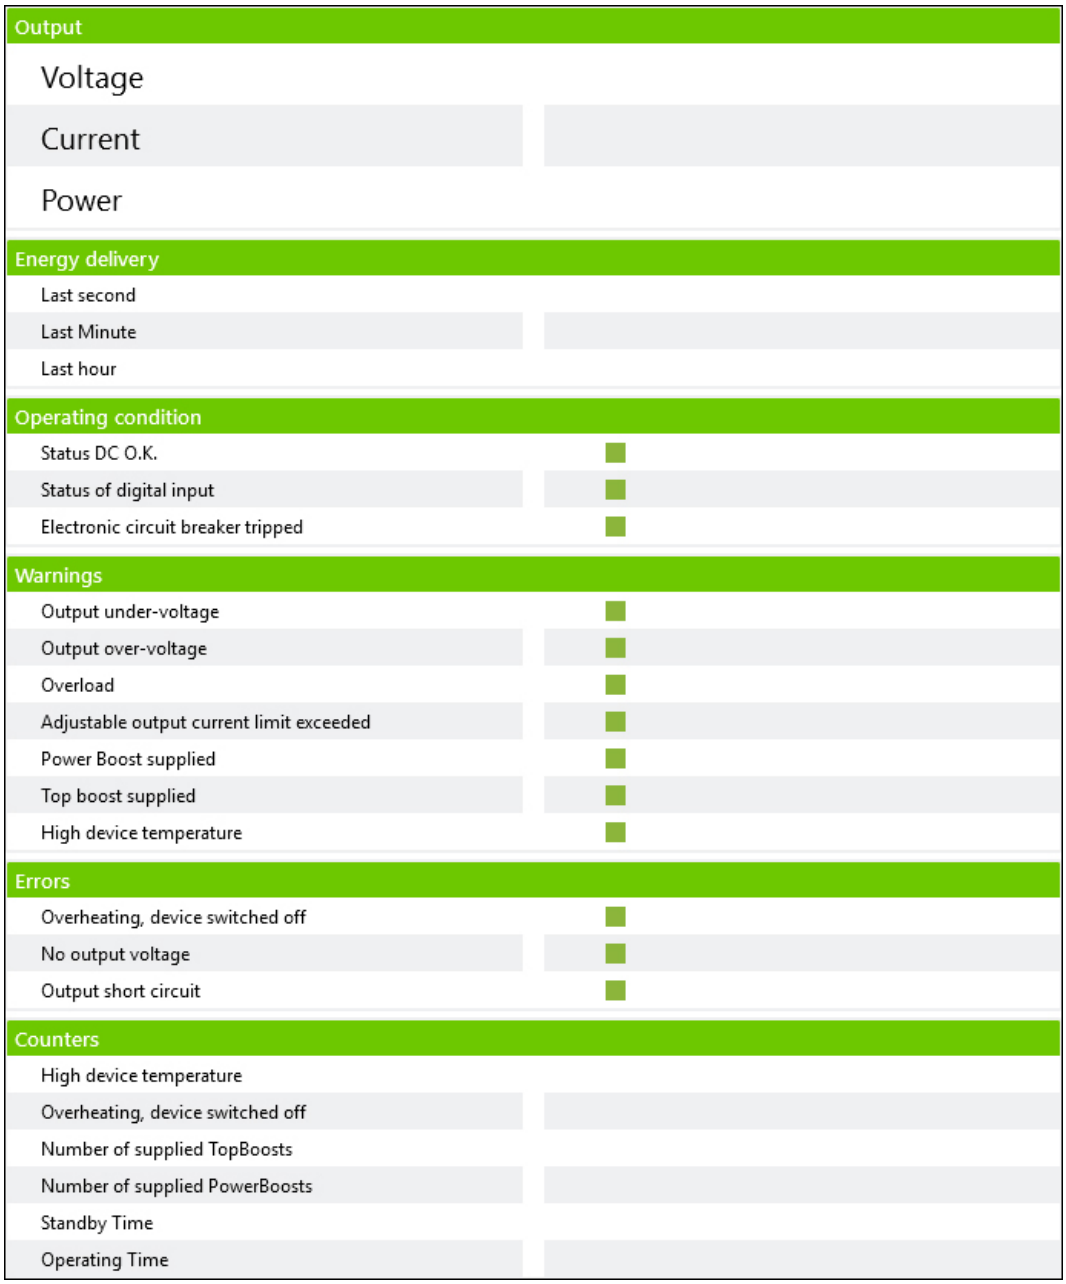


Figure 35: Display Section: “Measurements”

This Display section shows the current operating states, warnings and errors:

Table 45: Display Section: “Measurements”

Section	Indicator	Description
Output	**Output voltage**	This indicates the current output voltage (unit: V).
	Output current	This indicates the current output current (unit: A).
	Output power	This indicates the current output power (unit: W).
Energy delivery	**Last second**	This indicates the output energy supplied in the last second (unit: W·s).
	Last minute	This indicates the output energy supplied in the last minute (unit: W·s).
	Last hour	This indicates the output energy supplied in the last hour (unit: W·h).

Section	Indicator	Description
Operating condition	**Status DC OK**	Green LED: Status OK Red LED: There is a message
	Status of digital input	
	Electronic circuit breaker	
Warnings	**Output under-voltage**	Green LED: Status OK Red LED: There is a warning
	Output over-voltage	
	Overload	
	Configurable output current limit exceeded	
	PowerBoost supplied [1]	
	TopBoost supplied [1]	
	High device temperature	
Errors	**Overheating, device switched off**	Green LED: Status OK Red LED: Error present
	No output voltage	
	Output short circuit	
Counters	**High device temperature**	This shows how long the product has been operated at a high device temperature. The displayed value is the sum over the previous operating time (unit: h). The hours themselves are recorded and added up over the entire product life cycle.
	Overheating, device switched off	This shows how long the product switched off due to excess temperature. The displayed value is the sum over the previous operating time (unit: h). The hours themselves are recorded and added up over the entire product life cycle.
	Number of supplied Top-Boosts	The number of all Top Boosts generated is displayed here. The displayed value is the sum over the previous operating time.
	Number of supplied Power-Boosts	The number of all Power Boosts generated is displayed here. The displayed value is the sum over the previous operating time.
	Standby Time	The standby time of the product (unit: h) is displayed.
	Operating Time	The operating time of the product (unit: h) is displayed.

[1] When PowerBoost or TopBoost is output, this is signaled for 5 s.

11.3.3.2 Display Section: Measurement Recording

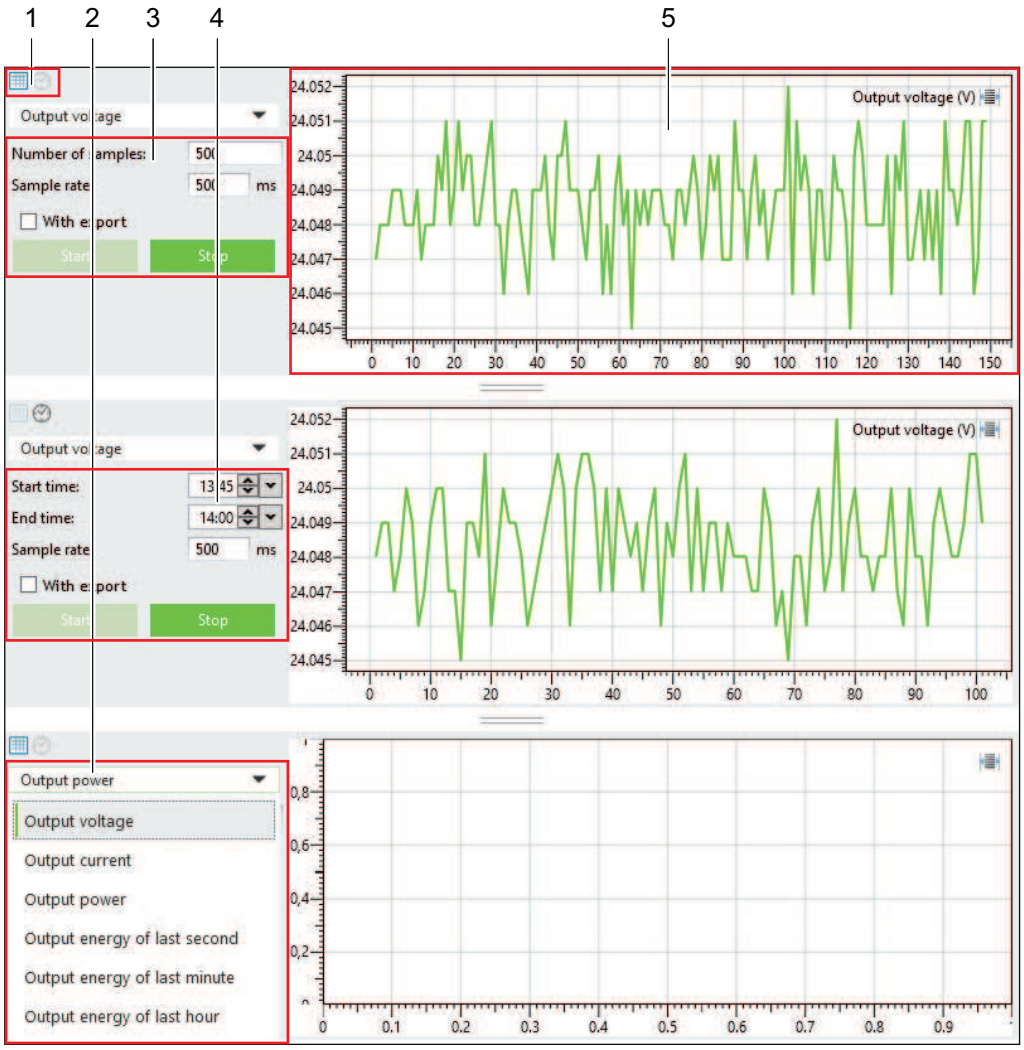


Figure 36: Display Section: “Measurement Recording”

This display section can represent the time series of up to three different measured values (measurement recordings).

You can make the following settings for each time series:

Table 46: Display Section: “Measurement Recording”

Pos.	Setting	Description
1	**Chart/Clock**	Here you can specify whether a specific number of values (**chart**) or measured values over a specific time period (**clock**) should be recorded. The corresponding input form changes accordingly: • Pos. 3 = input form for **chart** • Pos. 4 = input form for **clock**
2	**Measured Value Selection**	Here you can select the measured value to record.
3	**Number of samples**	Here you can enter the number of measured values to record (setting at pos. 1 = **chart**).
	Sample rate	Here you can enter the recording cycle for the measured values (unit: ms)
	With export	• Box checked: The recording is exported as a CSV file. • Box unchecked: The data is recorded only for online display and not saved.

Pos.	Setting	Description
	[Start]	Starts the recording (setting at pos. 1 = **chart**).
	[Stop]	Stops the recording before the specified number is reached (setting at pos. 1 = **chart**).
4	**Start time**	Here you can enter the time when recording should start (setting at pos. 1 = **clock**).
	End time	Here you can enter the time when recording should end (setting at pos. 1 = **clock**).
	Sample rate	Here you can enter the recording cycle for the measured values (unit: ms)
	With export	• Box checked: The recording is exported as a CSV file. • Box unchecked: The data is recorded only for online display and not saved.
	[Start]	Starts the recording (setting at pos. 1 = **chart**).
	[Stop]	Stops the recording before the specified number is reached (setting at pos. 1 = **chart**).
5	**–**	This shows the time series for the selected measured value.

11.3.3.3 Display Section: Last Error and Warning Messages

No.	Date	Time	WarningCode	ErrorCode
1	2021.03.10	13:02:12	Output under-voltage Adjustable output current limit exceeded Power Boost supplied	Output short circuit
2	2021.03.10	13:02:12	Output under-voltage Adjustable output current limit exceeded Power Boost supplied	
3	2021.03.10	13:02:12	Adjustable output current limit exceeded Power Boost supplied	
4	2021.03.10	13:02:12	Power Boost supplied	
5	2021.03.10	13:02:19		
6		00:00:43	Power Boost supplied	
7		00:00:45		
8	2021.03.10	13:02:06	Top boost supplied	
9	2021.03.10	13:02:06	Output under-voltage Overload Adjustable output current limit exceeded Top boost supplied	
10	2021.03.10	13:02:06	Output under-voltage Top boost supplied	
11	2021.03.10	13:02:06	Output under-voltage Adjustable output current limit exceeded Top boost supplied	Output short circuit
12	2021.03.10	13:02:06	Output under-voltage Adjustable output current limit exceeded Power Boost supplied Top boost supplied	Output short circuit
13	2021.03.10	13:02:06	Output under-voltage Adjustable output current limit exceeded Power Boost supplied Top boost supplied	No output voltage Output short circuit
14	2021.03.10	13:02:08	Output under-voltage Adjustable output current limit exceeded Power Boost supplied Top boost supplied	No output voltage
15	2021.03.10	13:02:08	Output under-voltage Adjustable output current limit exceeded Power Boost supplied Top boost supplied	No output voltage Output short circuit

Figure 37: Display Section: “Last Error and Warning Messages”

The last accumulated error messages and warnings are displayed in this display section:

Table 47: Display Section: “Last Error and Warning Messages”

Section	Description
No.	Consecutive number of the accumulated warning and error message.
Date	Date of the accumulated warning and error message.
Time	Time of the accumulated warning and error message.
Warning Code	Text of the accumulated warning.
Error Code	Text of the accumulated error message.

Up to 20 error messages and warnings are shown in the display section.

The display section is a so-called “ring memory”: If the display section is full, existing error messages and warnings are overwritten by accumulating error messages and warnings.

11.3.3.4 Display Section: Information

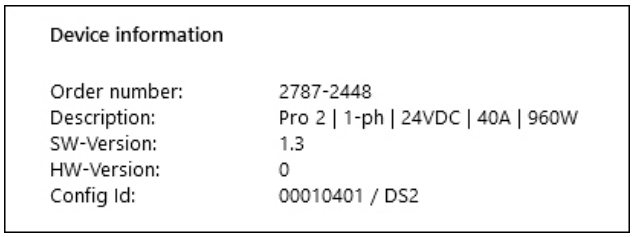


Figure 38: Example View

This display section shows information on the connect product.

Table 48: Display Section: “Information”

Indicator	Description
Order number:	This shows the order number of the product.
Description:	This shows the manufacturer’s name for the product.
SW-Version	This shows the current release of the software version (firmware).
HW-Version:	This shows the current release of the hardware version.
Config ID:	This shows the configuration ID of the product.

12 Notes on Operation

12.1 Disable/Enable Overvoltage Protection

The product is protected against overvoltages; more information is available at Overvoltage protection [▶ 24].

The numbers given in the parentheses refer to the positions in the figure “View” under Sprungziel: Ansicht.

12.1.1 Disable/Enable Input-Side Overvoltage Protection

Disable Overvoltage Protection

- Remove the screw (10) on the side of the product.

➡ The overvoltage protection is disabled.

Enable Overvoltage Protection

- Screw in the screw (10) on the side of the product.

➡ The overvoltage protection is enabled.

12.1.2 Disable/Enable Output-Side Overvoltage Protection

Disable Overvoltage Protection

- Remove the screw (4) on the side of the product.

➡ The overvoltage protection is disabled.

Enable Overvoltage Protection

- Screw in the screw (4) on the side of the product.

➡ The overvoltage protection is enabled.

12.2 Parallel Operation

In parallel operation, set the output voltage of the products that will be connected in parallel to precisely the same value, if possible. The resistance of the conductors between the power supply units and the load must be nearly identical. Only connect products of the same type in parallel

Use external rail-mount terminal blocks when connecting in parallel. A parallel connection directly on the connectors on the secondary side of the product is not allowed.

For active load distribution, the "Active Droop" setting is enabled by default. This reduces the output voltage in the event of a load (by 300 mV from 0 A up to the nominal current). This smooth characteristic curve ensures better current sharing for parallel operation of power supplies. This setting can be enabled in the Dialog: Settings [▶ 46] dialog in the "DC Output" section of the WAGO Interface Configuration software.

13 Decommissioning

13.1 Shut Down

You can shut down the system as follows:

- Using the on/off button (≥ BIOS version 01: hold down for at least five seconds)
- In the “Terminal” configuration tool
- In the “Cockpit” visualization tool

13.2 Disposal and Recycling



WEEE Mark

Electrical and electronic equipment may not be disposed of with household waste. This also applies to products without this mark.

Electrical and electronic equipment contain materials and substances that can be harmful to the environment and health. Electrical and electronic equipment must be disposed of properly after use. Environmentally friendly disposal benefits health, protects the environment from harmful substances in electrical and electronic equipment and enables sustainable and efficient use of resources.

- Observe the national and local regulations for the disposal of electrical and electronic equipment, lithium-ion batteries, lead–acid batteries and packaging.
- Clear any data stored on electrical and electronic equipment.
- Remove lithium-ion batteries, lead–acid batteries or memory cards that are added to the electrical and electronic equipment.
- Wear appropriate personal protective equipment when removing the lithium-ion batteries/lead–acid batteries.
- Dispose of the removed lithium-ion batteries/lead–acid batteries according to your local waste regulations (e. g. collection boxes at the retail or local collection points).
- Have electrical and electronic equipment sent to a local collection point.
- Dispose of all types of packaging to ensure a high level of recovery, reuse and recycling.
- Transport packages from the B2B area can be taken back free of charge via a return system in accordance with the Packaging Act. Please contact our service provider Interseroh directly. The corresponding certificate can be found at: **corporate-certificates**.
- Throughout Europe, Directives 2006/66/EC, 94/62/EC and 2012/19/EU (WEEE) apply. National directives and laws may differ.

14 Appendix

14.1 Application Notes

The following figures provide examples of how the product can be connected as a load in three different grounding systems: TN, TT and IT.

14.1.1 AC Operation

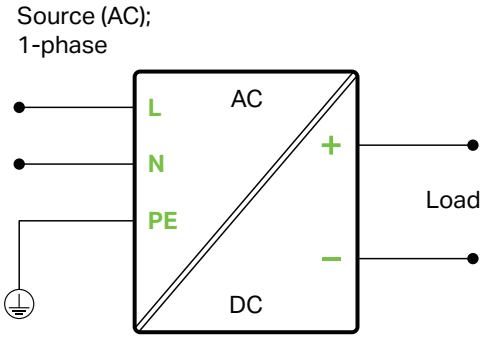


Figure 39: AC input

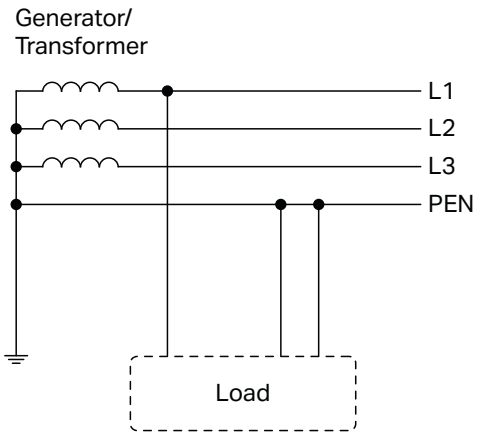


Figure 40: TN Network

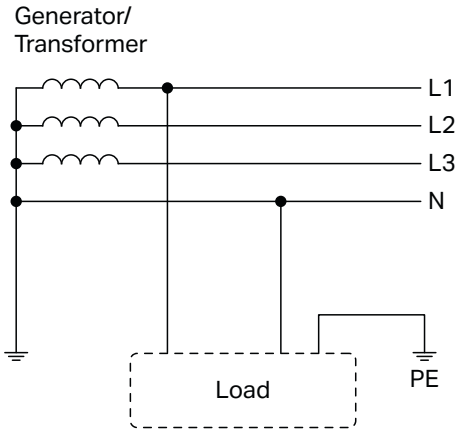


Figure 41: TT Network

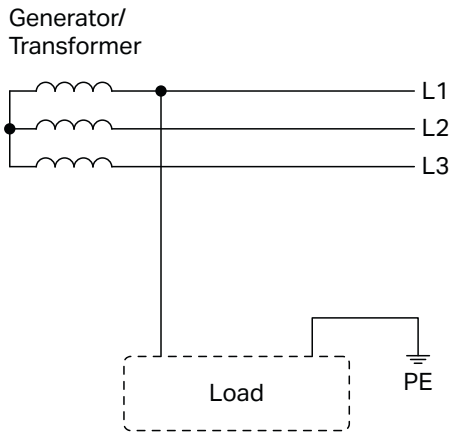


Figure 42: IT Network

14.2 Accessories

The following accessories are available for the product:

Accessories – Communication

Table 49: Accessories – Communication

Description	Name	Item Number
Attachable IO-Link Communication Module for the product	IO-Link Communication Module	2789-9080
Attachable Modbus RTU Communication Module for the product	Modbus RTU Communication Module	2789-9015
Attachable Modbus TCP Communication Module for the product	Modbus TCP Communication Module	2789-9052
Attachable EtherNet/IP Communication Module for the product	EtherNet/IP Communication Module	2789-9023
WAGO USB Communication Cable	2.5 m	750-923

Accessories – Tools

Table 50: Accessories – Tools

Description	Designation	Item Number
Operating tool, with partially insulated shaft	Type 2, blade 3.5 × 0.5 mm	0210-0720
Operating tool, with partially insulated shaft	Type 3, blade 5.5 × 0.8 mm	0210-0721

Accessories – Marking

Table 51: Accessories – Marking

Description	Item Number
Marker Carrier	2789-1233
Marking System	2009-0110
WMB Multi Marking System	2009-0115
	2009-0115/0000-0002

Accessories – Spare Parts

Table 52: Accessories – Spare Parts

Description	Item number
Female connector as spare part, input	0721-0203/0000-0004/0000-9540
Female connector as spare part, output	0831-3105/0000-0015/0000-9504
Female connector as spare part, signal	0721-0104/K000-0001

14.3 Protected Rights

- Adobe® and Acrobat® are registered trademarks of Adobe Systems Inc.
- Android™ is a trademark of Google LLC.
- Apple, the Apple logo, iPhone, iPad and iPod touch are registered trademarks of Apple Inc. registered in the USA and other countries. “App Store” is a service mark of Apple Inc.
- AS-Interface® is a registered trademark of the AS-International Association e.V.
- BACnet® is a registered trademark of the American Society of Heating, Refrigerating and Air Conditioning Engineers, Inc. (ASHRAE).
- *Bluetooth*® is a registered trademark of Bluetooth SIG, Inc.
- CiA® and CANopen® are registered trademarks of CAN in AUTOMATION – International Users and manufacturers Group e.V.
- CODESYS is a registered trademark of CODESYS Development GmbH.
- DeviceNet® is a registered trademark of the Open DeviceNet Vendor Association, Inc (ODVA).
- DALI is a registered trademark of the Digital Illumination Interface Alliance (DiiA).
- Docker® and the Docker® logo are trademarks or registered trademarks of Docker, Inc. in the USA and/or other countries. Docker, Inc. and other parties may also have trademark rights to other terms used herein.
- EtherCAT® is a registered trademark and patented technology licensed by Beckhoff Automation GmbH, Germany.
- ETHERNET/IP™ is a registered trademark of the Open DeviceNet Vendor Association, Inc (ODVA).
- EnOcean® is a registered trademark of EnOcean GmbH.
- ***flex***ROOM® is a registered trademark of WAGO Verwaltungsgesellschaft mbH.
- Google Play™ is a registered trademark of Google Inc.
- IO-Link is a registered trademark of PROFIBUS Nutzerorganisation e.V.
- KNX® is a registered trademark of the KNX Association cvba.
- Linux® is a registered trademark of Linus Torvalds.
- LON® is a registered trademark of the Echelon Corporation.
- Modbus® is a registered trademark of Schneider Electric, licensed for Modbus Organization, Inc.
- OPC UA is a registered trademark of the OPC Foundation.
- PROFIBUS® is a registered trademark of the PROFIBUS Nutzerorganisation e.V. (PNO).
- PROFINET® is a registered trademark of the PROFIBUS Nutzerorganisation e.V. (PNO).
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Subversion® is a trademark of the Apache Software Foundation.
- Windows® is a registered trademark of Microsoft Corporation.

List of Tables

Table 1 Revision index structure ... 14
Table 2 Details – Input Connection ... 15
Table 3 Details – Output Connection ... 15
Table 4 Details – Signal Connection ... 16
Table 5 Indication of Operating States – General ... 16
Table 6 Indication of Operating States – Output Power ... 16
Table 7 Technical Data – Product ... 17
Table 8 Technical Data – AC Input ... 18
Table 9 Technical Data – Mains Failure Buffering Time ... 18
Table 10 Technical Data – Input Connection ... 19
Table 11 Technical Data – Output ... 19
Table 12 Technical Data – Output Connection ... 20
Table 13 Technical Data – Efficiency/Power Loss ... 20
Table 14 Technical Data – Signal (Input DI) ... 21
Table 15 Technical Data – Signal (Output DO) ... 21
Table 16 Technical Data – Signal Connection ... 21
Table 17 Technical Data – Communication ... 22
Table 18 Technical Data – MTBF/Lifespan ... 22
Table 19 Technical Data – Environmental Conditions ... 22
Table 20 Technical Data – Product Protection ... 22
Table 21 Technical Data – Safety ... 23
Table 22 Functions ... 24
Table 23 Test voltages at input ... 24
Table 24 Output-Side Test Voltages ... 24
Table 25 Clearances ... 25
Table 26 Nominal values per UL ... 27
Table 27 Derating (Temperature-Dependent) ... 27
Table 28 Derating (Location-Dependent) ... 27
Table 29 Operation via Buttons ... 38
Table 30 Display of Diagnostics – Warnings ... 39
Table 31 Diagnostic Indicators – Errors ... 39
Table 32 Minimum System Requirements ... 40
Table 33 Recommended System Requirements ... 40
Table 34 “Backstage” Tab ... 42
Table 35 “Device” Tab ... 43
Table 36 Legend for the “Graphical User Interface” Overview ... 45

Table 37 “Device” Tab 46
Table 38 Dialog: Settings – Buttons 47
Table 39 Dialog: Settings – DC Output 48
Table 40 Dialog: Settings – Signalization 50
Table 41 Dialog: Settings – System 52
Table 42 Dialog: Settings – Password 54
Table 43 Dialog: Settings – Modbus 55
Table 44 Dialog: Simulation 56
Table 45 Display Section: “Measurements” 60
Table 46 Display Section: “Measurement Recording” 62
Table 47 Display Section: “Last Error and Warning Messages” 64
Table 48 Display Section: “Information” 65
Table 49 Accessories – Communication 69
Table 50 Accessories – Tools 69
Table 51 Accessories – Marking 69
Table 52 Accessories – Spare Parts 70

List of Figures

Figure 1 View ... 12
Figure 2 Type Plate ... 13
Figure 3 Product-specific information ... 14
Figure 4 Input X1 Connection ... 14
Figure 5 Output X2 Connection ... 15
Figure 6 Signal X3 Connection ... 15
Figure 7 Optical Status Indicator ... 16
Figure 8 Control Elements ... 17
Figure 9 Dimensions ... 18
Figure 10 Turn-on time ... 20
Figure 11 Efficiency (typ.) at 230 VAC ... 20
Figure 12 Power Loss (typ.) at 230 VAC ... 21
Figure 13 Dielectric Strength ... 23
Figure 14 Position of the DIN-rail ... 25
Figure 15 Derating (Temperature-Dependent) ... 27
Figure 16 Derating (Location-Dependent) ... 28
Figure 17 "Constant Current" Mode ... 29
Figure 18 "Constant Current with Latching Shutdown" Mode ... 29
Figure 19 "Hiccup" Mode ... 30
Figure 20 “Electronic Circuit Breaker” Mode ... 30
Figure 21 “PowerBoost” Mode in Combination with “Constant Current” Mode ... 31
Figure 22 Loop Impedance ... 32
Figure 23 Mounting ... 34
Figure 24 Removal ... 35
Figure 25 Connecting a Conductor to a CAGE CLAMP® ... 37
Figure 26 Software Start ... 41
Figure 27 Start View ... 41
Figure 28 Start View – Tabs ... 42
Figure 29 Dialog: Settings – DC Output ... 48
Figure 30 Dialog: Settings – Signalization ... 50
Figure 31 Dialog: Settings – System ... 52
Figure 32 Dialog: Settings – Password ... 54
Figure 33 Dialog: Settings – Modbus ... 55
Figure 34 Main Menu ... 59
Figure 35 Display Section: “Measurements” ... 60
Figure 36 Display Section: “Measurement Recording” ... 62

Figure 37 Display Section: “Last Error and Warning Messages” 64
Figure 38 Example View 65
Figure 39 AC input 68
Figure 40 TN Network 68
Figure 41 TT Network 68
Figure 42 IT Network 69

WAGO GmbH & Co. KG
Postfach 2880 · D - 32385 Minden
Hansastraße 27 · D - 32423 Minden
✉ **info@wago.com**
www.wago.com

Headquaters	+49 571/887 – 0
Sales	+49 (0) 571/887 – 44 222
Order Service	+49 (0) 571/887 – 44 333
Fax	+49 571/887 – 844169

WAGO is a registered trademark of WAGO Verwaltungsgesellschaft mbH.
Copyright – WAGO GmbH & Co. KG – All rights reserved. The content and structure of the WAGO websites, catalogs, videos and other WAGO media are subject to copyright. Distribution or modification of the contents of these pages and videos is prohibited. Furthermore, the content may neither be copied nor made available to third parties for commercial purposes. Also subject to copyright are the images and videos that were made available to WAGO GmbH & Co. KG by third parties.