

WAGO Industrial Eco Switches

Industrial ECO Switch; Single Pair Ethernet; 4 Port 10BASE-T1L; 2 Port 100BASE-TX

852-2112



© 2025 WAGO GmbH & Co. KG
All rights reserved.

WAGO GmbH & Co. KG

Hansastraße 27
D - 32423 Minden

Phone: +49 571/887 – 0
E-Mail: ✉ info@wago.com
Internet: 🌐 www.wago.com

Technical Support

Phone: +49 571/887 – 44555
E-Mail: ✉ support@wago.com
Internet: 🌐 www.wago.com/support

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: ✉ documentation@wago.com

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present documentation are generally protected by trademark or patent.

WAGO is a registered trademark of WAGO Verwaltungsgesellschaft mbH.

Table of Contents

1 Provisions	5
1.1 Intended Use	5
1.2 Typographical Conventions	6
1.3 Legal Information	8
2 Safety	9
2.1 General Safety Regulations	9
2.2 Electrical Safety	9
2.3 Mechanical Safety	10
2.4 Thermal Safety	10
2.5 Indirect Safety	10
3 Overview	11
4 Properties	12
4.1 View	12
4.2 Type Plate	13
4.3 Connections	14
4.3.1 Supply Voltage	14
4.3.2 Network Connections	14
4.4 Indicators	15
4.4.1 Status LED of the Supply Voltage	15
4.4.2 LED Indicators – Network Connections	15
4.4.3 SPE LEDs	15
4.5 Control Elements	15
4.5.1 DIP Switch	15
5 Planning	17
5.1 Data Security	17
5.2 Safety Measures at the Installation Location	17
5.3 Functional grounding	18
5.4 Mounting Position	18
5.5 EMC Installation	18
6 Transport and Storage	20
7 Installation and Removal	21
7.1 Mounting on the DIN-Rail	21
7.2 Removal from the DIN-Rail	21
8 Connect	22
8.1 CAGE CLAMP® Connection with Push-Button	22
8.2 CAGE CLAMP® Connection with Lever	23
9 Decommissioning	24
9.1 Disposal and Recycling	24
10 Appendix	25
10.1 Technical Data, Approvals, Guidelines and Standards	25
10.1.1 Datenblatt_852-2112	26

10.2 Protected Rights 28

1 Provisions

This document applies to the following product:

🔗 **852-2112** (Industrial ECO Switch; Single Pair Ethernet; 4 10BASE-T1L ports; 2 100BASE-TX ports)

Product Detail Page	🔗 https://www.wago.com/852-2112
---------------------	---

The product must only be installed and operated in accordance with the operating instructions. Knowledge of the operating instructions is required for proper use. You can find all documents and information on the detailed product page.

1.1 Intended Use

This product is for setting up ETHERNET networks.

The product is an open type device and is designed for installation in an additional enclosure.

- This product is intended for installation in automation technology systems.
- Operation of the products in industrial area is permitted.
- The product is designed for use in dry indoor rooms.
- Operation of the product in other application areas is only permitted when corresponding approvals and labeling are present.

Improper Use

Improper use of the product is not permitted.

Improper use occurs in particular in the following cases:

- Non-observance of the intended use
- Use without protective measures in an environment in which moisture, salt water, salt spray mist, dust, corrosive fumes, gases, direct sunlight or ionizing radiation can occur
- Implementation of a Known Misuse
- Use of the product in areas with special risk that require continuous fault-free operation and in which failure of or operation of the product can result in an imminent risk to life, limb or health or cause serious damage to property or the environment (such as the operation of nuclear power plants, weapons systems, aircraft and motor vehicles)

Known Misuse

Known misuse of the product is not permitted.

Known misuse occurs in particular in the following cases:

- Use of the product in residential, business and commercial areas, as well as small businesses, without prior checking of the information in the data sheet for the products used

Warranty and Liability

The provisions of the latest WAGO General Terms and Conditions of Deliveries and Services (GTC) apply as well as the Software License Terms for Standard Software (SW-License) applicable to software products und software embedded in WAGO hardware products, both available at: 🔗 www.wago.com.

In particular, the warranty is void when:

- The product is improperly used.
- The defect is based on (customer-)specific specifications (hardware and software configurations).
- Modifications of the hardware or software by the user or third parties were made that are not described in this documentation and are at least responsible for the occurrence of the defect.

Individual agreements always take precedence.

Obligations of the installer/operator

Installers and operators bear responsibility for the safety of an installation or a system assembled with the product.

The installer/operator is responsible for the proper installation and the safety of the system. It must comply with the laws, standards, guidelines, local regulations, the state and the rules of technology applicable at the time of installation and must observe the guidelines and instructions described in the operating instructions. The installation requirements of the approvals must also be met.

In the event of non-compliance, operation of product within the scope of the approval is not permitted.

1.2 Typographical Conventions





Number Notation

100	Decimals: Normal notation
0x64	Hexadecimals: C-notation
'100'	Binary: In single quotation marks
'0110.0100'	Nibbles separated by a period

Text Markups

<i>italic</i>	Names of paths or files
bold	Menu items, entry or selection fields, emphasis
Code	Excerpts from program code
>	Selection of a menu point from a menu
"Value"	Value entries
[F5]	Identification of buttons or keys

Links

	Link to a topic in a document
	Link to a separate document
	Link to a website
	Link to an email address
Glossary	Link to a glossary entry

Sequence of Action

- ✓ This symbol identifies a precondition.
- 1. Action step
- 2. Action step
 - ⇒ This symbol identifies an intermediate result.
- ➔ This symbol identifies the result of an action.
- Individual action step

Lists

- Lists, first level
 - Lists, second level

Figures

Figures in this documentation are for better understanding and may differ from the actual product design.

Warning Messages

DANGER

Type and source of hazard

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

- Action step to reduce risk

WARNING

Type and source of hazard

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

- Action step to reduce risk

CAUTION

Type and source of hazard

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

- Action step to reduce risk

! NOTICE**Type and source of malfunction (property damage only)**

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.

- Action step to reduce risk

Information Notices**i Note****Information**

Indicates information, clarifications, recommendations, referrals, etc.

1.3 Legal Information

Intellectual property

The intellectual property of this document belongs to WAGO GmbH & Co. KG. The reproduction and distribution of its content (in whole or in part) is prohibited, unless otherwise provided by statutory provisions, written agreements or this document. In case of doubt, the written consent of WAGO GmbH & Co. KG must be obtained in advance.

Third-party products are always mentioned without any reference to patent rights. WAGO GmbH & Co. KG, or the manufacturer of third-party products, retains all rights regarding patent, utility model or design registration.

Third-party trademarks are referred to in the product documentation. The "®" and "™" symbols are omitted hereinafter. The trademarks are listed in the Appendix: [🔗 Protected Rights \[▶ 28\]](#).

Subject to Change

The instructions, guidelines, standards, etc., in this manual correspond to state of the art at the time the documentation was created and are not subject to updating service. The installer and operator bear sole responsibility to ensure they are complied with in their currently applicable form. WAGO GmbH & Co. KG retains the right to carry out technical changes and improvements of the products and the data, specifications and illustrations of this manual. All claims for change or improvement of products that have already been delivered – excepting change or improvement performed under guarantee agreement – are excluded.

Licenses

The product contains open-source software. The requisite license information is saved in the product. This information is also available under [🔗 www.wago.com](http://www.wago.com).

2 Safety



This section presents hazards that could occur if the product is used. Builders and operators must take all hazards into account when analyzing the risk of their installed systems. Measures to reduce the risk of hazards that are foreseeable from the manufacturer's point of view (i.e., without knowledge of the specific system built) are explained in the respective sections of this documentation (e.g., in "Planning").

Builders and operators must implement explained risk reduction measures and also take their own measures depending on the residual risk.

2.1 General Safety Regulations

- This documentation is part of the product. Therefore, retain the documentation during the entire service life of the product. Pass on the documentation to any subsequent user of the product. In addition, ensure that any supplement to this documentation is included, if necessary.
- The product must only be installed and put into operation by qualified electrical specialists per EN 50110-1/-2 and IEC 60364.
- Changes to switch configurations in the network must always be performed by qualified personnel with sufficient skills.
- Set up permissions management for authorized persons.
 - Physical access may only be made by authorized persons.
 - Digital access may only be made by authorized persons.
- Comply with the laws, standards, guidelines, local regulations and accepted technology standards and practices applicable at the time of installation.

2.2 Electrical Safety

- Make sure the product does not carry any voltage before starting work.

Power Supply

- Connecting impermissible current or frequency values may destroy the product.
- Plan for voltage buffering if the requirement for voltage buffering according to EN 61131-2 is to be met.

Grounding/Protection/Fuses

- When handling the product, please ensure that environmental factors (personnel, work space and packaging) are properly equalized. Do not touch any conducting parts.

Cables

- To minimize interference (e.g., by electromagnetic interference), maintain a spatial separation between control, signal and data lines and the power supply lines.
- Always design the connection cables for the maximum anticipated current load.
- High currents and the inherent heat generated by the product can cause additional heat generation at the clamping point. Plan for a correspondingly higher temperature range for the connecting cables, or reduce inherent heat by selecting larger conductor cross-sections.
- Only one conductor may be connected to each connection point (e.g., CAGE CLAMP® connection).

2.3 Mechanical Safety

- Before startup, please check the product for any damage that may have occurred during shipping. Do not put the product into operation in the event of mechanical damage.
- Do not open the product housing.
- Avoid conductive contamination.

2.4 Thermal Safety

- The surface of the housing heats up during operation. Under special conditions (e.g., in the event of a fault or increased surrounding air temperature), touching the product may cause burns. Allow the product to cool down before touching it.
- If the surface temperature of the product can exceed 40 °C, wear protective gloves and attach protective covers and/or touch-proof protection.
- The temperature inside the additional enclosure must not exceed the ambient temperature permitted for the mounted product.
- Cooling of the product must not be impaired. Ensure air can flow freely and that the minimum clearances from adjacent products/areas are maintained.

2.5 Indirect Safety

- Do not use any contact spray for cleaning.
- Do not use hard objects that could cause scratches for cleaning.
- The product is not resistant to materials with seeping and insulating properties, such as aerosols, silicones or triglycerides (found in some hand creams). If these substances occur in the environment of the product, install the product in an additional housing that is resistant to these substances as well.
- Observe possible different technical specifications for mounting that does not correspond to the nominal mounting position.
- Only use accessories authorized by WAGO.

3 Overview

This device is an industrial ECO switch with two 10/100 Mbit/s RJ45 ETHERNET ports (10/100BASE-TX) and four Single Pair Ethernet ports (10BASE T1L).

The switch enables 10 Mbit/s ETHERNET communication via shielded twisted pair cables with a maximum transmission distance of 1000 m. Automatic transmission rate detection (autonegotiation) of two 10/100 Mbit/s RJ45 ETHERNET devices allows easy plug-and-play operation. The lever-actuated connector makes connecting the SPE cable straightforward and saves time.

Use of Single Pair Ethernet significantly reduces the costs for integrating a 10 Mbit/s ETHERNET connection over long transmission distances. In particular, using existing cables can significantly lower the costs of connecting decentralized ETHERNET-capable sensors to an automation system. Networking remote ETHERNET devices using an SPE media converter (item number 852-1705) and this device represents another use case. This solution can replace DSL modems or fiber optic cables. The compact design with a DIN-rail adapter makes installation in control cabinets easier and offers high thermal, vibration and shock resistance.

4 Properties

4.1 View

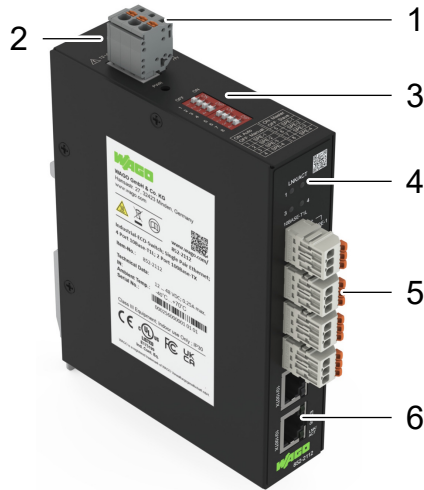


Figure 1: Front View

1	Plug for power consumption	Supply Voltage [> 14]
2	Grounding screw	Functional grounding [> 18]
3	DIP switch	Control Elements [> 15]
4	Indicators	Indicators [> 15]
5	SPE ports 10BASE-T1L	
6	10/100BASE-TX ports	

4.2 Type Plate

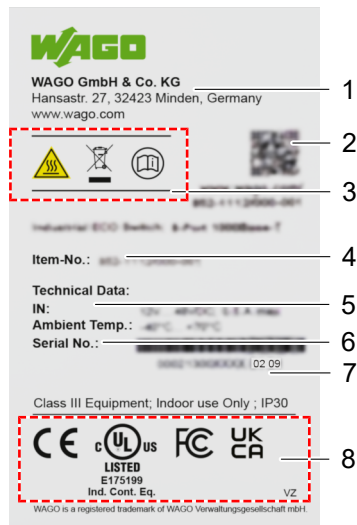










Figure 2: Type Plate (Example)

No.	Name	Description
1		WAGO logo and address
2		QR code with link to product detail page www.wago.com/<item number>
3		Caution: Do not touch hot surfaces!
		Note: Electrical and electronic equipment must not be disposed of with household waste! More information about this topic: Disposal and Recycling [> 24]
		Note: Observe the product documentation!
4	Item No.	Item Number
5	IN:	Indicates the supply voltage Specification of the ambient temperature Technical Data, Approvals, Guidelines and Standards [> 25]
6	Serial No.	Product serial number as a barcode
7	Serial No.	Product serial number in text form: <Serial number> <Firmware version> (left sequence of digits; example: 02) <Hardware version> (right sequence of digits; example: 09)

No.	Name	Description
8		Field for names
		With the CE mark, WAGO declares that the product meets the applicable requirements as set out in Community harmonization legislation per EC Regulation 765/2008, which allows the product to carry this mark.
		Certified safety mark of UL-listed products for the American and Canadian market
		With the FCC marking, WAGO declares conformity with the regulations of the US Federal Communications Commission.
		The UKCA (UK Conformity Assessed) mark declares that the conformity requirements for the UK market are met.

4.3 Connections

4.3.1 Supply Voltage

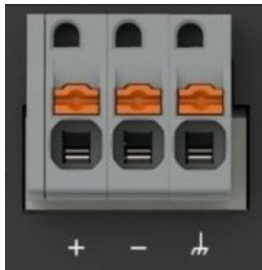


Figure 3: Power Supply Connection

Connection	Description
+	Positive potential
-	Negative potential
⏏	Ground potential (functional ground)

4.3.2 Network Connections



Figure 4: SPE connection

D+	Data signal +
D-	Data signal -
SHD	Shield connection

4.4 Indicators

4.4.1 Status LED of the Supply Voltage



Figure 5: Status LED of the Supply Voltage

PWR	Status LED of the Supply Voltage	Green	Power supply in use
		OFF	Power supply switched off or error

4.4.2 LED Indicators – Network Connections

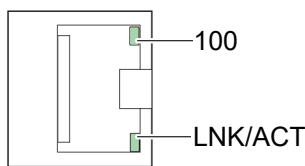


Figure 6: LED Indicators – Network Connections

Name	Color	Status	Description
100	Green	ON	100 Mbit/s connection
		OFF	10 Mbit/s or no connection
LNK/ACT	Green	On	Port is running at 10 or 100 Mbit/s.
		Flickering	Data packet transfer is active.
		Off	There is no connection.

4.4.3 SPE LEDs



Figure 7: Network Connection LED Indicators

LNK/ACT	Green	On	Port is running at 10 Mbit/s.
	Orange	On	Port is running at 10 Mbit/s (poor connection quality).
	Green/orange	Flickering	Data packet transfer is active.
	Green/orange	Off	There is no connection.

4.5 Control Elements

4.5.1 DIP Switch

The media converter supports plug-and-play operation. Manual configuration is required if automatic configuration is not supported, such as when establishing a connection to remote stations from third-party manufacturers.

Changes to the DIP switches are not applied until the media converter is restarted.

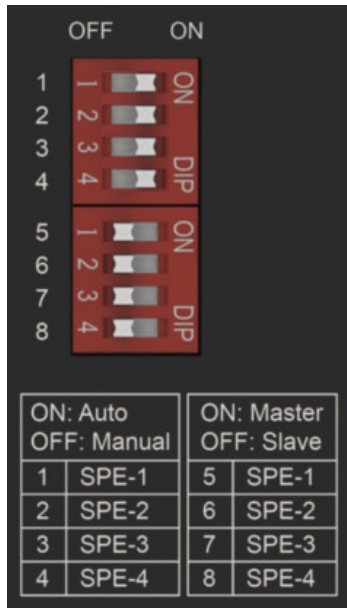


Figure 8: DIP Switch

No.	Name	Status	Description
1 – 4	Auto Mode SPE-1 – SPE-4	ON*	Automatic SPE configuration (master/slave)
		OFF	Manual SPE configuration via DIP switches 5 ... 8
5 – 8	Master/ Slave SPE-1 – SPE-4	ON	Configuration as primary SPE device (master)
		OFF*	Configuration as a secondary SPE device (slave)

* Factory default

5 Planning

5.1 Data Security

Professional planning and design is an important requirement for securing data confidentiality, availability and integrity.

Random Influences

Data transmission and processing can be disrupted by random influences, such as temporary electromagnetic disturbances. Proper setup can significantly reduce the likelihood of corruption or destruction of data.

For additional information see: [🔗 EMC Installation \[▶ 18\]](#).

Deliberate Influences

Use in ETHERNET Areas

ETHERNET products are designed for use in local networks. Please note the following when using ETHERNET products in your system:

- Do not connect control components and control networks to an open network such as the Internet or an office network.
WAGO recommends putting control components and control networks behind a firewall.
- In the control components, close all ports and services not required by your application to minimize the risk of cyber attacks and to enhance cybersecurity.
Only open the ports and services for the duration of the commissioning/configuration.
- Limit physical and electronic access to all automation components to authorized personnel only.
- To reduce the risk of unauthorized access to your system, change the default passwords during initial commissioning.
- To reduce the risk of unauthorized access to your system, regularly change the passwords used.
- To verify that the measures taken meet your security requirements, regularly perform threat analyses.
- To restrict access to and control of individual products and networks, employ a "defense-in-depth" mechanism in your system's security configuration.

Additional document

- [📄 White Paper Cybersecurity in Production Facilities](#)

All the documentation and information is available at: [🔗 www.wago.com](http://www.wago.com).

5.2 Safety Measures at the Installation Location

Additional Enclosure

The product is an open type device. It must only be installed within appropriate enclosures, cabinets or electrical operation rooms that fulfill at least the following requirements:

- Offer adequate protection against direct or indirect contact.
- Offer adequate protection against UV irradiation.

- Restrict access to authorized personnel and may only be opened with tools.
- Ensure the required pollution degree in the vicinity of the system.
- Prevent fire from spreading outside of the enclosure.
- Guarantee mechanical stability.

5.3 Functional grounding

The product must be grounded. The following options are available for this:

- Grounding screw
- CAGE CLAMP® connection

Do not operate the product without a properly installed functional ground.

5.4 Mounting Position

All specifications and handling steps refer to the nominal mounting position. Deviating mounting positions affect, for example:

- Air circulation

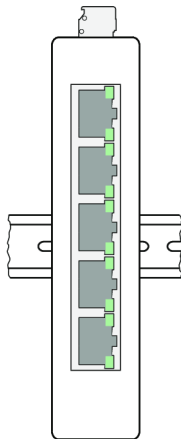


Figure 9: Nominal Mounting Position

5.5 EMC Installation

- **Ground DIN-rails.**
Ground the DIN-rails to divert electromagnetic interference.
- **Use shielded cables for data and signal lines.**
Electromagnetic interference is reduced and signal quality increased. Measurement errors, data transmission faults and interference due to excessive voltage can be prevented!
- **Keep data and signal lines separate from interference sources.**
Route data and signal lines separately from all power supply cables and other sources of high electromagnetic emissions (e.g., frequency converters or drives).
- **Connect the cable shielding with the ground potential.**
Integrated shielding is mandatory to meet technical specifications regarding measurement accuracy. Establish the connection between the cable shielding and ground potential at the inlet of the cabinet or housing. This grounding allows induced interferences to dissipate and be kept away from devices in the cabinet or housing.

- **Improve shielding performance with a large contact area.**
A low-impedance connection between shielding and ground achieves better shielding performance. For this purpose, connect the shielding over a large surface area, e.g., using the WAGO Series 790 Shield Connection System. This is especially recommended for large-scale systems where equalizing or high impulse currents may occur.
- **Continue twisting the data line.**
Continue twisting the wires of the data line as far as possible up to the female connector. Twist the shield and, if necessary, insulate it with shrink tubing and connect it to the female connector.



Figure 10: Data line twisting

6 Transport and Storage

The original packaging offers optimal protection during transport and storage.

- Store the product in suitable packaging, preferably the original packaging.
- Only transport the product in suitable containers/packaging.
- Make sure the product contacts are not contaminated or damaged during packing or unpacking.
- Observe the specified ambient climatic conditions for transport and storage.

Long-Term Storage

- For long-term storage, power must be applied to the product for five minutes at least every two years.

7 Installation and Removal

7.1 Mounting on the DIN-Rail

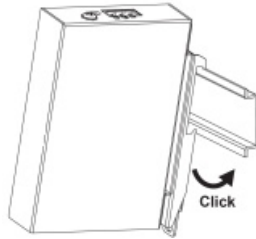


Figure 11: Mounting Product on DIN-Rail

1. Tilt the product slightly.
2. Place the product, with the DIN-rail guide, on the top edge of the DIN-rail.
3. Press the product onto the DIN-rail.
4. Push down until the product audibly snaps into place.
 - ⇒ If the product does not lock into place automatically, pull down the DIN-rail mounting/removal latch with an operating tool while pressing the product onto the bottom fastener.
5. Gently shake the product to ensure that it is correctly locked into place.

7.2 Removal from the DIN-Rail

CAUTION

Hot Surface!

The surface of the housing heats up during operation. Under special conditions (e.g., in the event of a fault or increased surrounding air temperature), touching the product may cause burns.

- Allow the product to cool down before touching it!

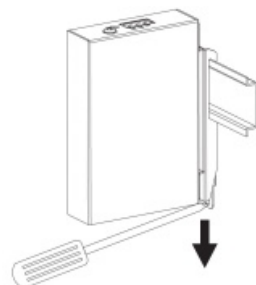


Figure 12: Removing the Product from the DIN-Rail

1. To remove the product, pull down the DIN-rail removal latch. Use an operating tool for this purpose.
 - ⇒ The product is now unlocked.
2. Tilt the product forward and unhook it from the DIN-rail.

8 Connect

8.1 CAGE CLAMP® Connection with Push-Button

Solid conductors, as well as stranded and fine-stranded conductors with ferrules, are terminated by pushing them into Push-in CAGE CLAMP® Connectors. For all conductor types, an operating tool must be used to open the Push-in CAGE CLAMP®. Only one conductor may be connected to each clamping unit.

To connect a conductor, proceed as follows:

- ✓ You need an operating tool.
 - 1. Use the operating tool to press and hold the push-button next to the connection in question in order to open the Push-in CAGE CLAMP®.
 - 2. Insert the conductor into the corresponding connection opening (round housing opening).
 - 3. Release the push-button to close the Push-in CAGE CLAMP®.
- ➔ The conductor is now securely clamped.

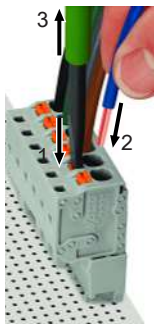


Figure 13: Connecting Conductor to Push-in CAGE CLAMP®

Removing Conductor

- ✓ You need an operating tool.
 - 1. Use the operating tool to press and hold the push-button next to the connection in question in order to open the Push-in CAGE CLAMP®.
 - 2. Remove the conductor.
 - 3. Release the push-button to close the Push-in CAGE CLAMP®.
- ➔ The conductor is now detached.

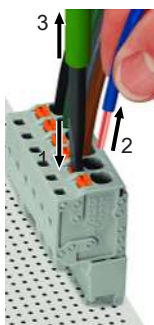


Figure 14: Removing Conductor from Push-in CAGE CLAMP®

8.2 CAGE CLAMP® Connection with Lever

Solid conductors, as well as stranded and fine-stranded conductors with ferrules, can be terminated by pushing them into Push-in CAGE CLAMP® Connectors. For all other conductor types, the Push-in CAGE CLAMP® must be opened with the lever. Only one conductor may be connected to each clamping unit.

1. Raise the lever of the connection to open the Push-in CAGE CLAMP®.
 2. Insert the conductor into the corresponding connection opening (round housing opening).
 3. Lower the lever to close the Push-in CAGE CLAMP®.
- ➔ The conductor is now securely clamped.

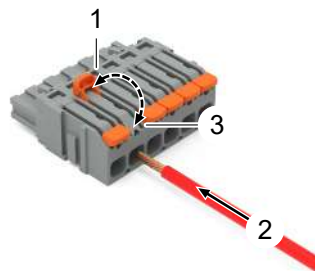


Figure 15: Connecting Conductors to Push-in CAGE CLAMP®

Removing the Conductor

1. Raise the lever of the connection to open the Push-in CAGE CLAMP®.
 2. Remove the conductor.
 3. Lower the lever to close the Push-in CAGE CLAMP®.
- ➔ The conductor is now detached.

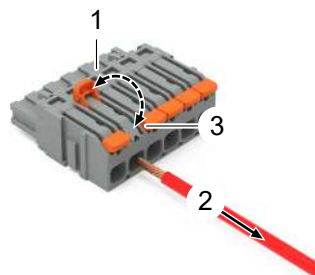


Figure 16: Removing a Conductor from a Push-in CAGE CLAMP®

9 Decommissioning

9.1 Disposal and Recycling



WEEE Mark

Electrical and electronic equipment may not be disposed of with household waste. This also applies to products without this mark.

Electrical and electronic equipment contain materials and substances that can be harmful to the environment and health. Electrical and electronic equipment must be disposed of properly after use. Environmentally friendly disposal benefits health, protects the environment from harmful substances in electrical and electronic equipment and enables sustainable and efficient use of resources.

- Observe the national and local regulations for the disposal of electrical and electronic equipment, lithium-ion batteries, lead–acid batteries and packaging.
- Clear any data stored on electrical and electronic equipment.
- Remove lithium-ion batteries, lead–acid batteries or memory cards that are added to the electrical and electronic equipment.
- Wear appropriate personal protective equipment when removing the lithium-ion batteries/lead–acid batteries.
- Dispose of the removed lithium-ion batteries/lead–acid batteries according to your local waste regulations (e. g. collection boxes at the retail or local collection points).
- Have electrical and electronic equipment sent to a local collection point.
- Dispose of all types of packaging to ensure a high level of recovery, reuse and recycling.
- Transport packages from the B2B area can be taken back free of charge via a return system in accordance with the Packaging Act. Please contact our service provider Interseroh directly. The corresponding certificate can be found at: [↗ corporate-certificates](#).
- Throughout Europe, Directives 2006/66/EC, 94/62/EC and 2012/19/EU (WEEE) apply. National directives and laws may differ.

10 Appendix


10.1 Technical Data, Approvals, Guidelines and Standards

Note

Subject to changes!

Please also observe the further product documentation! You can generate the current datasheet at any time at: www.wago.com /<item number>.

See also

 Datenblatt_852-2112 [▶ 26]

Data Sheet | Item Number: 852-2112

Industrial-ECO-Switch; Single Pair Ethernet; 4 Port 10Base-T1L; 2 Port 10/100Base-TX

<https://www.wago.com/852-2112>



This device is an industrial eco switch with two 10/100 Mbps RJ-45 ETHERNET ports (10/100BASE-TX) and four Single Pair Ethernet ports (10BASE-T1L). The switch enables ETHERNET communication at a bandwidth of 10 Mbit/s using shielded twisted-pair cabling over a maximum transmission distance of 1,000 m (approx. 3,280 ft). The automatic transmission rate detection (auto-negotiation) of the connected ETHERNET device enables simple plug-and-play operation. Connecting the SPE cable to the female connector with lever actuation is straightforward and time-efficient. Using Single Pair Ethernet significantly reduces the cost of integrating an Ethernet connection over long transmission distances. In particular, the use of existing cabling can significantly reduce the cost of connecting decentralized, Ethernet-capable sensors to an automation system. Another application is the networking of remote Ethernet devices using an SPE media converter (852-1705) and the 852-2112. This solution enables the substitution of DSL modems or fiber optic connections. Its compact design with a DIN-rail adapter makes installation in control cabinets easier and provides high heat, vibration and shock resistance.

Technical data

Communication standards	IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3x Flow Control IEEE 802.3 Nway autonegotiation IEEE 802.3cg 10BASE-T1L (Single Pair Ethernet)
Configuration options	DIP switch for configuring the Single Pair Ethernet port
MAC table (size)	1024 addresses
Jumbo frame size	1536 bytes
Supply voltage	12 ... 48 VDC
Power consumption (max.)	5 W
Transmission rate	10/100BASE-TX: 10/100 Mbit/s; 10BASE-T1L: 10 Mbit/s
Transmission medium (communication/fieldbus)	10/100BASE-TX: Copper cable, Cat 5 or better, 100 m maximum cable length; 10BASE-T1L: SPE (10BASE-T1L) compatible cable, 1000 m maximum cable length

Connection Data

Connection technology: communication/fieldbus	10/100BASE-TX: 2 x RJ-45; 10BASE-T1L: 4 x Built-in male connector: 231-433/001-000; included female connector (MCS Connectors): 2231-1103/327-000
Connection technology: supply	1 x Built-in male connector: 231-433/001-000; included female connector (MCS Connectors): 231-103/026-000

Physical data

Width	31 mm / 1.220 inches
Height	136 mm / 5.354 inches
Depth from upper-edge of DIN-rail	109 mm / 4.291 inches

Mechanical data

Weight	476 g
--------	-------

Environmental requirements

Ambient temperature (operation)	-40 ... +70 °C
Ambient temperature (storage)	-40 ... +80 °C
Protection type	IP30
Relative humidity (without condensation)	95 %
Mounting type	DIN-35 rail
Vibration resistance	Per IEC 60068-2-6
Shock resistance	per IEC 60068-2-27
EMC immunity to interference	Per EN IEC 61000-6-2
EMC emission of interference	Per EN IEC 61000-6-4
Fire load	0 MJ

Commercial data

PU (SPU)	1 pcs
Packaging type	Box
Country of origin	TW
GTIN	4066966842494
Customs tariff number	85176200000

Environmental Product Compliance

RoHS Compliance Status	Compliant, No Exemption
------------------------	-------------------------

Approvals / Certificates

General approvals



Approval	Standard	Certificate Name
UL Underwriters Laboratories Inc. (ORDINARY LOCATIONS)	UL 61010-2-201	E175199

Declarations of conformity and manufacturer's declarations

Approval	Standard	Certificate Name
EU-Declaration of Conformity WAGO GmbH & Co. KG	-	-
UK-Declaration of Conformity WAGO GmbH & Co. KG	-	-

10.2 Protected Rights

- Adobe® and Acrobat® are registered trademarks of Adobe Systems Inc.
- Android™ is a trademark of Google LLC.
- Apple, the Apple logo, iPhone, iPad and iPod touch are registered trademarks of Apple Inc. registered in the USA and other countries. "App Store" is a service mark of Apple Inc.
- AS-Interface® is a registered trademark of the AS-International Association e.V.
- BACnet® is a registered trademark of the American Society of Heating, Refrigerating and Air Conditioning Engineers, Inc. (ASHRAE).
- *Bluetooth*® is a registered trademark of Bluetooth SIG, Inc.
- CiA® and CANopen® are registered trademarks of CAN in AUTOMATION – International Users and manufacturers Group e.V.
- CODESYS is a registered trademark of CODESYS Development GmbH.
- DeviceNet® is a registered trademark of the Open DeviceNet Vendor Association, Inc (ODVA).
- DALI is a registered trademark of the Digital Illumination Interface Alliance (DiiA).
- Docker® and the Docker® logo are trademarks or registered trademarks of Docker, Inc. in the USA and/or other countries. Docker, Inc. and other parties may also have trademark rights to other terms used herein.
- EtherCAT® is a registered trademark and patented technology licensed by Beckhoff Automation GmbH, Germany.
- ETHERNET/IP™ is a registered trademark of the Open DeviceNet Vendor Association, Inc (ODVA).
- EnOcean® is a registered trademark of EnOcean GmbH.
- **flex**ROOM® is a registered trademark of WAGO Verwaltungsgesellschaft mbH.
- Google Play™ is a registered trademark of Google Inc.
- IO-Link is a registered trademark of PROFIBUS Nutzerorganisation e.V.
- KNX® is a registered trademark of the KNX Association cvba.
- Linux® is a registered trademark of Linus Torvalds.
- LON® is a registered trademark of the Echelon Corporation.
- Modbus® is a registered trademark of Schneider Electric, licensed for Modbus Organization, Inc.
- OPC UA is a registered trademark of the OPC Foundation.
- PROFIBUS® is a registered trademark of the PROFIBUS Nutzerorganisation e.V. (PNO).
- PROFINET® is a registered trademark of the PROFIBUS Nutzerorganisation e.V. (PNO).
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Subversion® is a trademark of the Apache Software Foundation.
- Windows® is a registered trademark of Microsoft Corporation.

List of Tables

List of Figures

Figure 1	Front View.....	12
Figure 2	Type Plate (Example)	13
Figure 3	Power Supply Connection	14
Figure 4	SPE connection	14
Figure 5	Status LED of the Supply Voltage	15
Figure 6	LED Indicators – Network Connections	15
Figure 7	Network Connection LED Indicators.....	15
Figure 8	DIP Switch.....	16
Figure 9	Nominal Mounting Position	18
Figure 10	Data line twisting.....	19
Figure 11	Mounting Product on DIN-Rail.....	21
Figure 12	Removing the Product from the DIN-Rail	21
Figure 13	Connecting Conductor to Push-in CAGE CLAMP®	22
Figure 14	Removing Conductor from Push-in CAGE CLAMP®	22
Figure 15	Connecting Conductors to Push-in CAGE CLAMP®	23
Figure 16	Removing a Conductor from a Push-in CAGE CLAMP®	23

WAGO GmbH & Co. KG

Postfach 2880 · D - 32385 Minden
Hansastraße 27 · D - 32423 Minden

✉ info@wago.com
🌐 www.wago.com

Headquarters	+49 571/887 – 0
Sales	+49 (0) 571/887 – 44 222
Order Service	+49 (0) 571/887 – 44 333

WAGO is a registered trademark of WAGO Verwaltungsgesellschaft mbH.
Copyright – WAGO GmbH & Co. KG – All rights reserved. The content and structure of the WAGO websites, catalogs, videos and other WAGO media are subject to copyright. Distribution or modification of the contents of these pages and videos is prohibited. Furthermore, the content may neither be copied nor made available to third parties for commercial purposes. Also subject to copyright are the images and videos that were made available to WAGO GmbH & Co. KG by third parties.